

Since 1968


**COMMAX**  
SmartHome & Security

Thank you for choosing COMMAX.

Please read this manual carefully before you use the product.

# User Manual

Color video door phone CDV-72UM

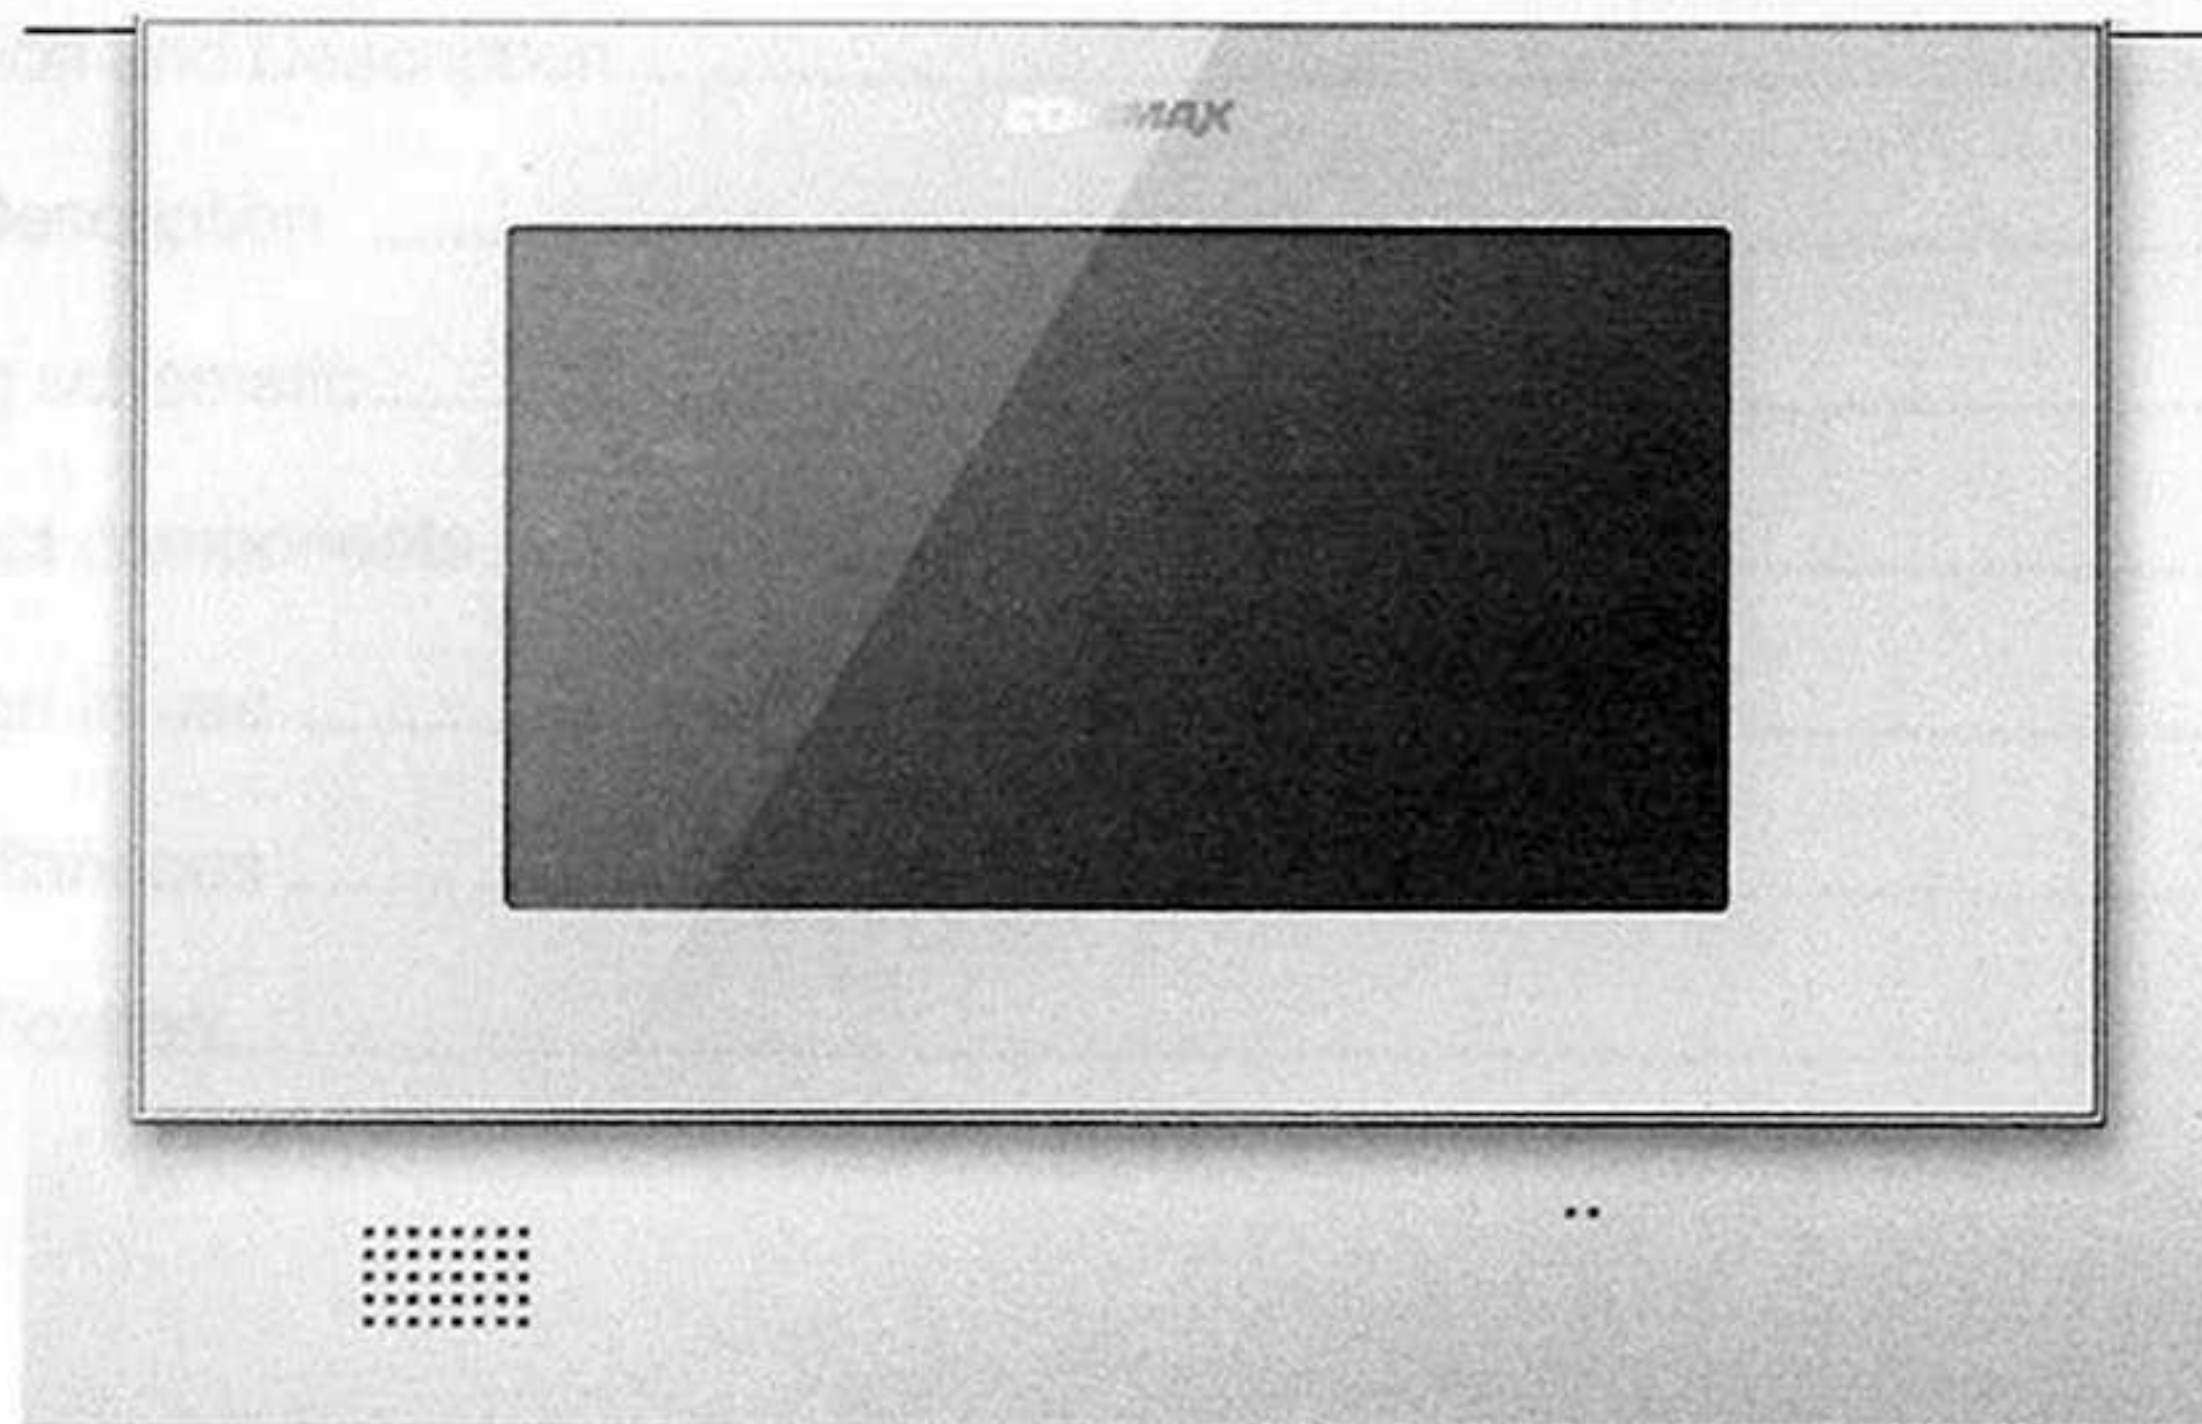

[www.commax.com](http://www.commax.com)

**COMMAX Co.,Ltd.**



- Thank you for purchasing COMMAX products.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.

## Greetings










- Thank you for choosing COMMAX.
- Please read this manual carefully before you use the product.

## Table of contents











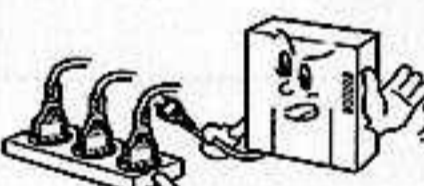




 

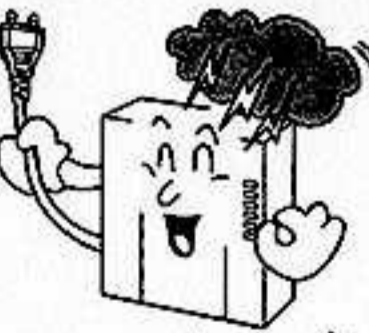
 

 
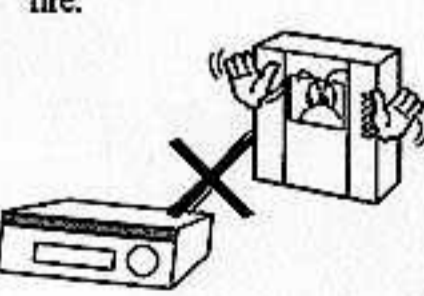



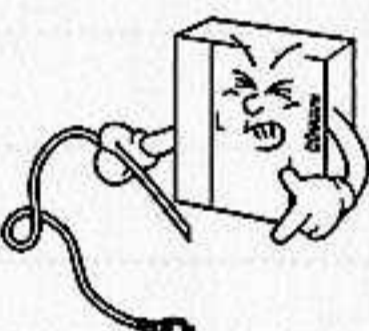

Greetings .....	1
Contents table .....	1
1. Warnings and caution .....	2
2. Part Names .....	4
3. Function and Description .....	5
4. GUI Description .....	10
5. Wiring schematic.....	29
6. Product components .....	31
7. Caution in use .....	32
8. Miscellaneous .....	32
9. Specification.....	32

# 1. Warnings and caution



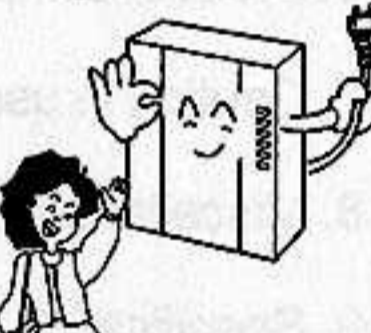

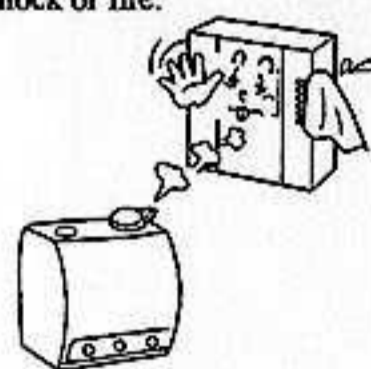

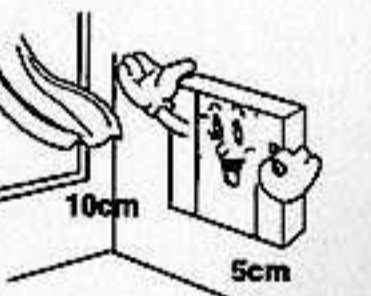 






 





 




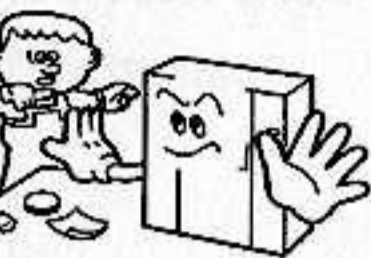


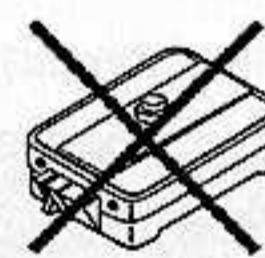


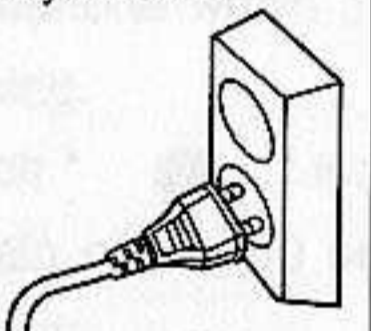

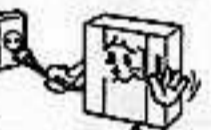
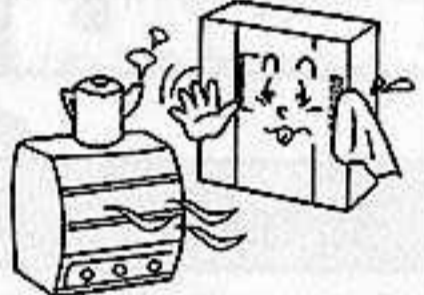

 
 
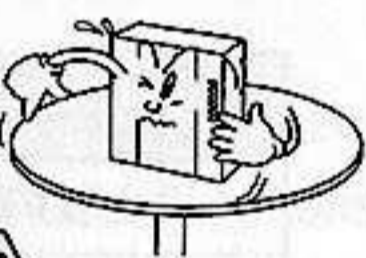



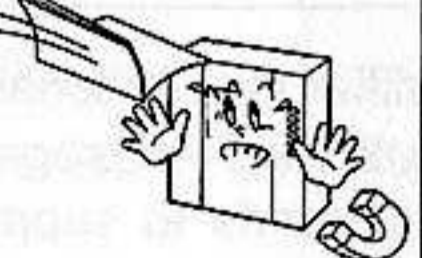



Please follow the things described below in order to prevent any danger or property damage.

 <p><b>Warning</b></p> <p>It may cause a serious damage or injury if violated.</p>	<p> Prohibition.</p> <p> No disassembly</p> <p> No touch</p> <p> Must follow strictly.</p> <p> Shows plugging out the power cord without an exception</p> <p> Shows the warning and caution for an electric shock.</p> <p> Shows the warning and caution for a fire.</p>
 <p><b>Caution</b></p> <p>It may cause a minor damage or injury if violated.</p>	


## Warning

<p>Please don't use several products at the same time on one power socket.</p> <ul style="list-style-type: none"> <li>It may cause a fire due to an abnormal overheating.</li> </ul>  <p> </p>	<p>Please don't bend the power cable excessively or it may cause an electric shock.</p> <ul style="list-style-type: none"> <li>fire when using a damaged power cable.</li> </ul>  <p>  </p>	<p>Please don't handle the power cable with a wet hand.</p> <ul style="list-style-type: none"> <li>It may cause an electric shock.</li> </ul>  <p> </p>	<p>Please plug out the power cable from the socket when not using it for a long period of time.</p> <ul style="list-style-type: none"> <li>It may shorten the product lifespan or cause a fire.</li> </ul>  <p> </p>
<p>Please don't install the product in the place where there is much oil, smoke or humidity.</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire.</li> </ul>  <p>  </p>	<p>Please don't install the product with the lightning and thunder.</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire.</li> </ul>  <p>  </p>	<p>Please don't use and connect this product with other products with different rated voltage.</p> <ul style="list-style-type: none"> <li>It may cause a disorder or fire.</li> </ul>  <p> </p>	<p>When installing the product that generates heat, please install the product away from the wall (10cm) for the ventilation.</p> <ul style="list-style-type: none"> <li>It may cause a fire due to the increased internal temperature.</li> </ul>  <p> </p>

### Power & Installation

<h3>Cleaning &amp; Use</h3>	<p>Please don't disassemble, repair or rebuild this product arbitrarily (please contact the service center if a repair is needed).</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire.</li> </ul>  <p>   </p>	<p>If an abnormal sound, burning smell or smoke is coming out of the product, please plug out the power cable and contact a service center.</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire.</li> </ul>  <p> </p>	<p>Please don't insert any metallic or burnable materials into the ventilation hole.</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire.</li> </ul>  <p>  </p>	<p>Please use only the designated batteries for the products of using DC power.</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire.</li> </ul>  <p></p>
<h3>Power &amp; Installation</h3>	<p>Please plug the power cable firmly into the inner end</p> <ul style="list-style-type: none"> <li>It may cause a fire.</li> </ul>  <p> </p>	<p>Please hold the plug tightly when unplugging the power cable (a part of the copper wire may be disconnected if the grabbing is only made on the cord when pulling out the cable).</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire</li> </ul>  <p>  </p>	<p>When connecting the power cables after cutting the cable, please install the product with power off</p> <ul style="list-style-type: none"> <li>It may cause an electric shock or fire</li> </ul>  <p>  </p>	<p>When installing the product, please fix it firmly while using the wall-mounting unit and screws.</p> <ul style="list-style-type: none"> <li>It may cause an injury from the falling object.</li> </ul>  <p></p>
<h3>Power &amp; Installation</h3>	<p>Please be careful when using an AC circuit breaker since there is a possibility of an electric shock.</p>  <p> </p>	<p>Please check the use voltage and current for the DC-only products and use the appropriate rectifier.</p> <ul style="list-style-type: none"> <li>It may cause a fire.</li> </ul>  <p> </p>	<p>Please avoid direct rays of the sun or heating devices at a time of installation.</p> <ul style="list-style-type: none"> <li>It may cause a fire.</li> </ul>  <p>  </p>	<p>Please don't install the product on an unstable place or small support board.</p> <ul style="list-style-type: none"> <li>It may cause an injury if it falls down while in use.</li> </ul>  <p></p>
<h3>Cleaning &amp; Use</h3>	<p>When cleaning the product, please rub it with a soft and dry cloth after plugging out the power cable. (Please don't use any chemical products such as wax, benzene, alcohol or cleanser.)</p>  <p></p>	<p>Please don't drop the product on the ground and don't apply a shock.</p> <ul style="list-style-type: none"> <li>It may cause a failure.</li> </ul>  <p></p>	<p>Please use the designated connection cable within the maximum calling distance designated for the product</p> <ul style="list-style-type: none"> <li>It may reduce the product performance.</li> </ul>  <p></p>	

## 2. Part Names

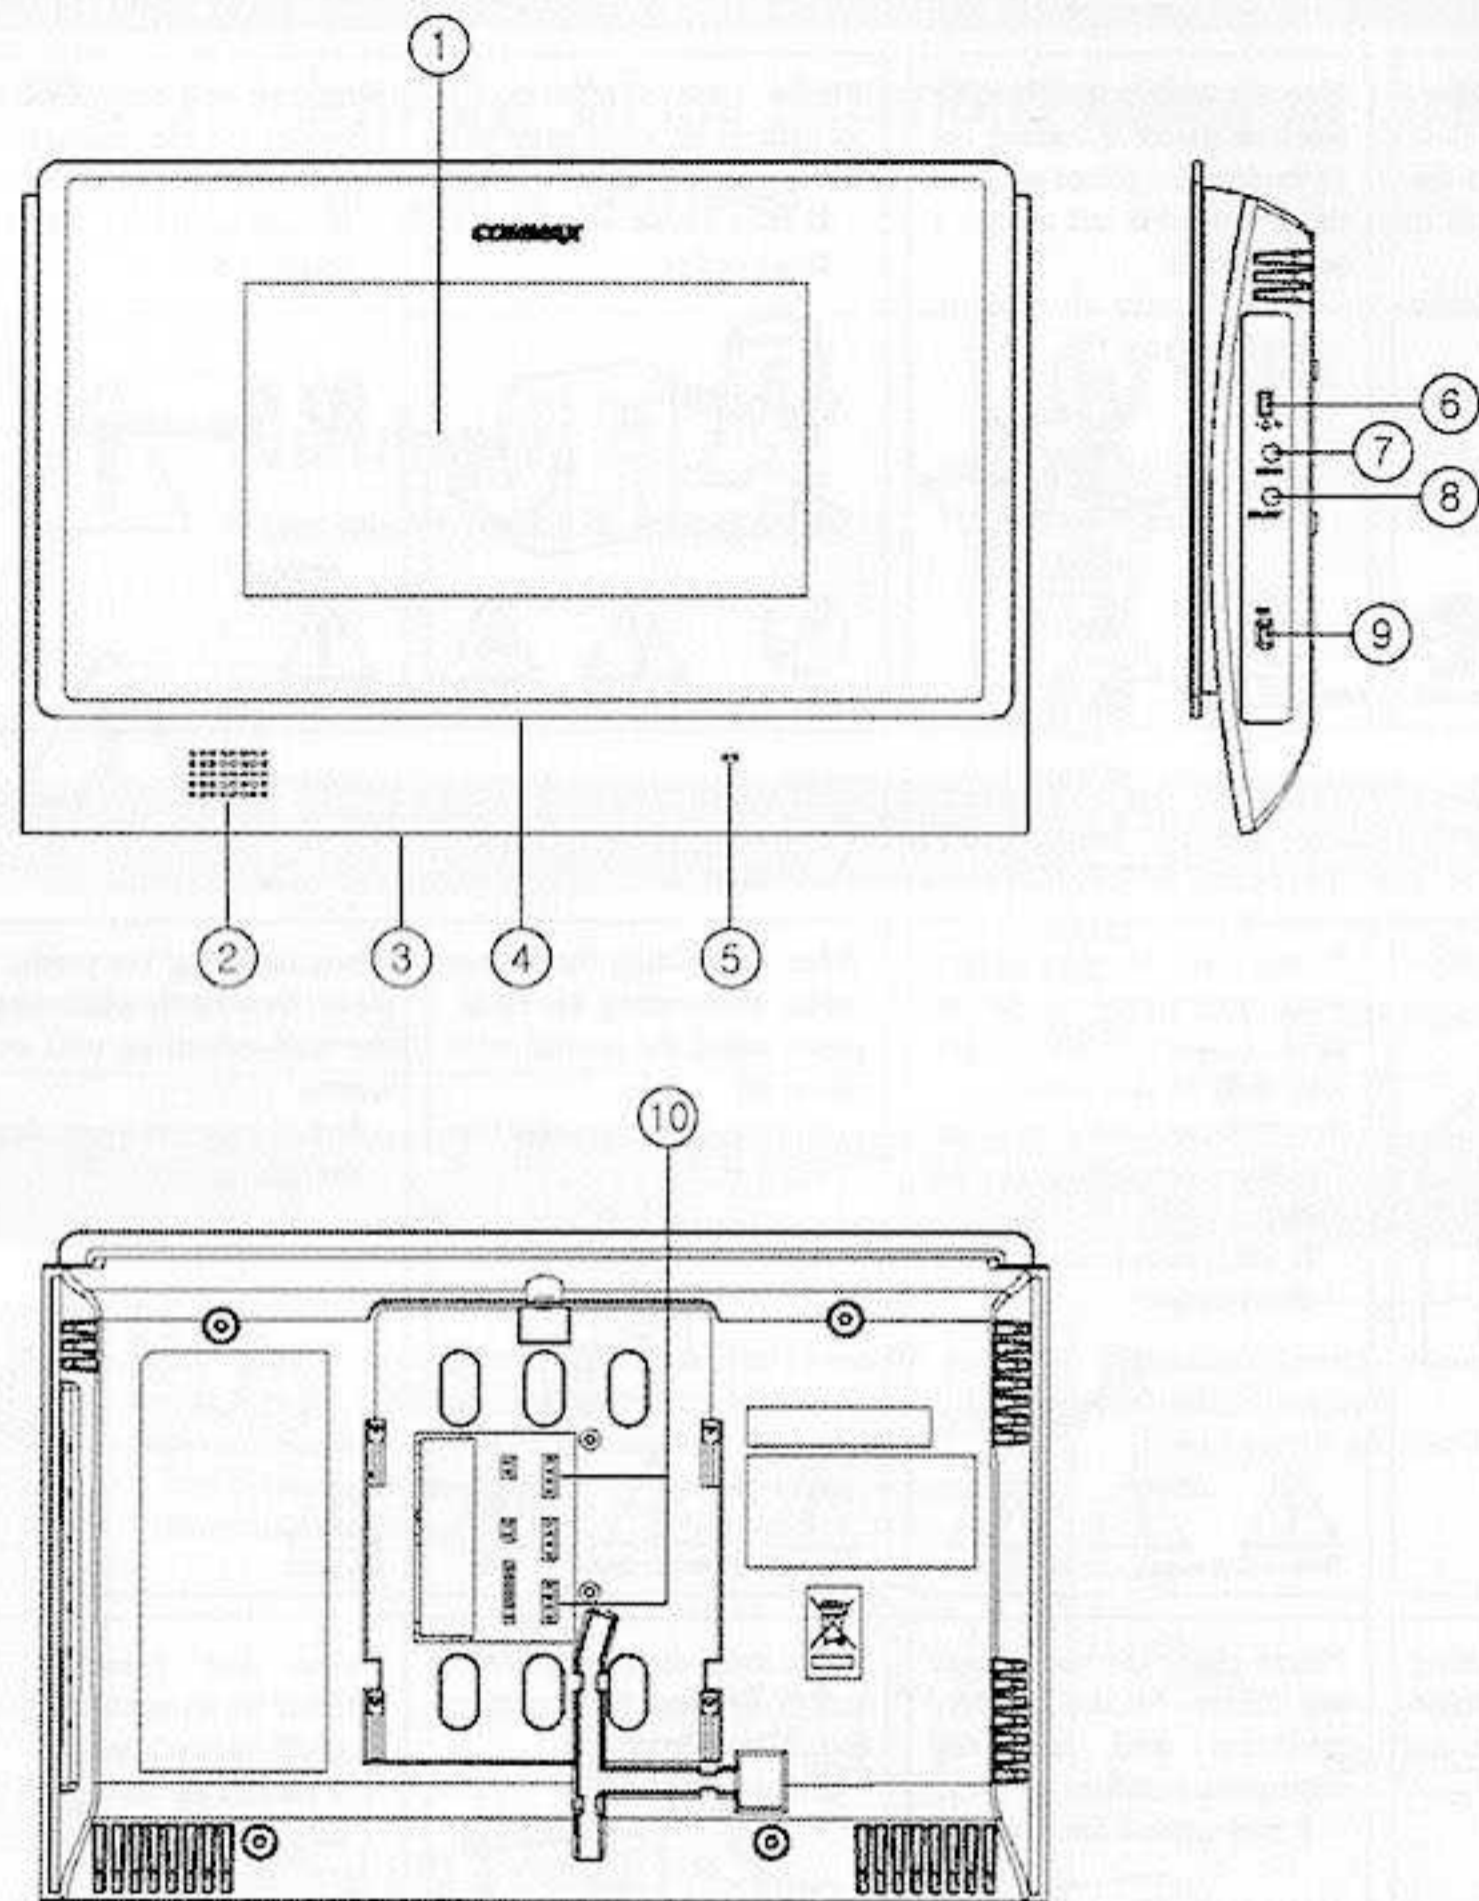

No.	Description	No.	Description
1	LCD Touch Screen	6	Volume control
2	Speaker	7	Talk button
3	SD Card Slot	8	Door release button
4	Power lamp	9	Power switch
5	Microphone	10	Connecting terminal

- This videophone product provides different functionality for connecting the second door camera. At the time of booting, the built-in program checks the connectivity of the second door camera and commands to supply the power to the second camera.
- Therefore, in case of connecting the second camera, the connection must be completed before the power is turned on.
- This product provides a full touch feature.  
All functions are operated by touch of icons displayed on screen.

## 3. Function and Description

### Stand-by mode

- As power is turned on by power switch, the blue LED located at the bottom of the front panel is turned on and the booting logo is displayed. After a few seconds, you will hear the beep tone and the videophone is now in standby mode.

### Main menu

#### (1) Page and Call function



- As the paging button on a door camera is pressed, the paging tone ("Sol-Mi-Do") rings at the connected videophone and sub-interphone (if connected to the videophone) for two times consecutively. The door camera view is displayed on the videophone within 3 seconds and the blue LED at the bottom of the screen starts blinking.
- Touch "☎" icon to talk to the visitor. The LCD screen of the videophone will remain on for 30 seconds if not answered. If answered, it will remain on for 60 seconds.
- The "☎" icon is displayed on the screen. To answer a call from door camera, simply touch the "☎" icon.
- To page an interphone connected to the videophone from Home screen, simply touch the "☎" icon. The "☎" icon is displayed on the screen at the bottom right of the screen and touch the icon again to page the interphone. To answer a call, paged from the videophone, simply pick up the handset. To end a call from the videophone, touch the interphone icon "☎".
- To call the videophone from the interphone, simply pick up the handset and keep pressing the paging button. If the icon is released, it stops paging the videophone. **Please keep pressing the button until answered from the videophone.** The paging tone rings at the videophone and to answer the call, paged from the interphone, touch "☎" icon to answer the call. The interphone icon on the screen remains for 10 seconds after the call is ended and the videophone enters standby mode.

#### (2) Ringtone volume control (low → high)


- Ringtone volume is controlled by the switch located on the right side of the panel.

#### (3) Call function


- Touch a camera icon to answer the call. The blue LED at the bottom of the panel blinks. If the handset of the interphone connected to the videophone is picked up during the call between the videophone and the door camera, 3-way call is enabled.
- Talk time is limited to 60 seconds and will automatically be ended.

- If the "  " icon is touched during a call from a videophone to a door camera, the handset of the interphone can be picked up to enable 3-way call.
  - If a visitor presses a paging button from the door camera 2 during a call between the videophone and the door camera 1, the first call from the door camera 1 is ended and the connection to the door camera 2 is made automatically.
  - If a visitor pages the videophone from a door camera during a call between the videophone and the sub-interphone in progress, the door camera view is displayed on the videophone and the 3-way call is enabled.
- ※ All calls are ended if the "  " icon is touched during the call.


#### (4) Recording video

- When paged from a door camera or monitoring the door camera view from the videophone, touch the "  " icon to record the video.
- In case of recording still images, it is taken every time the icon is touched.
- While recording a video, the recording continues.
- This function is enabled regardless of the settings of "Automatic Saving/Manual Saving" in the settings menu.
- This function is enabled even during a call between the videophone and the door camera.
- The video and still images are recorded on to SD Card memory and without the SD Card memory inserted in the videophone, video and still images cannot be recorded.


#### (5) Monitoring

- By touching the camera icon from the videophone, the camera view is monitored from the videophone screen.
- If you continue monitoring other cameras connected to the videophone, please touch the icon located on the upper left corner of the display. The cameras in the following order will be displayed on the screen (CAM1 → CCTV1 → CAM2 → CCTV2 → ... → Continue in loop)
- To end monitoring, simply touch the exit icon "  ".

#### (6) Door release

- To open the door, simply touch the "  " icon on the screen.

#### (7) Still image recording function

- ※ This function is activated when the settings is set to record still images.
- If set as "Auto Saving", the still image is recorded every time paged from a door camera.
- During monitoring or talking with the door camera, touch the "  " icon to record the still image

#### (8) Video recording function

- This function is activated when the settings is set to record video.

If set as "Automatic Saving", the video is recorded every time paged from a door camera.

When paged, recorded for 30 seconds and when talking, recorded for 60 seconds.

The maximum recorded time is 90 seconds (30 seconds when paged + 60 seconds when answered)

※ **Caution 1 : Do not remove SD Card while recording still images or video. It may damage the SD Card and data can be lost.**

※ **Caution 2 : This product records only on to SD Card and without the SD Card inserted or with damaged SD Card, still images and video cannot be recorded.**


## Managing Folder and File

→ Root folders created

→ .\MOVIE

→ .\PICTURE

If below icon is displayed on the screen, please backup the data.

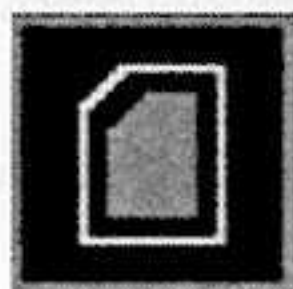

⇒ Recorded file name and format

Still image	00001MC1.jpg		
	00002NC2.jpg		
	00003MD1.jpg		
	00004ND1.jpg		
Video	00001MC1.asf		
	00002NC2.asf		
	00003MD1.asf		
	00004ND2.asf		
Description	File Type	Video Type	File Type
	xxxxMxx.jpg / .asf → Motion Image or Video	C1,C2: Door 1,2 (Still Image) D1,D2: CCTV 1,2 (Video)	Still Image → (*.jpg) Video → (*.asf)
	xxxxNxx.jpg / .asf → Normal Image or Video	C1,C2 : Door 1,2(Still Image) D1,D24 : CCTV1,2(Video)	
Note	<p>⇒ SD Card requires a minimum space availability for system operation. Minimum storage space: Min. 300MB.</p> <p>⇒ Still image recorded up to 256 cuts. As it becomes full (256 cuts), overwrites from the oldest data.</p> <p>⇒ Video is recorded up to maximum space availability of the SD Card. If no space available on the SD Card,</p> <div style="display: flex; align-items: flex-start;"> <p>Backup icon is displayed on the screen. As the above icon is displayed, it starts to overwrite from the oldest data. At this time, several files can be deleted to keep minimum space availability for system file. It is strongly recommended to backup important video data. Depending on the SD Card memory, number of files to be recorded may Vary. Please refer to below table. Even if the CD Card memory has space available, it starts to overwrite as the number of file limit exceeds.</p> </div> <p>⇒ a single file or all files may be selected to delete.</p>		

⇒ Limit of files for various SD Card size

Size	SDHC Card		
	4 GByte	8 GByte	16 GByte
Still Images	256	256	256
Limit of Video Files (60 Second long)	max 380	max 750	max 1,500
Recording time	Appx. 380 min	Appx. 750 min	Appx. 1,500 min

## 4. GUI Description


### (1) As Powered On

As powered on, the "COMMAX" booting logo is displayed and the system checks SD Card memory availability. The SD Card icon "\_\_\_" is displayed and the message, "SD CARD CHECKING..." is displayed on the screen. As the system initializing is completed, a beep sounds and the screen becomes off to enter standby mode.










### (2) Main menu

In standby mode (screen is off), touch the screen to turn on the screen.

To go back to standby mode, touch the power icon (  ) located on the upper right corner of the screen.



### Icons and description

Icon	Description	Function
	Checking Visitor	Check recorded video or still images of visitors.
	Menu Settings	Setup functions.
	Camera_1	Call or monitor the Door Camera_1.
	Camera_2	Call or monitor the Door Camera_2.
	CCTV_1	Monitor CCTV Camera_1 view.
	CCTV_2	Monitor CCTV Camera_2 view.
	Interphone	To call the sub-interphone.





### (3) Checking Visitor

Select video or still image.



## 4. GUI Description




### Icons and description

Icon	Description	Function
	Video	Check visitors of recorded video.
	Still Image	Check visitors of still images.
	Home	Return to main menu.
	Prev	Move to previous menu.


Recorded videos and still images are listed in 4 split screen in chronological order with time.



### Icons and description





Icon	Description	Function
	Prev	Move to previous menu or screen.
	UP	Move to previous page.
	DOWN	Move to next page.

### (4) Check video


 
As a single video is selected from the 4 split screen, the screen turns to full screen to playback the selected video. To delete the video, touch  icon.



### Icons and description


Icon	Description	Function
	Prev	Move to previous menu or screen.
	UP	Move to previous page.
	DOWN	Move to next page.
	Delete	Delete the selected video.

### [Display I-CON Description]

-  : In the usual way (if you have auto or manual recording of one / call monitoring) Displayed when the video was recorded I-CON.
-  : When the video was recorded by a motion detection is displayed I-CON. When playing audio will not play.









### (5) Delete recorded video

Touch  icon to delete the video. Touch "Yes" to delete.




#### Icons and description





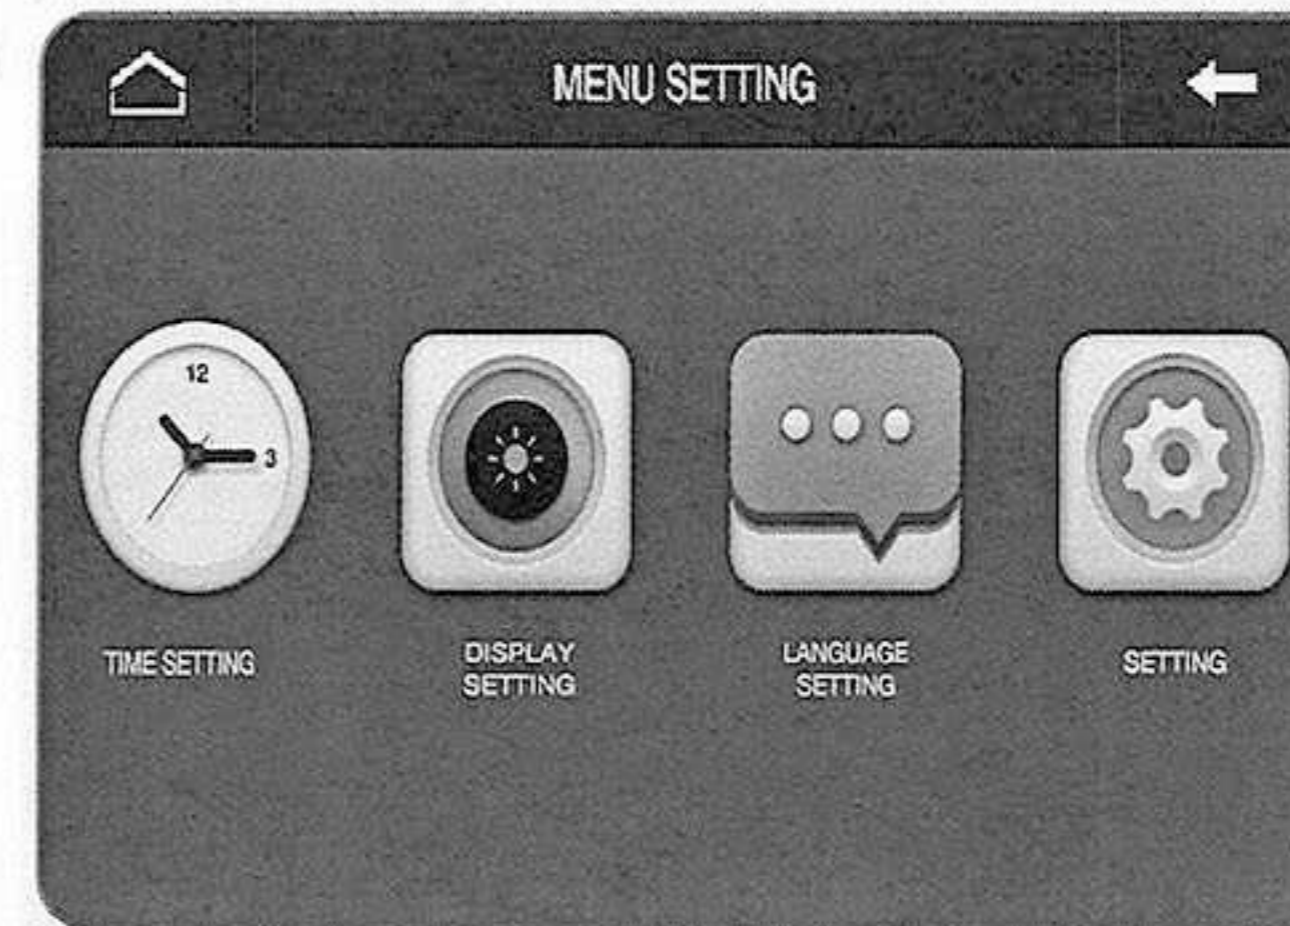

Icon	Description	Function
	Prev	Move to previous menu or screen.
	UP	Move to previous page.
	DOWN	Move to next page.
	Delete	Delete the selected video.
	Yes	Command to delete.
	No	Cancel delete.

### (6) Settings


Time, display, and language setup are enabled in Settings menu.




#### Icons and description





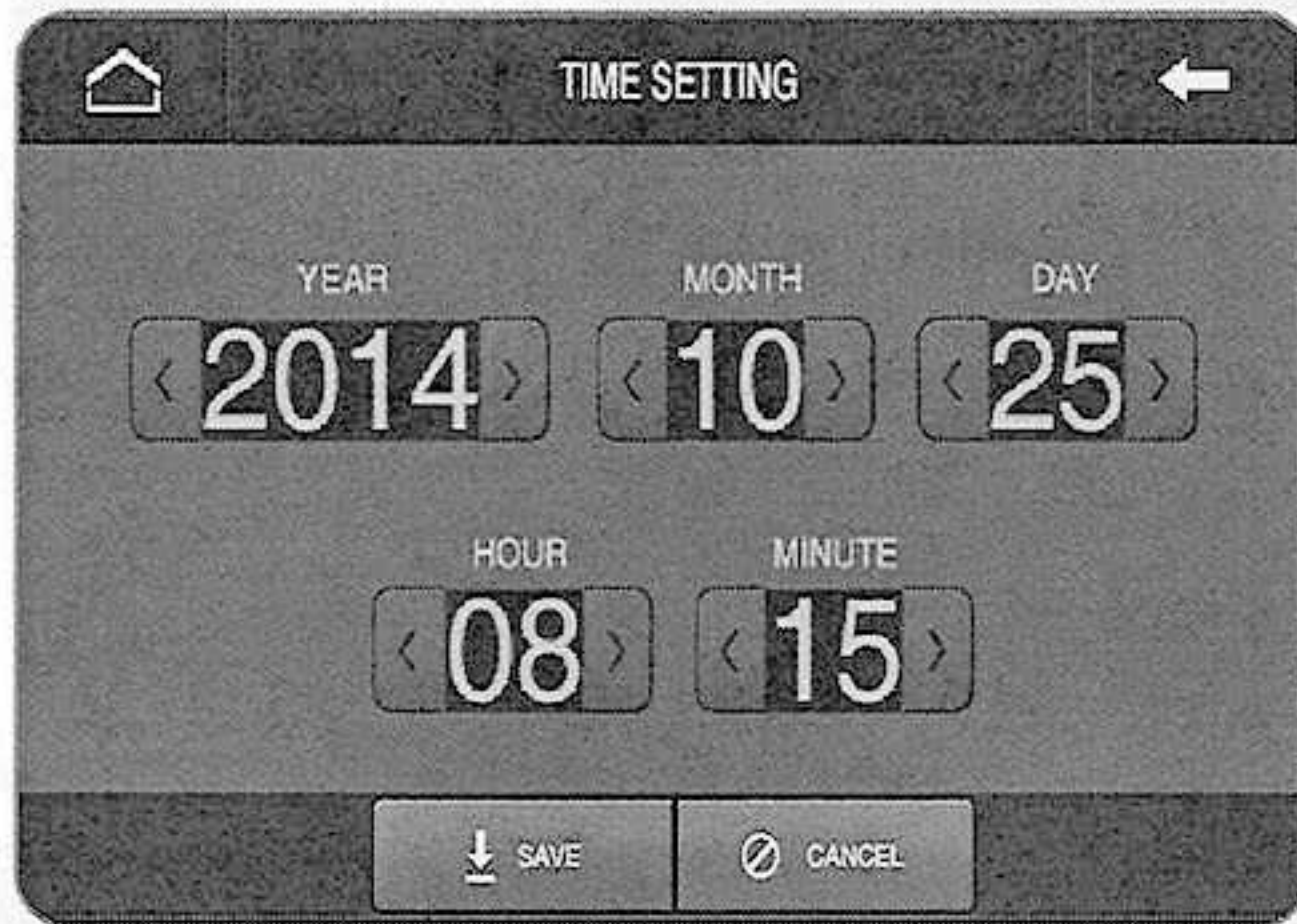

Icon	Description	Function
	Time Setting	Date and time setup.
	Display Setting	Display setup for contrast, brightness, hue.
	Language Setting	Language setup (8 languages supported)
	Setting (More)	Settings menu for other functions.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.

### (7) Time

The time stamp for recorded video and still images are recorded according to time setup in this menu. The year, month, date, hour and minute can be adjusted by left and right button. Touch the category to adjust. Touch  icon to complete the setup.





#### Icons and description


Icon	Description	Function
	Decrease value	Decrease the time and date to adjust.
	Increase value	Increase the time and date to adjust.
	Save	Save the date/time settings.
	Cancel	Cancel the date/time settings.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.

#### [CAUTION]






The time and date automatically reset if powered off for 48 hours. Time and date settings required as powered on.
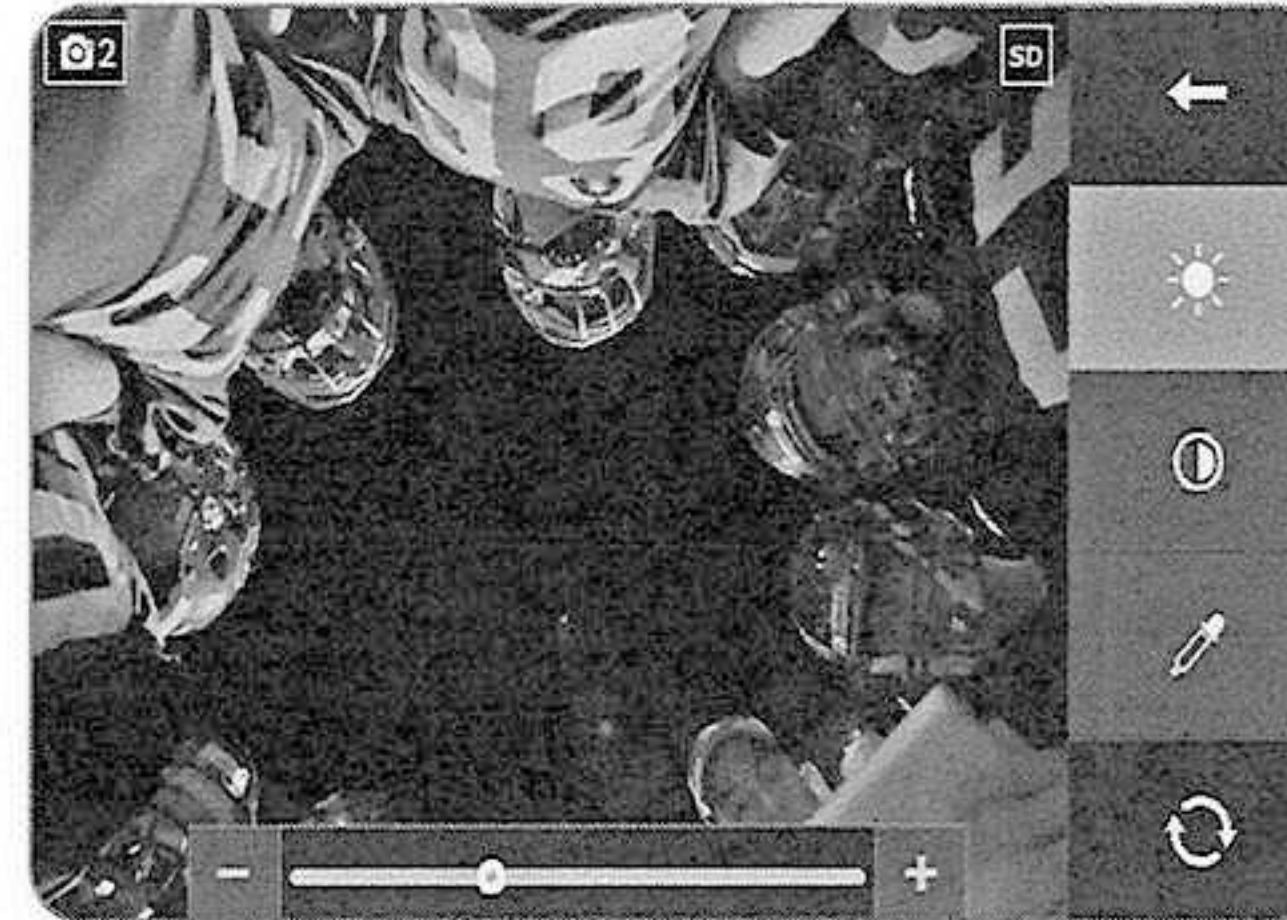
### (8) Display

 Brightness, contrast, and hue can be set in this menu. Touch the category that you wish to adjust. Touch "  " or "  " icon to change the value.




#### Icons and description

Icon	Description	Function
	BRIGHTNESS	Adjust the brightness.
	CONTRAS	Adjust the contrast.
	HUE	Adjust the color.
	Reset	All values are reset to default settings (Brightness, Contrast, Hue reset to the middle).
	Prev	Move to previous menu or screen.





### (9) Language

Language setup is enabled in this menu (Default language settings is English).

Select the language you wish to set and touch  to complete the settings.



#### Icons and description







Icon	Description	Function
	Save	Save the language settings.
	Cancel	Cancel the language settings.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.

### (10) More (settings for other functions)

Settings for Saving Method (video or still image), Reset All Settings, Automatic/Manual Saving, and Motion detection (of CCTV camera) is enabled in this menu.



#### Icons and description

Icon	Description	Function
	Saving Method	Recording option setup. (Video / Still image)
	All Initialization (Reset All Settings)	All settings of the device including recorded video and still image data are to be reset and deleted.
	Automatic/Manual Saving	Select recording option from Automatic and Manual.
	Motion	Settings for motion detection option of CCTV cameras connected to the videophone.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.

### (11) Saving Method

Recording option can be selected between video and still image.

If video is selected, video is recorded and audio is also recorded for door camera recording. CCTV camera recording is only for video.

If still image is selected, only the still image is recorded.



#### Icons and description

Icon	Description	Function
	Video	If selected, video is recorded(both video & audio recording is for door camera recording.)
	Still Image	If selected, still images are recorded.
	Save	Save video or still image depending on the recording option.
	Cancel	Cancel recording option settings.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.






### (12) Reset All Settings

This function resets all settings of the device to initial settings and inserted SD Card memory is formatted. All the recorded video and still images on the SD Card are completely deleted if "Reset All Settings" function is performed with the SD Card memory inserted in the device. We strongly recommend to backup the recorded video and still images or remove the SD Card memory prior to performing the reset function. **Time settings remains however, the time is reset if powered off for 48 hours.**

**- Please backup the recorded video and still images or remove the SD Card from the device prior to perform "Reset All Settings" function.**



### Icons and description







Icon	Description	Function
	All Initialization (Reset All Settings)	All settings of the device is set to initial settings and the inserted SD Card is formatted (Time and Language settings remain).
	Yes	Start reset all settings.
	No	Cancel reset all settings.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.

### (13) Automatic/Manual Saving

This function is to select Automatic or Manual Saving option.



### Icons and description

Icon	Description	Function
	Automatic Saving	Set recording option to automatic.
	Manual Saving	Set recording option to manual.
	Save	Save Automatic/Manual Saving option settings.
	Cancel	Cancel Automatic/Manual Saving option settings.
	Home	Return to main menu.
	Prev	Move to previous menu or screen.

**(14) MOTION setting & MOTION sensitivity setting.**

This is the function to set or adjust the MOTION sensitivity, or to activate the Motion feature of the Lobby camera & of the CCTV camera.

(Note, Only a selected camera out of the cameras installed can use the Motion feature)

- When It connects with only DRC-40KA, then The Motion detection of the Lobby can be used.
- If it connects with other cameras except DRC-40KA, It causes the problem such as howling.
- If you use the front door camera with motion detection audio is not supported.



**Icons and description**

Icon	Description	Function
	CAMERA_1	The Motion detection can be applied only CAMERA 1
	CAMERA_2	The Motion detection can be applied only CAMERA 2
	CCTV_1	The Motion detection can be applied only CCTV 1
	CCTV_2	The Motion detection can be applied only CCTV 2
	MOTION inactive	The motion detection is not in use.

Icon	Description	Function
	MOTION SENSITIVITY HIGH	The sensitivity of Motion detection is high.
	MOTION SENSITIVITY MEDIUM	The sensitivity of Motion detection is medium.
	MOTION SENSITIVITY LOW	The sensitivity of Motion detection is low.
	Home	Move on to main menu
	PREVIOUS	Move on to previous menu.

**(15) Page, Call, and Door release**

When paged from a door camera or the visitor icon is touched, the door camera view is displayed on the LCD screen.

As the door camera view is displayed on the screen, touch the call icon to connect to the door phone.


- The camera icon located on the upper left corner of the screen indicates which camera view is displayed.


- icon for still image recording mode or icon for video recording mode is displayed on the upper right corner of the screen.

- Touch or next to icon to control the call volume during a call.

Touch the call icon to end a call.

Touch the door release icon during a call to release the door lock. The blue door release icon is displayed in the center of the screen and the door is released.

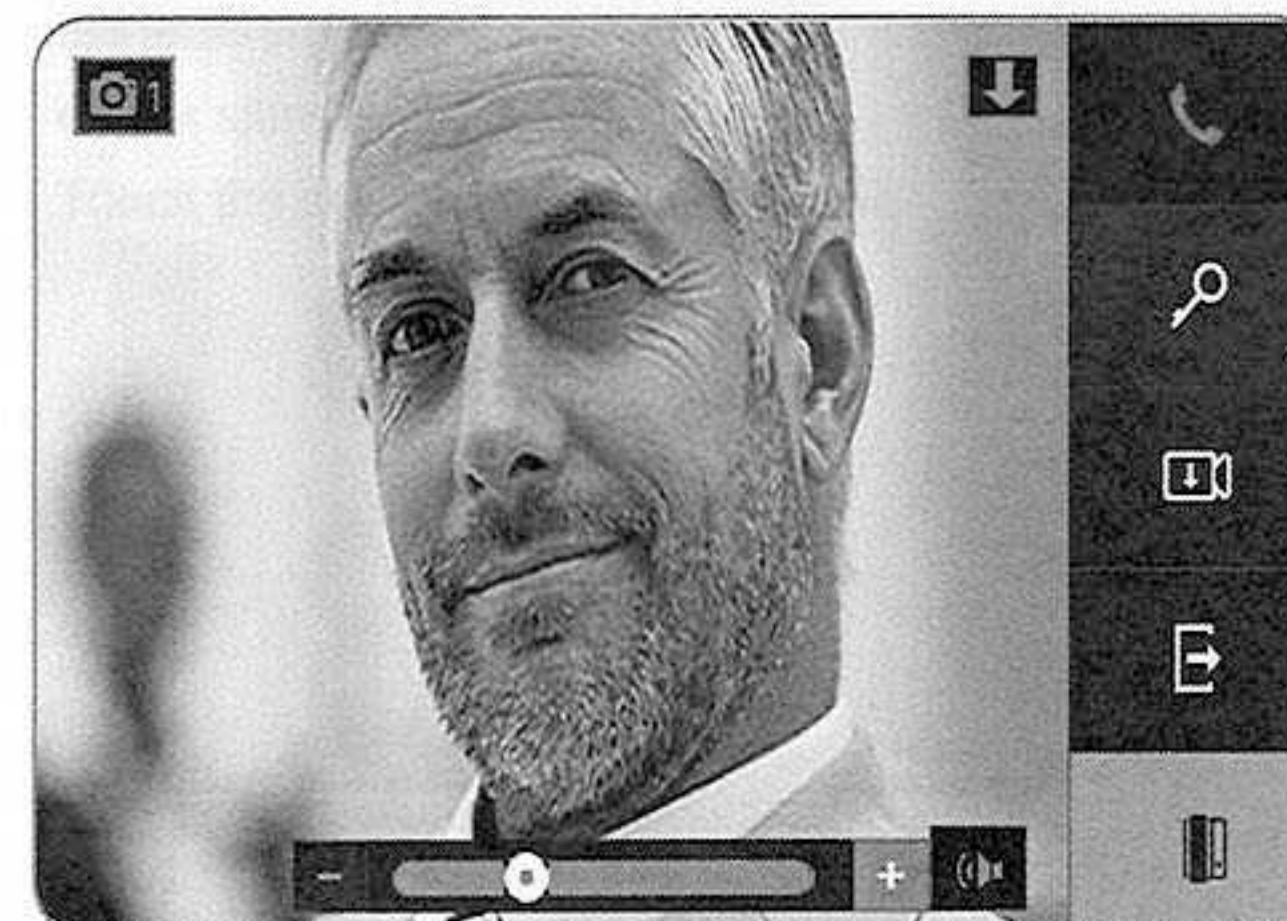

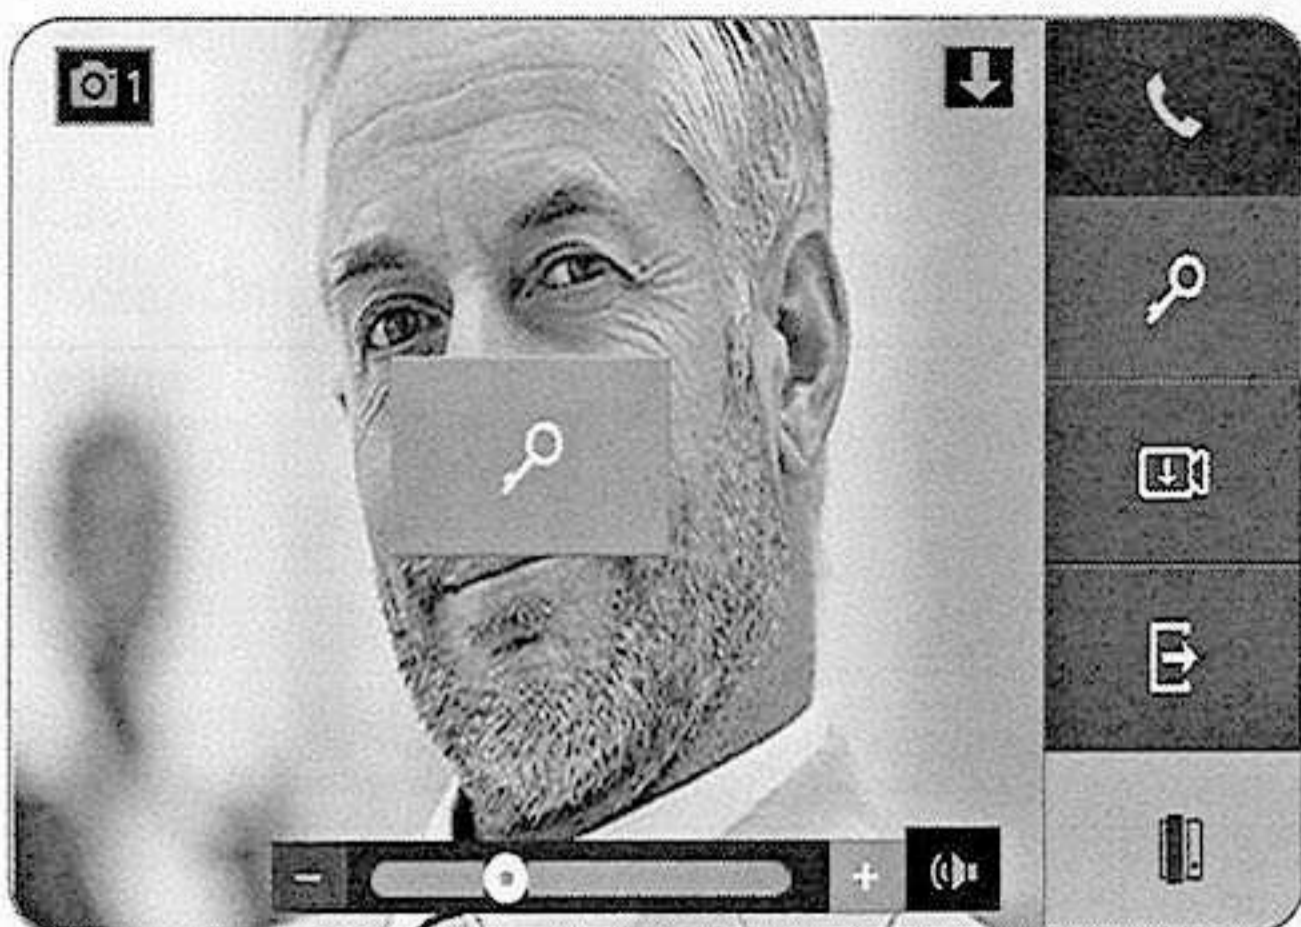

#### Icons and description

Icon	Description	Function
	Call	To start a call or end a call.
	Door release	Touch to release a door lock during a call.
	Manual Saving	Record video or still images manually by touching the icon during a call.
	Reject call (Exit)	Reject a call when paged from a door camera(video and ringtone become off and enter standby mode) or Exit from current menu.
	Interphone	Page the sub-interphone connected to the videophone.

#### (16) Interphone

##### To page an interphone connected to the videophone

In standby mode, touch the interphone icon to turn the touch screen to interphone mode.


Touch the interphone call icon to make a call to an interphone.

**(\*\* when you page the interphone, you need to keep touching the icon).**

As the handset of the interphone is picked up, the call is made.

The call time is limited to 60 seconds.

If the interphone icon is not touched after 15 seconds, the call is ended and the videophone enters standby mode.

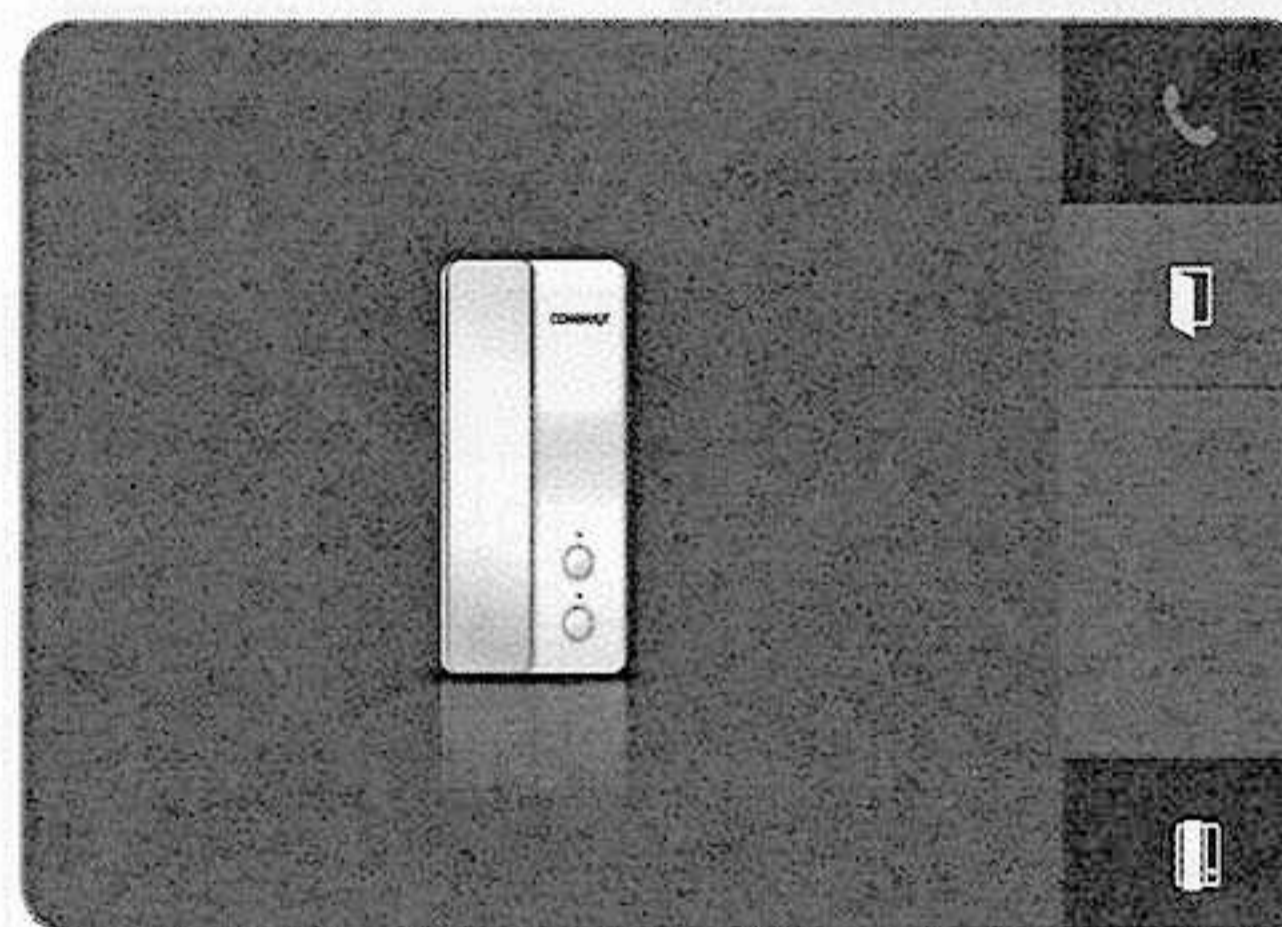

##### When paged from the interphone


Ringtone sounds and the display is turned to the interphone call screen.

Touch the call icon to connect.

The call time is limited to 60 seconds.

If the interphone is not answered within 10 seconds, the videophone automatically enters standby mode.

Touch the call icon to end a call.

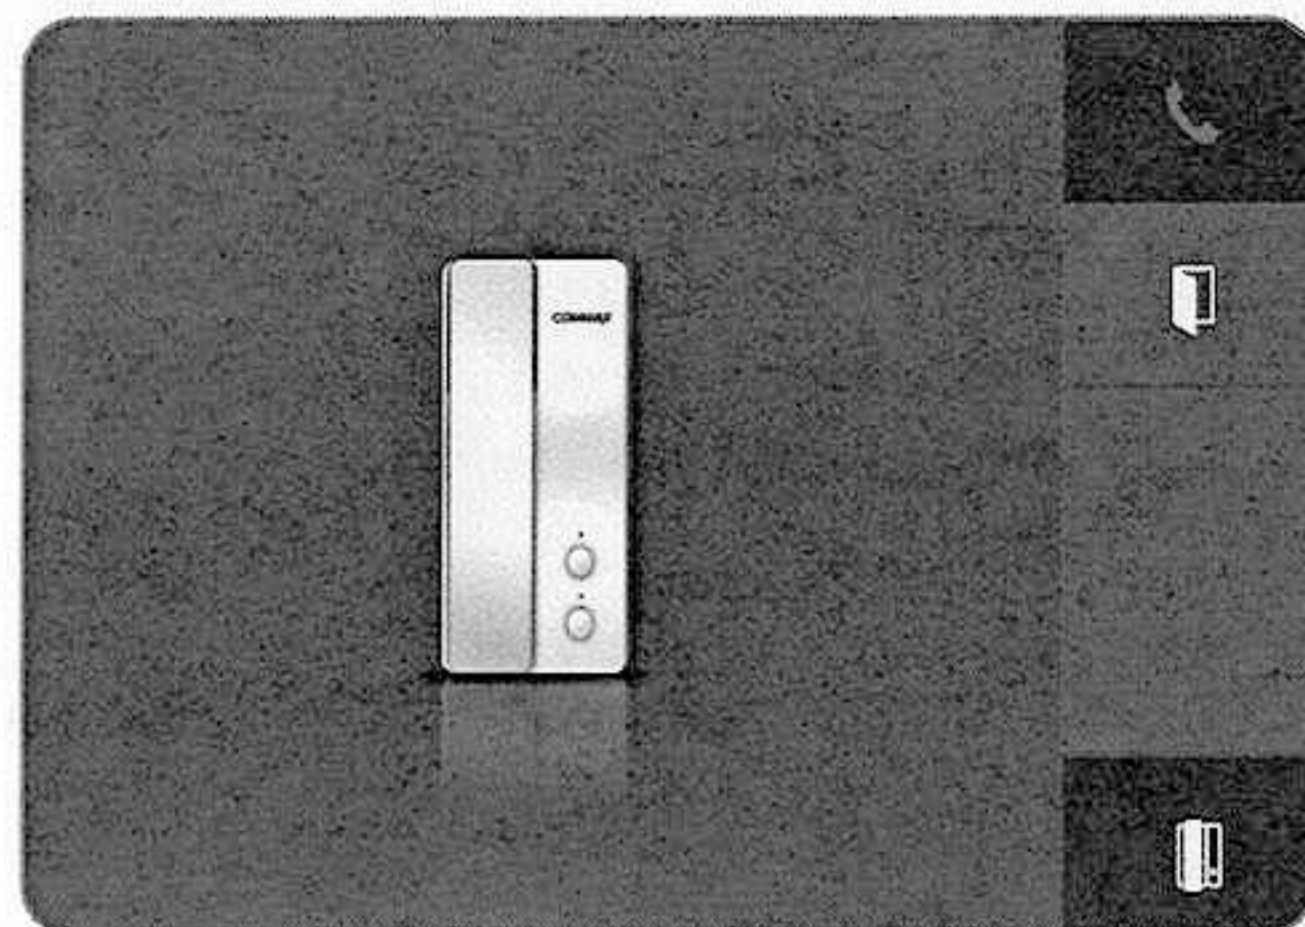

### Icons and description

Icon	Description	Function
	Call	Start or end a call.
	Reject (Exit)	Reject a call from an interphone (screen and ringtone are off and enter standby mode) or Exit from current menu
	Intephone	Page an interphone.

## 5. Wiring schematic

### Camera connecting terminal (4 wires with polarity)


1. RED: Voice signal input
2. BLUE: GND
3. YELLOW: Power (+12V)
4. WHITE: Video signal input

### Sensor connecting terminal (3 wires with polarity)

1. RED: Power (+12V)
2. BLUE: GND
3. YELLOW: SENSOR Signal input

### CCTV Connector (2 wires with polarity)


1. RED: Video signal input
2. BLUE: GND

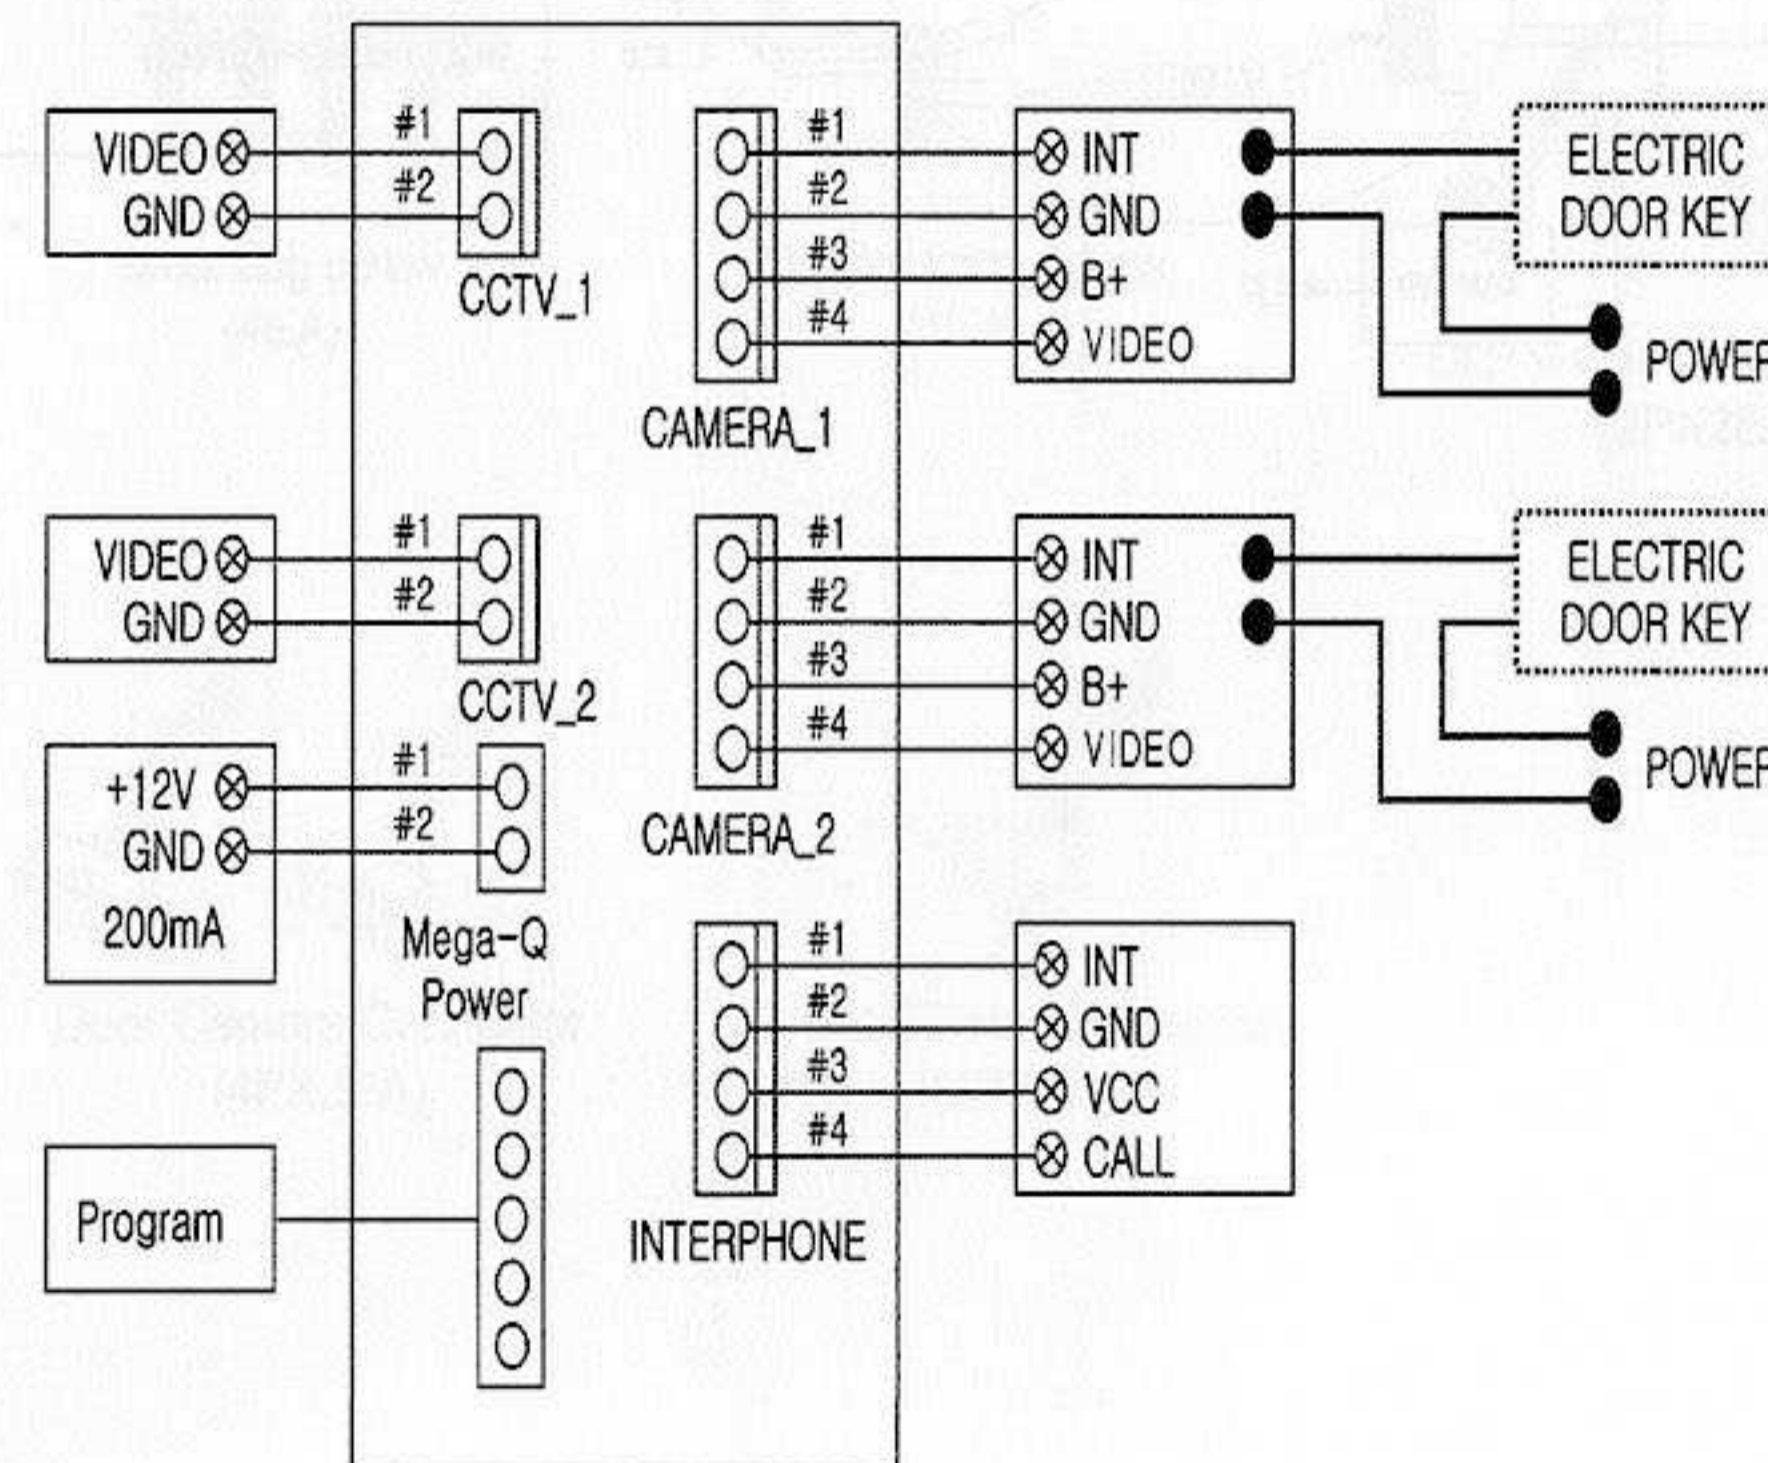



### CCTV Camera wiring

- ♣ CCTV CAMERA requires a separate power supply.
- ♣ Use the proper cable (Coaxial Cable) with appropriate specification for various distances between the CCTV CAMERA and the videophone.

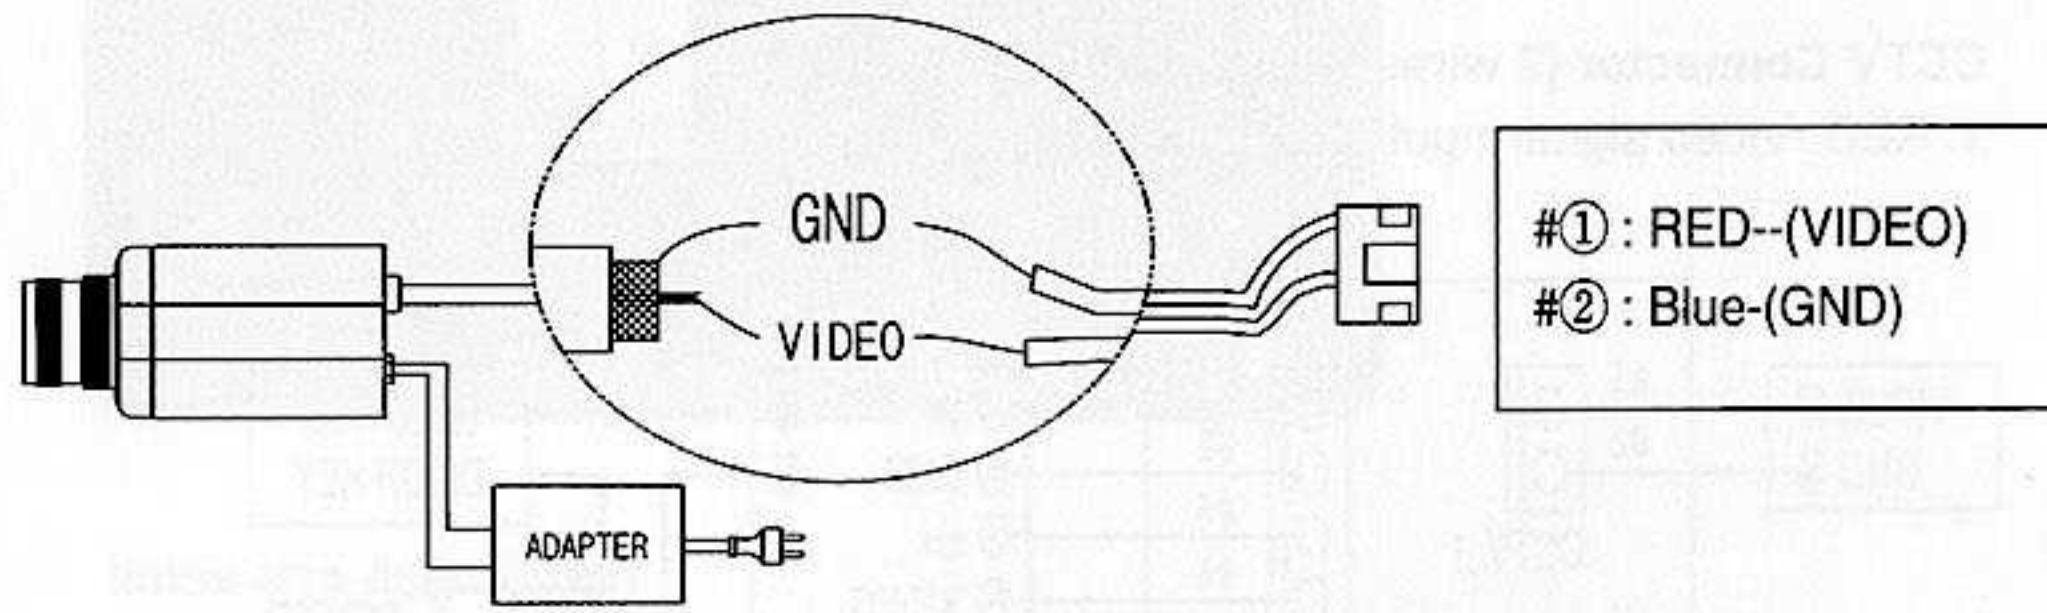


## 6. Product components




Monitor(CDV-72UM)




User Manual

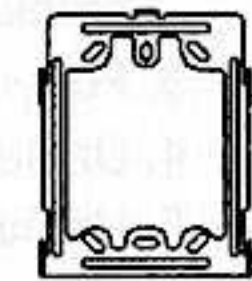


Wall Bracket

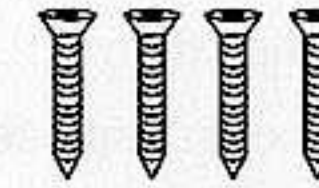


Mounting screw  
(4EA)

 


Monitor fixing Screw  
(1EA)

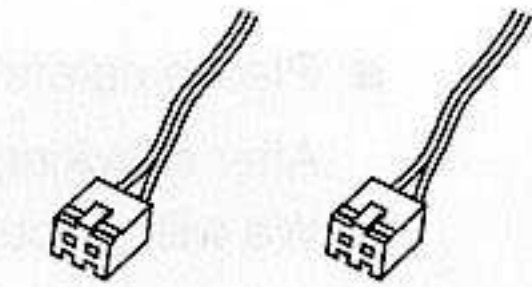

CCTV Camera Connector  
(2PX2EA)

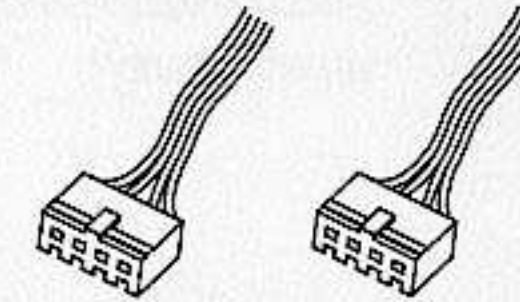

Door Camera Connector  
(4PX2EA)

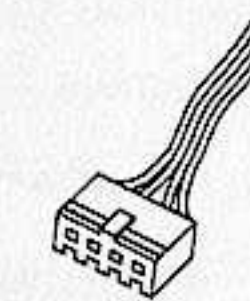

InterPhone Connector  
(4PX1EA)

## 7. Caution in use

1. Turn on the power switch.
2. Please contact your local agent for product maintenance when you have a problem in use of CDV-72UM
3. For your safety, power switch with a safety device must be used in your building.
4. Unplug before installing or repairing the product.
5. Unplug when you connect monitor with door cameras.

## 8. Miscellaneous

- Please carefully read this User's Guide before calling service man  
After checking the entire check list, please contact customer service center.  
We will do our best to make you satisfy with our services.

## 9. Specification

MODEL	CDV-72UM		
Wiring	Door camera 4 wires (Polarity), CCTV 2wires(Polarity), Interphone 4wires(Polarity)		
Voltage	100-240V~, 50/60 Hz		
Power Consumption	Standby : 4.6W , in operation : 16W		
Communication	Full duplex (Hands-Set)		
Monitor	17.78Cm(7") TFT-DIGITAL LCD		
Ringling	- Entrance : Electronic chime (3 call 2times) - Interphone : Electron buzzer		
Video receiving period	Standby : 30 ±5sec , response : 60 ±5sec		
Distance	0.5mm	0.65mm	0.8mm
	28m	50m	70m
Temperature	0 ~ +40°C (32°F ~ 104°F)		
Dimensions(mm)	276(W) X 178(H) X 31(D)		

## 7. Carbon in use

- 1. Carbon in use in the plant
- 2. Carbon in use in the plant
- 3. Carbon in use in the plant
- 4. Carbon in use in the plant
- 5. Carbon in use in the plant

## 8. Miscellaneous

- 1. Miscellaneous
- 2. Miscellaneous
- 3. Miscellaneous
- 4. Miscellaneous
- 5. Miscellaneous

# COMMAX

## COMMAX Co.,Ltd.

513-11, Sangdaewon-dong, Jungwon-gu, Seongnam-si, Gyeonggi-do, Korea  
Int'l Business Dept. Tel. : +82-31-7393-540~550 Fax. : +82-31-745-2133  
Web site : [www.commax.com](http://www.commax.com)  
PM0772UM0010

Printed In Korea / 2015.01.104