



QUICK START GUIDE

Customer Care


If you have any questions regarding your product,
please contact Foscam Customer Care.

Email: support@foscam.com

www.foscam.com



E1

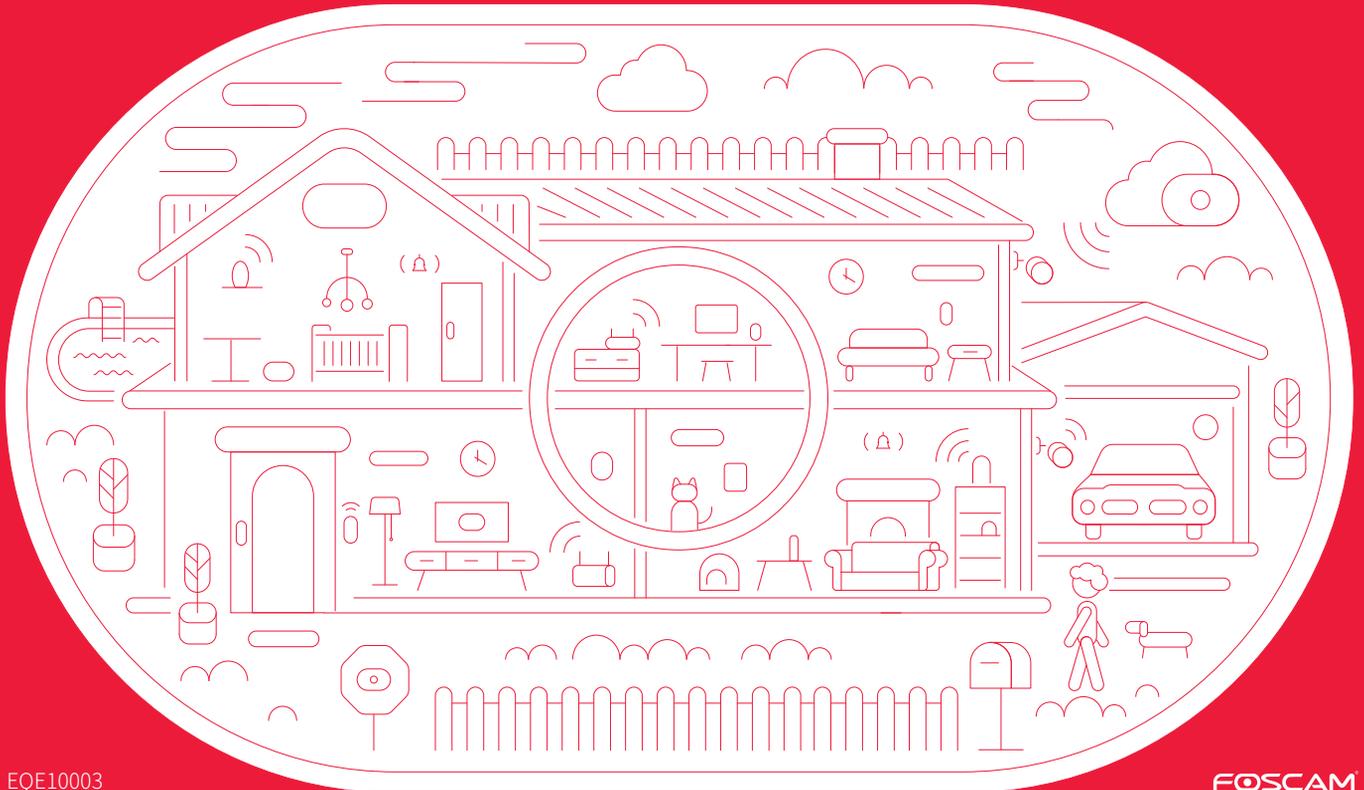


EQE10003

FOSCAM

WHAT'S IN THE BOX



E1 Base Station

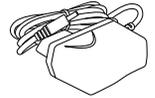


E1 Base Station
Power Adapter




E1 Camera




E1 Camera
Power Adapter

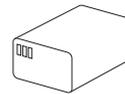

Rechargeable
Battery

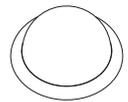


Magnetic
Wall Mount

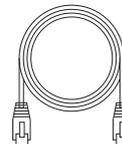


Ethernet Cable



Camera USB
Power Cable

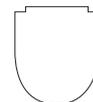

Single-sided
Adhesive Tape

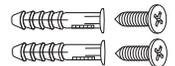

Mounting
Screws & Anchors


Note: Please fully charge the battery before first use.

PHYSICAL DESCRIPTION

E1 Base Station

Sync / Siren Off Button

- Press the button to sync camera with Base Station.
- Press the button to turn off the siren manually.

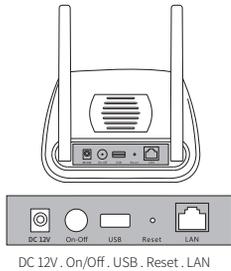

Green: The Base Station is connected to an external USB Storage Device.

Blinking Green: The system is recording.

Amber: The external USB Storage Device is full or disabled.

Off: No USB Storage Device is inserted.



Green: The Base Station is connected to the Internet.

Amber: The Base Station is connected to the router but no Internet connection has been established.

Off: The Base Station is not connected to a router.



Green: Camera(s) are connected to the Base Station.

Blinking Green: The Base Station is attempting to sync with the camera.

Off: No cameras are currently connected to the Base Station.




Green: The Base Station is powered On.


Off: The Base Station is powered Off.

PHYSICAL DESCRIPTION

E1 Camera

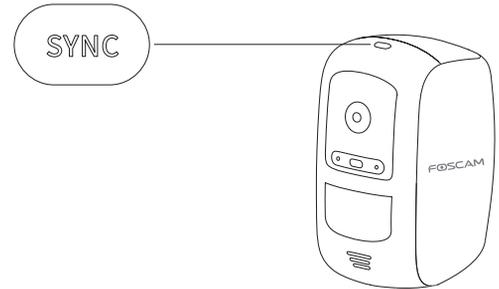

Sync Button: Press this button to sync the E1 with the Base Station.

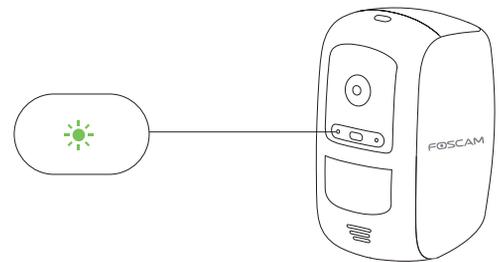

Green Slow Blinking: Sync in process.



Solid Green Then Off: Sync process completed.

Blinking Amber Rapidly: Failed to sync.

Blinking Amber Slowly Then Off: The camera's battery level is low.

Off: Camera is on standby or the battery is depleted.


WIRELESS CONNECTIVITY

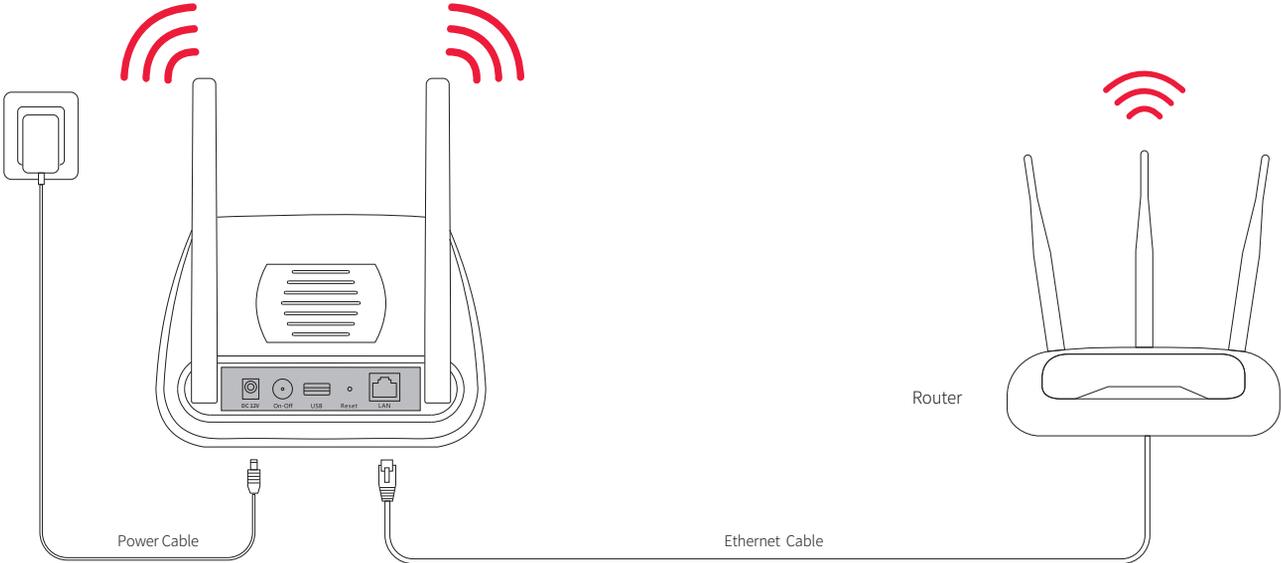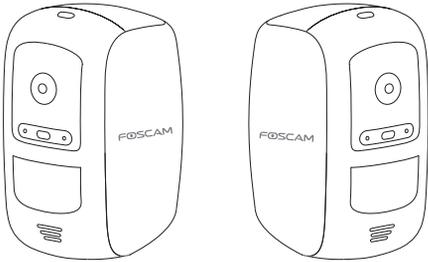


SETTING UP YOUR E1 SYSTEM

1. Insert the Rechargeable Battery Into Your Camera


- a. Unlock the Rechargeable Battery compartment by pressing and holding the latch.
- b. The battery door will open automatically.

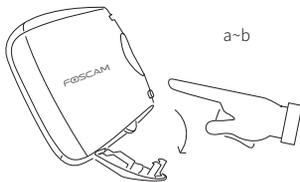

- c. Align the battery contacts.
- d. Insert the Rechargeable Battery.

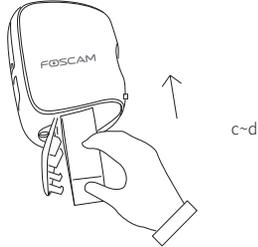

- e. Close the battery door.

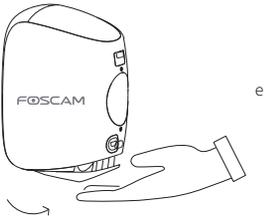


When the in-package camera is powered on, its LED light will blink green repeatedly, indicating that it is in the process of syncing with the Base Station.


Note: Please fully charge the battery before first use.

2. Connect Your Base Station to the Internet

1. Connect the Base Station to your router with an Ethernet Cable.

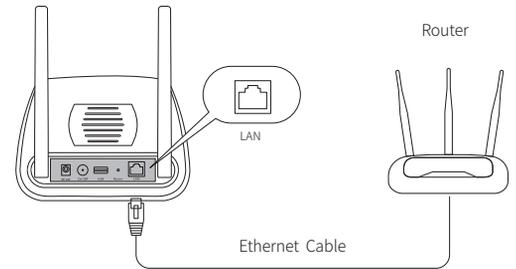

2. Plug the Base Station Power Adapter into an electrical outlet.

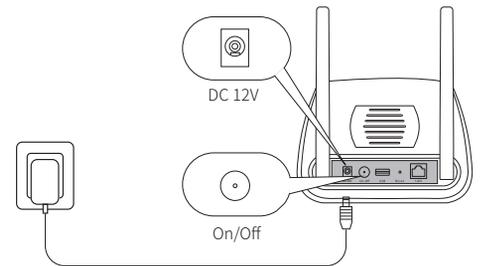

3. Press the **On/Off** button, and wait until the power and Internet lights turn green. With a minute, the camera will connect to the Base Station automatically.
A green LED on the camera will blink rapidly while syncing. The camera LED will then turn off, and the Sync Status LED of the Base Station will turn solid green, indicating that sync is successful and the camera will announce "Base Station connection succeeded".

Note: Make sure your smartphone is on the same network as the router. It will need to be connected to the 2.4GHz WiFi channel.

3. Download Foscam App


- To download the free Foscam App, simply scan the QR Code below.
- You can also search for "Foscam" in the App Store or Google Play store to download and install Foscam App as well.



With the Foscam App, you can turn your iOS or Android smartphone into a monitoring center for your security system.

4. Get a Free Foscam Account


- To create a new Foscam Account, launch the Foscam App from your smartphone, tap the **Sign Up** button, and follow the onscreen instructions.
- Add the Base Station to an existing Foscam Account.
 - a. If you already have a Foscam Account, log in and tap **+**.

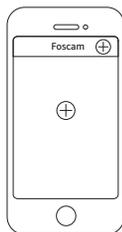

b. Follow the onscreen instructions.

5. Add the Base Station to an Existing Foscam Account

1. Tap the Foscam icon  on your smartphone, then login to your Foscam Account.
2. Tap **+**.

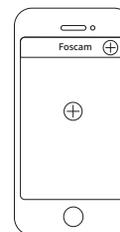

3. Select **Base Station**, tap **Next** to scan the QR code of the Base Station, or tap **Alternate Setup** to add the Base Station.



4. Follow the onscreen instructions.

6. View Your Video Footage


When you launch the Foscam App, the devices page will display. To view and listen in on a live feed, tap or click **Live** on the camera feed image. View your camera's alert video recordings in the Foscam Cloud by tapping the timebar in the live page. Your system is now set up and ready to go!

PLACE / MOUNT YOUR CAMERA


Place Your Camera on a Flat Surface

You can place your camera on a flat surface (desk, shelf, table, etc.)

1. Apply the single-sided adhesive tape provided in the package to the bottom of the camera.

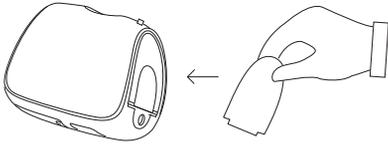

2. Place your camera on a flat surface and position the camera to monitor the area that you would like to.

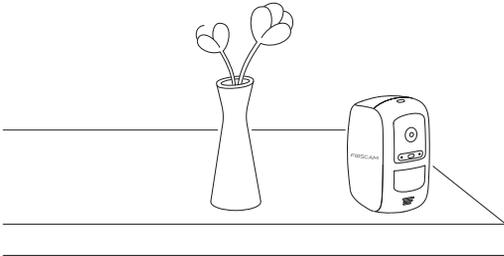

Mount Your Camera to the Wall

Note: Before mounting the Magnetic Wall Mount, please ensure that the camera is positioned towards the precise area you would like to monitor.

1. Fasten the mounting screw into the wall.
2. Hang the Magnetic Wall Mount from the screw.




CHARGE YOUR BATTERY


1. Place the camera indoors. If the camera is currently mounted to a wall, remove it from the Magnetic Wall Mount.

Note: If you are using the camera outside, bring it inside while charging the battery.

2. Connect the power adapter and cable as shown below:

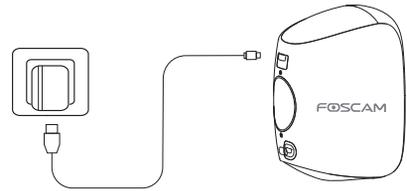

3. The camera LED light will stay solid green when the battery is fully charged.

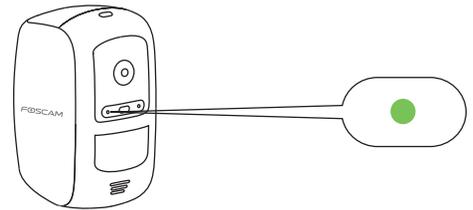


SYNC YOUR CAMERA WITH THE BASE STATION

When adding additional E1 cameras to your system, you will need to individually sync them to the Base Station.


1. Please insert the Rechargeable Battery into the camera.
2. Place the camera within 1 to 3 feet (30 to 100 centimeters) of the Base Station.



3. Press and hold the **Sync** button on the top of the Base Station for about two seconds and then release it.

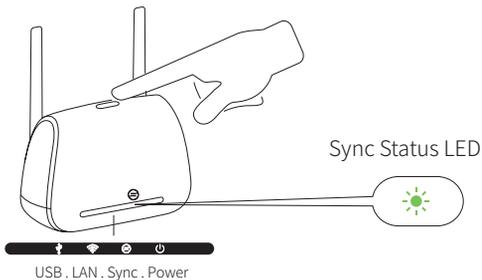

4. When Sync Status LED blinks green, press the **Sync** button on top of the camera for about two seconds, and then release it.

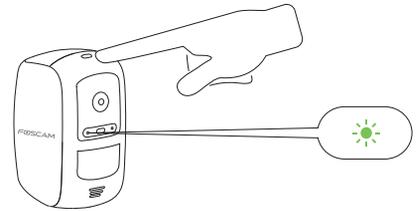

A green LED on the camera will blink rapidly while syncing. The camera LED will then turn off, and the Sync Status LED of the Base Station will turn solid green, indicating that sync is successful and the camera is ready for viewing!

Note: If the camera LED blinks an Amber color, then sync has failed. Please repeat the sync process again and ensure that the camera is within 1-3 ft. of the Base Station.

Syncing more than one camera?

Repeat steps 1 through 4 for each camera.