



Digital Video Recorder

User Manual

UD.6L0202D1252A01

Hikvision® Network Digital Video Recorder User Manual

This manual, as well as the software described in it, is furnished under license and may be used or copied only in accordance with the terms of such license. The content of this manual is furnished for informational use only, is subject to change without notice, and should not be construed as a commitment by Hangzhou Hikvision Digital Technology Co., Ltd. (Hikvision). Hikvision assumes no responsibility or liability for any errors or inaccuracies that may appear in the book.

Except as permitted by such license, no part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, recording, or otherwise, without the prior written permission of Hikvision.

HIKVISION MAKES NO WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, REGARDING THE HIKVISION SOFTWARE. HIKVISION DOES NOT WARRANT, GUARANTEE, OR MAKE ANY REPRESENTATIONS REGARDING THE USE OR THE RESULTS OF THE USE OF THE HIKVISION SOFTWARE IN TERMS OF ITS CORRECTNESS, ACCURACY, RELIABILITY, CURRENTNESS, OR OTHERWISE. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE OF THE HIKVISION SOFTWARE IS ASSUMED BY YOU. THE EXCLUSION OF IMPLIED WARRANTIES IS NOT PERMITTED BY SOME STATES. THE ABOVE EXCLUSION MAY NOT APPLY TO YOU.

IN NO EVENT WILL HIKVISION, ITS DIRECTORS, OFFICERS, EMPLOYEES, OR AGENTS BE LIABLE TO YOU FOR ANY CONSEQUENTIAL, INCIDENTAL, OR INDIRECT DAMAGES (INCLUDING DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, AND THE LIKE) ARISING OUT OF THE USE OR INABILITY TO USE THE HIKVISION SOFTWARE EVEN IF HIKVISION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Regulatory information

FCC information

FCC compliance : This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.

Preventive and Cautionary Tips

Before connecting and operating your DVR, please be advised of the following tips:

- Ensure unit is installed in a well-ventilated, dust-free environment.
- Unit is designed for indoor use only.
- Keep all liquids away from the DVR.
- Ensure environmental conditions meet factory specifications.
- Ensure unit is properly secured to a rack or shelf. Major shocks or jolts to the unit as a result of dropping it may cause damage to the sensitive electronics within the unit.
- Use the DVR in conjunction with an UPS if possible.
- Power down the unit before connecting and disconnecting accessories and peripherals.
- A factory recommended HDD should be used for this device.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.

Thank you for purchasing our product. If there is any question or request, please do not hesitate to contact dealer.

This manual is applicable to the models listed in the following table.

Series	Model	Type
7200HFHI-SL	DS-7204HFHI-SL DS-7208HFHI-SL	Network DVR
7200HFHI-SE	DS-7204HFHI-SE DS-7208HFHI-SE	Network DVR
7200HFHI-ST	DS-7204HFHI-ST DS-7208HFHI-ST	Network DVR
7300HFHI-ST	DS-7304HFHI-ST DS-7308HFHI-ST DS-7316HFHI-ST	Network DVR
8100HFHI-ST	DS-8104HFHI-ST DS-8108HFHI-ST DS-8116HFHI-ST	Network DVR

Product Key Features

General

- Support HD-SDI camera connection;
- Each channel supports dual-stream. Main stream supports up to 1080P resolution and sub-stream supports up to 4CIF resolution;
- Independent configuration for each channel, including resolution, frame rate, bit rate, image quality, etc.
- Encoding for both video stream and video & audio stream; audio and video synchronization during composite stream encoding;
- Watermark technology;

Local Monitoring

- Simultaneous HDMI, VGA and CVBS outputs (no CVBS output for DS-7200HFHI-SL, DS-7200HFHI-SE and DS-7200HFHI-ST);
- HDMI output and VGA output at up to 1920*1080 resolution.
- 1/4/6/8/9/16 screen live view is supported, and the display sequence of screens is adjustable.
- Live view screen can be switched in group and manual switch and automatic cycle live view are also provided, the interval of automatic cycle can be adjusted.
- Quick setting menu is provided for live view.
- The selected live view channel can be shielded.
- Motion detection, video-tampering detection, video exception alarm and video loss alarm functions.
- Privacy mask;
- Several PTZ protocols supported; PTZ preset, patrol and pattern.
- Zooming in/out by clicking the mouse and PTZ tracing by dragging mouse;

HDD Management

- For DS-7200HFHI-SL series, 1 SATA hard disk can be connected; for DS-7200HFHI-SE and DS-7200HFHI-ST series, up to 2 SATA hard disks can be connected; for DS-7300HFHI-ST series, 4 SATA hard disks and 1 eSATA disk can be connected; and for DS-8100HFHI-ST series, 8 SATA hard disks and 1 eSATA disk can be connected. (Each disk with a maximum of 4TB storage capacity.)
- 8 network disks (8 NAS disks, or 7 NAS disks+1 IP SAN disk) can be connected.
- Support eSATA disks for recording or backup.
- Support S.M.A.R.T. and bad sector detection.
- Support HDD standby function;
- HDD property: redundancy, read-only, read/write (R/W).
- HDD group management;
- HDD quota management; different capacity can be assigned to different channels.

Recording and Playback

- Holiday recording schedule configuration;
- Cycle and non-cycle recording modes;
- Normal and event video encoding parameters;
- Multiple recording types: manual, normal, alarm, motion, motion | alarm, motion & alarm;
- 8 recording time periods with separated recording types;
- Pre-record and post-record for motion detection triggered recording, and pre-record time for schedule

- and manual recording;
- Searching record files by events (alarm input/motion detection);
- Customization of tags, searching and playing back by tags;
- Locking and unlocking of record files;
- Local redundant recording;
- Searching and playing back record files by channel number, recording type, start time, end time, etc.;
- Smart search for the selected area in the video when playback;
- Zooming in for any area when playback;
- Reverse playback of multi-channel.
- Supports pause, fast forward, slow forward, skip forward, and skip backward when playback, locating by dragging the mouse on the progress bar;
- Up to 16-ch synchronous playback at 1080P;

Backup

- Export data by a USB, SATA or eSATA device;
- Export video clips when playback;
- Management and maintenance of backup devices;

Alarm and Exception

- Configurable arming time of alarm input/output.
- Alarm for video loss, motion detection, tampering, abnormal signal, video input/recording resolution mismatch, illegal login, network disconnected, IP confliction, record exception, HDD error, and HDD full, etc.
- Alarm triggers full screen monitoring, audio alarm, notifying surveillance center, sending email and alarm output.
- Automatic restore when system is abnormal.

Other Local Functions

- Users can operate by mouse and remote control.
- Three-level user management; admin user can create many operating account and define their operating permission, which includes the permission to access any channel;
- Completeness of operation, alarm, exceptions and log writing and searching;
- Manually triggering and clearing alarms.
- Importing and exporting of configuration file of devices;
- Getting cameras type information automatically.

Network Functions

- 1 self-adaptive 10M/100M network interface for DS-7204HFHI-SL; 2 self-adaptive 10M/100M/1000M network interfaces for DS-8100HFHI-ST series, and various working modes are configurable: multi-address, load balance, network fault tolerance, etc.; and 1 self-adaptive 10M/100M/1000M network interface for other models;
- IPv6 is supported;
- TCP/IP protocol, PPPoE, DHCP, DNS, DDNS, NTP, SADP, SMTP, SNMP, NFS, iSCSI and UPnP™ are supported;
- TCP, UDP and RTP for unicast;
- Auto/Manual port mapping by UPnP™.
- Remote search, playback, download, locking and unlocking the record files, and downloading files broken transfer resume;

- Remote parameters setup; remote import/export of device parameters;
- Remote viewing of the device status, system logs and alarm status;
- Remote keyboard operation;
- Remote locking and unlocking of control panel and mouse;
- Remote HDD formatting and program upgrading;
- Remote system restart and shutdown;
- Support upgrading via remote FTP server;
- RS-232, RS-485 transparent channel transmission.
- Alarm and exception information can be sent to the remote host;
- Remotely start/stop recording.
- Remotely start/stop alarm output.
- Remote PTZ control.
- Remote JPEG capture.
- Two-way audio and voice broadcasting.
- Embedded WEB server.

Development Scalability

- SDK for Windows and Linux system;
- Source code of application software for demo;
- Development support and training for application system;

Table of Contents

Product Key Features	6
Chapter 1 Introduction	12
1.1 Front Panels	13
1.2 IR Remote Control Operations	20
1.3 USB Mouse Operation	22
1.4 Input Method Description	23
1.5 Rear Panel	24
Chapter 2 Getting Started	27
2.1 Starting Up and Shutting Down the DVR	28
2.2 Using the Wizard for Basic Configuration	30
Chapter 3 Live View	34
3.1 Introduction of Live View	35
3.2 Operations in Live View Mode	36
3.2.1 Front Panel Operation	36
3.2.2 Using the Mouse in Live View	37
3.2.3 Using an Auxiliary Monitor	38
3.2.4 Main/Aux Output Switching	38
3.2.5 Quick Setting Toolbar in Live View Mode	39
3.3 Channel-zero Encoding	41
3.4 Adjusting Live View Settings	42
3.5 User Logout	43
Chapter 4 PTZ Controls	44
4.1 Configuring PTZ Settings	45
4.2 Setting PTZ Presets, Patrols & Patterns	46
4.2.1 Customizing Presets	46
4.2.2 Calling Presets	47
4.2.3 Customizing Patrols	48
4.2.4 Calling Patrols	49
4.2.5 Customizing Patterns	50
4.2.6 Calling Patterns	51
4.3 PTZ Control Panel	52
Chapter 5 Record Settings	53
5.1 Configuring Encoding Parameters	54
5.2 Configuring Record Schedule	57
5.3 Configuring Motion Detection Record	61
5.4 Configuring Alarm Triggered Record	63
5.5 Manual Record	65
5.6 Configuring Holiday Record	66
5.7 Configuring Redundant Recording	68
5.8 Configuring HDD Group for Recording	70
5.9 Files Protection	71

Chapter 6 Playback.....	73
6.1 Playing Back Record Files	74
6.1.1 Playing Back by Channel.....	74
6.1.2 Playing Back by Time	76
6.1.3 Playing Back by Event Search	78
6.1.4 Playing Back by Tag	81
6.1.5 Playing Back by System Logs	83
6.1.6 Playing Back External File	85
6.2 Auxiliary Functions of Playback	86
6.2.1 Playing Back Frame by Frame.....	86
6.2.2 Smart Search	86
6.2.3 Digital Zoom.....	88
6.2.4 Reverse Playback of Multi-channel	88
Chapter 7 Backup.....	90
7.1 Backing up Record Files	91
7.1.1 Quick Export.....	91
7.1.2 Backing up by Normal Video Search	92
7.1.3 Backing up by Event Search	97
7.1.4 Backing up Video Clips	101
7.2 Managing Backup Devices	104
Chapter 8 Alarm Settings	107
8.1 Setting Motion Detection.....	108
8.2 Setting Sensor Alarms	111
8.3 Detecting Video Loss.....	114
8.4 Detecting Video Tampering	116
8.5 Handling Exceptions	118
8.6 Setting Alarm Response Actions	119
8.7 Triggering or Clearing Alarm Output Manually	121
Chapter 9 Network Settings	122
9.1 Configuring General Settings	123
9.2 Configuring Advanced Settings.....	125
9.2.1 Configuring PPPoE Settings	125
9.2.2 Configuring DDNS	125
9.2.3 Configuring NTP Server	129
9.2.4 Configuring SNMP	130
9.2.5 Configuring UPnP™.....	130
9.2.6 Configuring the Remote Alarm Host	132
9.2.7 Configuring Multicast.....	133
9.2.8 Configuring RTSP.....	133
9.2.9 Configuring Server and HTTP Ports	134
9.2.10 Configuring Email	134
9.3 Checking Network Traffic	137
9.4 Configuring Network Detection	138
9.4.1 Testing Network Delay and Packet Loss.....	138

9.4.2	Exporting Network Packet	138
9.4.3	Checking Network Status.....	140
9.4.4	Checking Network Statistics.....	140
Chapter 10	HDD Management	142
10.1	Initializing HDDs	143
10.2	Managing Network HDD	144
10.3	Managing eSATA	146
10.4	Managing HDD Group	147
10.4.1	Setting HDD Groups.....	147
10.4.2	Setting HDD Property.....	148
10.5	Configuring Quota Mode.....	150
10.6	Checking HDD Status	152
10.7	Checking S.M.A.R.T Information	153
10.8	Detecting Bad Sector.....	154
10.9	Configuring HDD Error Alarms	155
Chapter 11	Camera Settings	156
11.1	Configuring OSD Settings.....	157
11.2	Configuring Privacy Mask.....	158
Chapter 12	DVR Management and Maintenance	159
12.1	Viewing System Information.....	160
12.1.1	Viewing Device Information.....	160
12.1.2	Viewing Camera Information.....	160
12.1.3	Viewing Record Information	160
12.1.4	Viewing Alarm Information	161
12.1.5	Viewing Network Information	161
12.1.6	Viewing HDD Information	162
12.2	Searching and Exporting Log Files	163
12.3	Importing/Exporting Configuration Files	165
12.4	Upgrading System	166
12.4.1	Upgrading by Local Backup Device	166
12.4.2	Upgrading by FTP	166
12.5	Restoring Default Settings.....	167
Chapter 13	Others.....	168
13.1	Configuring General Settings	169
13.2	Configuring DST Settings	170
13.3	Configuring More Settings	171
13.4	Managing User Accounts.....	172
13.4.1	Adding a User	172
13.4.2	Deleting a User	174
13.4.3	Editing a User	174
13.5	Logging out/Shutting down/Rebooting Device	176
Chapter 14	Appendix.....	177
	Glossary	178
	Troubleshooting	179

Chapter 1 Introduction

1.1 Front Panels

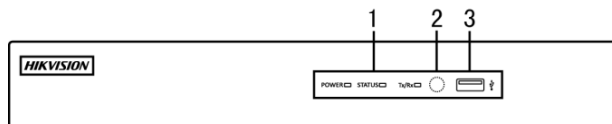


Figure 1. 1 Front Panel of DS-7204HFHI-SE & DS-7200HFHI-SL



Figure 1. 2 Front Panel of DS-7208HFHI-SE

Table 1. 1 Description of Front Panel

No.	Name	Function Description
1	POWER	Power indicator turns yellow when the power switch on the real panel is turned on.
	STATUS	Status indicator blinks red when data is being read from or written to HDD.
	TX/RX	TX/RX indicator blinks yellow when network connection is functioning properly.
2	IR Receiver	Receiver for IR remote
3	USB Interfaces	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).

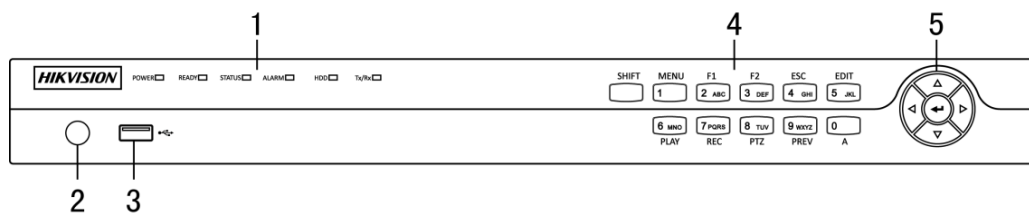


Figure 1. 3 Front Panel of DS-7200HFHI-ST

Table 1. 2 Description of Control Panel Buttons

No.	Name	Function Description
1	POWER	Power indicator turns yellow once the power switch turns on.
	READY	Ready indicator turns yellow when system is running.
	STATUS	Status indicator turns red when SHIFT mode is on.
	ALARM	Alarm indicator turns red when a sensor alarm is detected.
	HDD	HDD indicator blinks red when data is being read from or written to HDD.
	TX/RX	TX/RX indicator blinks yellow when network connection is functioning properly.

No.	Name		Function Description
2	IR Receiver		Receiver for IR remote.
3	USB Interface		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
4	Composite Keys	SHIFT	Switch between the numeric or letter input and functions of the composite keys. (Input letter or numbers when the light is out; Realize functions when the light is red.)
		1/MENU	Enter numeral “1”; Access the main menu interface.
		2/ABC/F1	Enter numeral “2”;
			Enter letters “ABC”;
			The F1 button when used in a list field will select all items in the list.
			In PTZ Control mode, it will turn on/off PTZ light and when the image is zoomed in, the key is used to zoom out.
		3/DEF/F2	Enter numeral “3”;
			Enter letters “DEF”;
			The F2 button is used to change the tab pages.
			In PTZ control mode, it zooms in the image.
		4/GHI/ESC	Enter numeral “4”;
			Enter letters “GHI”;
			Exit and back to the previous menu.
		5/JKL/EDIT	Enter numeral “5”;
			Enter letters “JKL”;
			Delete characters before cursor;
			Check the checkbox and select the ON/OFF switch;
			Start/stop record clipping in playback.
		6/MNO/PLAY	Enter numeral “6”;
			Enter letters “MNO”;
			Playback, for direct access to all-day playback interface.
		7/PQRS/REC	Enter numeral “7”;
			Enter letters “PQRS”;
			Open the manual record interface.
		8/TUV/PTZ	Enter numeral “8”;
			Enter letters “TUV”;
			Access PTZ control interface.
		9/WXYZ/PREV	Enter numeral “9”;
Enter letters “WXYZ”;			
Multi-channel display in live view.			
0/A	Enter numeral “0”;		
	Shift the input methods in the editing text field.(Upper and lowercase, alphabet, symbols or numeric input).		
5	DIRECTION		The DIRECTION buttons are used to navigate between different fields and items in menus.
			In the Playback mode, the Up and Down button is used to speed up and slow down recorded video. The Left and Right button will select the next and previous record files.

No.	Name	Function Description
	ENTER	In Live View mode, these buttons can be used to cycle through channels.
		In PTZ control mode, it can control the movement of the PTZ camera.
		The ENTER button is used to confirm selection in any of the menu modes.
		It can also be used to <i>tick</i> checkbox fields.
		In Playback mode, it can be used to play or pause the video.
		In single-frame Playback mode, pressing the button will advance the video by a single frame.
		In Auto-switch mode, it can be used to stop /start auto switch.

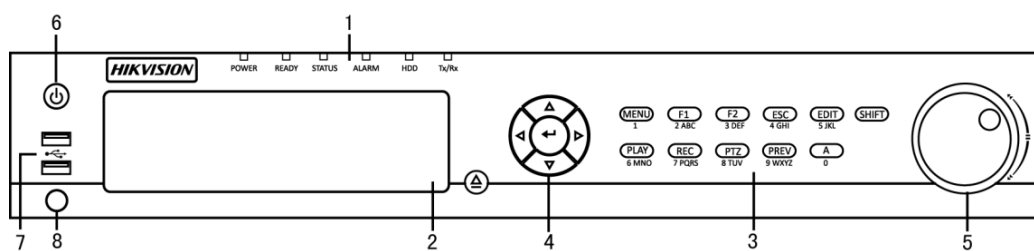


Figure 1. 4 Front Panel of DS-7300HFHI-ST

Table 1. 3 Description of Front Panel

No.	Name	Function Description
1	POWER	Power indicator lights in green when DVR is powered up.
	READY	Ready indicator is normally green, indicating that the DVR is functioning properly.
	STATUS	Indicator turns green when DVR is controlled by an IR remote control with the address from 1~254; Indicator turns red when the SHIFT button is used; Indicator does not light when the DVR is controlled by a keyboard or by the IR remote control with the address of 255; Indicator turns green when the DVR is controlled by IR remote control (with the address from 1~254) and keyboard at the same time, and the SHIFT button is not used; Indicator turns orange : (a) when the DVR is controlled by IR remote control (with the address from 1~254) and keyboard at the same time and the SHIFT button is used as well; (b) when the DVR is controlled by IR remote control (with the address from 1~254) and the SHIFT button is used.
	ALARM	Alarm indicator turns red when a sensor alarm is detected.
	HDD	HDD indicator blinks in red when data is being read from or written to HDD.
	TX/RX	TX/RX indicator blinks in green when network connection is functioning properly.
	DVD-R/W	Slot for DVD-R/W.
2	Composite Keys	SHIFT
3		Switch between the numeric or letter input and functions of the composite keys. (Input letter or numbers when the light is out; Realize functions when the light is red.)

No.	Name	Function Description
		1/MENU Enter numeral "1"; Access the main menu interface.
		2/ABC/F1 Enter numeral "2"; Enter letters "ABC"; The F1 button when used in a list field will select all items in the list. In PTZ Control mode, it will turn on/off PTZ light and when the image is zoomed in, the key is used to zoom out. In live view or playback mode, the F1 button can be used to switch between main and spot video output.
		3/DEF/F2 Enter numeral "3"; Enter letters "DEF"; The F2 button is used to change the tab pages. In PTZ control mode, it zooms in the image.
		4/GHI/ESC Enter numeral "4"; Enter letters "GHI"; Exit and back to the previous menu.
		5/JKL/EDIT Enter numeral "5"; Enter letters "JKL"; Delete characters before cursor; Check the checkbox and select the ON/OFF switch; Start/stop record clipping in playback.
		6/MNO/PLAY Enter numeral "6"; Enter letters "MNO"; In Playback mode, it is used for direct access to playback interface.
		7/PQRS/REC Enter numeral "7"; Enter letters "PQRS"; Manual record, for direct access to manual record interface; manually enable/disable record.
		8/TUV/PTZ Enter numeral "8"; Enter letters "TUV"; Access PTZ control interface.
		9/WXYZ/PREV Enter numeral "9"; Enter letters "WXYZ"; Multi-channel display in live view.
		0/A Enter numeral "0"; Shift the input methods in the editing text field. (Upper and lowercase, alphabet, symbols or numeric input).
4	DIRECTION	The DIRECTION buttons are used to navigate between different fields and items in menus.
		In the Playback mode, the Up and Down button is used to speed up and slow down recorded video. The Left and Right button will select the next and previous record files.
		In Live View mode, these buttons can be used to cycle through channels.
		In PTZ control mode, it can control the movement of the PTZ camera.

No.	Name	Function Description
	ENTER	The ENTER button is used to confirm selection in any of the menu modes.
		It can also be used to <i>tick</i> checkbox fields.
		In Playback mode, it can be used to play or pause the video.
		In single-frame Playback mode, pressing the button will advance the video by a single frame.
		In Auto-switch mode, it can be used to stop /start auto switch.
5	JOG SHUTTLE Control	Move the active selection in a menu. It will move the selection up and down.
		In Live View mode, it can be used to cycle through different channels.
		In the Playback mode, it can be used to jump 30s forward/backward in video files.
		In PTZ control mode, it can control the movement of the PTZ camera.
6	POWER	Power on/off switch.
7	USB Interface	Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
8	IR Receiver	Receiver for IR remote control.

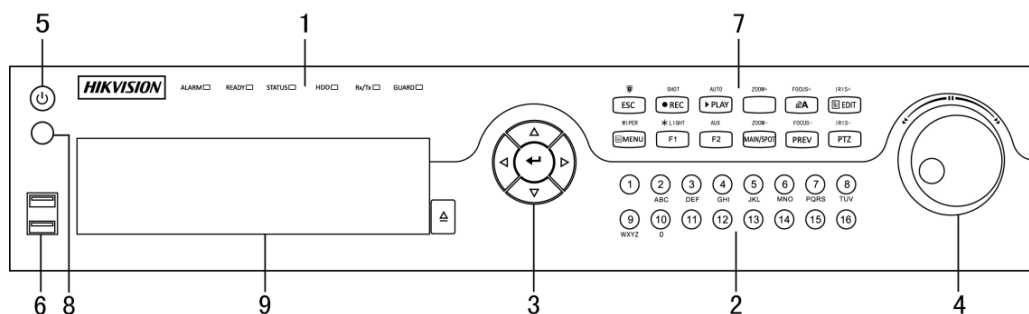


Figure 1. 5 Front Panel of DS-8100HFHI-ST

Table 1. 4 Description of Front Panel

No.	Name	Function Description
1	Status Indicators	ALARM Alarm indicator turns red when a sensor alarm is detected.
		READY Ready indicator is normally blue, indicating that the DVR is functioning properly.
		STATUS Indicator turns blue when DVR is controlled by an IR remote. Indicator turns red when controlled by a keyboard and orange when IR remote and keyboard is used at the same time. Indicator does not light when the DVR is controlled by the IR remote control with the address of 255.
		HDD HDD indicator blinks in red when data is being read from or written to HDD.
		TX/RX TX/RX indicator blinks in blue when network connection is functioning properly.
		GUARD Indicator turns blue when the device is armed; Indicator does not light when the device is disarmed; The arm/disarm state can be initiated by pressing and holding on the ESC button for more than 3 seconds in live view mode.

No.	Name		Function Description
2	Alphanumeric Buttons		Switch to the corresponding channel in Live view or PTZ Control mode.
			Input numbers and characters in Edit mode.
			Switch between different channels in Playback mode.
			The light of the button is blue when the corresponding channel is recording; it is red when the channel is in network transmission status; it is pink when the channel is recording and transmitting.
3	Control Buttons	DIRECTION	The DIRECTION buttons are used to navigate between different fields and items in menus.
			In the Playback mode, the Up and Down button is used to speed up and slow down recorded video. The Left and Right button will select the next and previous record files.
			In Live View mode, these buttons can be used to cycle through channels.
			In PTZ control mode, it can control the movement of the PTZ camera.
		ENTER	The ENTER button is used to confirm selection in any of the menu modes.
			It can also be used to <i>tick</i> checkbox fields.
			In Playback mode, it can be used to play or pause the video.
			In single-frame Playback mode, pressing the button will advance the video by a single frame.
			In Auto-switch mode, it can be used to stop /start auto switch.
4	JOG SHUTTLE Control		Move the active selection in a menu. It will move the selection up and down.
			In Live View mode, it can be used to cycle through different channels.
			In the Playback mode: the outer ring is used to speed up or slow down the record files and the inner ring is used to jump 30s forward/backward in records files.
			In PTZ control mode, it can control the movement of the PTZ camera.
5	POWER		Power on/off switch.
6	USB Interfaces		Universal Serial Bus (USB) ports for additional devices such as USB mouse and USB Hard Disk Drive (HDD).
7	Composite Keys	ESC	Exit and back to the previous menu.
			Arm/disarm the DVR in live view mode.
		REC/SHOT	Enter the Manual Record setting menu.
			In PTZ control settings, press the button and then you can call a PTZ preset by pressing Numeric button.
			It is also used to turn audio on/off in the Playback mode.
		PLAY/AUTO	Enter the Playback menu;
			Auto scan in the PTZ Control mode.
		ZOOM+	Zoom in the PTZ camera in the PTZ Control setting.
A/FOCUS+	Adjust focus in the PTZ Control menu.		

No.	Name	Function Description
		It is also used to switch between input methods (upper and lowercase alphabet, symbols and numeric input).
		EDIT/IRIS+
		Edit text fields. When editing text fields, it will also function as a Backspace button to delete the character in front of the cursor.
		On checkbox fields, pressing the button will <i>tick</i> the checkbox.
		In PTZ Control mode, the button adjusts the iris of the camera.
		In Playback mode, it can be used to generate video clips for backup.
		Enter/exit the folder of USB device and eSATA HDD.
		MAIN/SPOT/ZOOM-
		Switch between main and spot output.
		In PTZ Control mode, it can be used to zoom out the image.
		F1/ LIGHT
		Select all items on the list when used in a list field.
		In PTZ Control mode, it will turn on/off PTZ light (if applicable).
		In Playback mode, it is used to switch between play and reverse play.
		F2/ AUX
		Cycle through tab pages.
		In synchronous playback mode, it is used to switch between channels.
		MENU/WIPER
		Press the button will help you return to the Main menu (after successful login).
		Press and hold the button for 5 seconds will turn off audible key beep.
		In PTZ Control mode, the MENU/WIPER button will start wiper (if applicable).
		In Playback mode, it is used to show/hide the control interface.
		PREV/FOCUS-
		Switch between single screen and multi-screen mode.
		In PTZ Control mode, it is used to adjust the focus in conjunction with the A/FOCUS+ button.
		PTZ/IRIS-
		Enter the PTZ Control mode.
		In the PTZ Control mode, it is used to adjust the iris of the PTZ camera.
8	IR Receiver	Receiver for IR remote control.
9	DVD-R/W	Slot for DVD-R/W.

1.2 IR Remote Control Operations

The DVR may also be controlled with the included IR remote control, shown in Figure 1. 6.



Batteries (2×AAA) must be installed before operation.

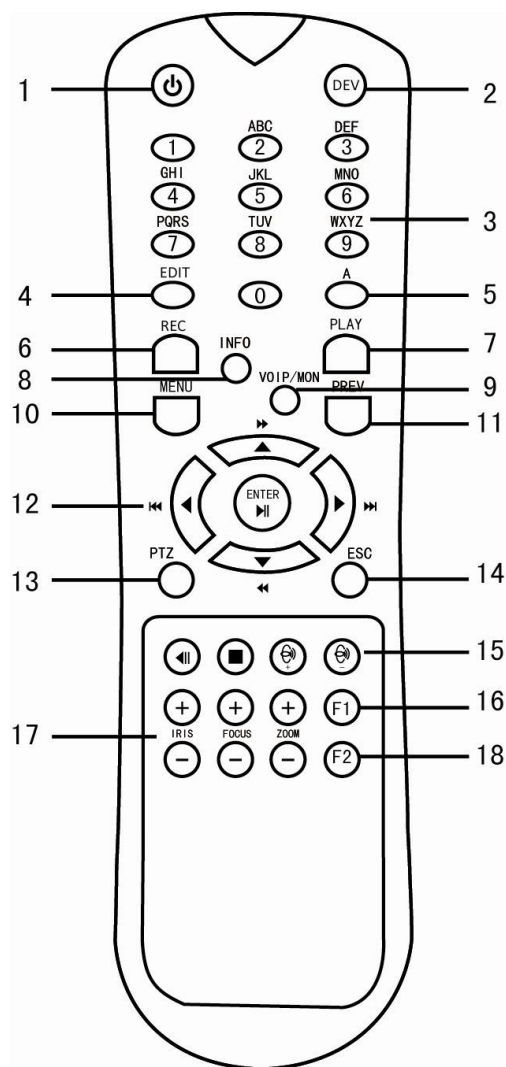


Figure 1. 6 Remote Control

The keys on the remote control closely resemble the ones found on the front panel. Refer to Table 1. 5, they include:

Table 1. 5 Description of the IR Remote Control Buttons

No.	Name	Description
1	POWER	Power on/off the device.
2	DEV	Enables/Disables Remote Control.

No.	Name	Description
3	Alphanumeric Buttons	Same as Alphanumeric buttons on front panel.
4	EDIT Button	Same as EDIT/IRIS+ button on front panel.
5	A Button	Same as A/FOCUS+ button on front panel.
6	REC Button	Same as REC/SHOT button on front panel.
7	PLAY Button	Same as the PLAY/AUTO button on front panel.
8	INFO Button	Same as the ZOOM+ button on front panel.
9	VOIP/MON Button	Same as the MAIN/SPOT/ZOOM- button on front panel.
10	MENU Button	Same as the MENU/WIPER button on front panel.
11	PREV Button	Same as the PREV/FOCUS- button on front panel.
12	DIRECTION/ENTER Buttons	Same as the DIRECTION/ENTER buttons on front panel.
13	PTZ Button	Same as the PTZ/IRIS- button on front panel.
14	ESC Button	Same as the ESC button on front panel.
15	RESERVED	Reserved for future usage.
16	F1 Button	Same as the F1/LIGHT button on front panel.
17	PTZ Control Buttons	Buttons to adjust the iris, focus and zoom of a PTZ camera.
18	F2 Button	Same as the F2/AUX button on front panel.

Troubleshooting Remote Control:

Note: Make sure you have install batteries properly in the remote control. And you have to aim the remote control at the IR receiver in the front panel.

If there is no response after you press any button on the remote, follow the procedure below to troubleshoot.

Steps:

1. Go into Menu > Settings > General > More Settings by operating the front control panel or the mouse.
2. Check and remember DVR ID#. The default ID# is 255. This ID# is valid for all IR remote controls.
3. Press the DEV button on the remote control.
4. Enter the DVR ID# in step 2.
5. Press the ENTER button on the remote.

If the Status indicator on the front panel turns blue, the remote control is operating properly. If the Status indicator does not turn blue and there is still no response from the remote, please check the following:

1. Batteries are installed correctly and the polarities of the batteries are not reversed.
2. Batteries are fresh and not out of charge.
3. IR receiver is not obstructed.

If the remote still cannot function properly, please change the remote and try again, or contact the device provider.

1.3 USB Mouse Operation

A regular 3-button (Left/Right/Scroll-wheel) USB mouse can also be used with this DVR. To use a USB mouse:

1. Plug USB mouse into one of the USB interfaces on the front panel of the DVR.
2. The mouse should automatically be detected. If in a rare case that the mouse is not detected, the possible reason may be that the two devices are not compatible, please refer to the recommended the device list from your provider.

The operation of the mouse:

Table 1. 6 Description of the Mouse Control

Name	Action	Description
Left-Click	Single-Click	Live view: Select channel and show the quick set menu. Menu: Select and enter.
	Double-Click	Live view: Switch between single-screen and multi-screen.
	Click and Drag	PTZ control: Wheeling. Privacy mask and motion detection: Select target area. Digital zoom-in: Drag and select target area. Live view: Drag channel/time bar.
Right-Click	Single-Click	Live view: Show menu. Menu: Exit current menu to upper level menu.
Scroll-Wheel	Scrolling up	Live view: Previous screen. Menu: Previous item.
	Scrolling down	Live view: Next screen. Menu: Next item.

1.4 Input Method Description



Figure 1. 7 Soft Keyboard

Description of the buttons on the soft keyboard:

Table 1. 7 Description of the Soft Keyboard Icons

Icons	Description	Icons	Description
	English		Capital English
	Numbers		Symbols
	Lowercase/Uppercase		Backspace
	Space		Enter
	Exit		

1.5 Rear Panel

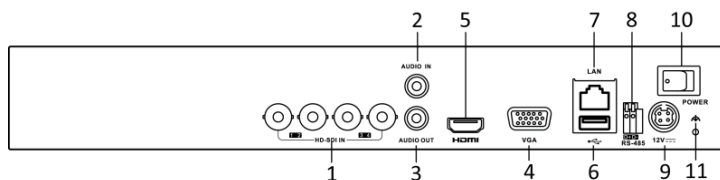


Figure 1.8 DS-7204HFHI-SL

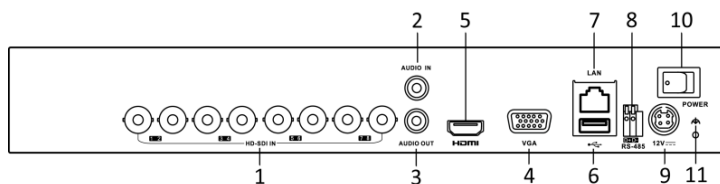


Figure 1.9 DS-7208HFHI-SL

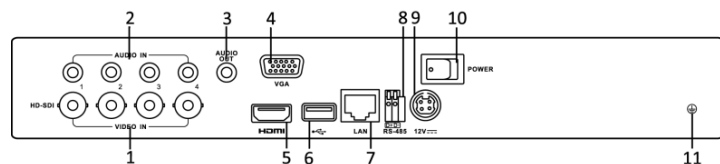


Figure 1.10 DS-7204HFHI-SE

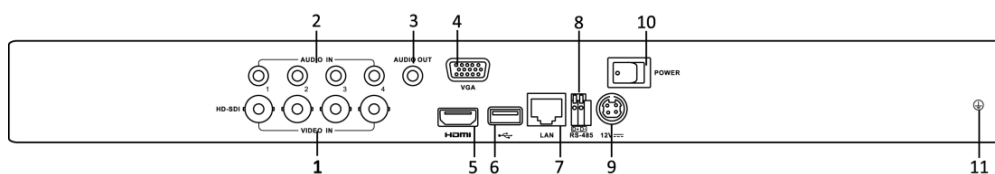


Figure 1.11 DS-7204HFHI-ST

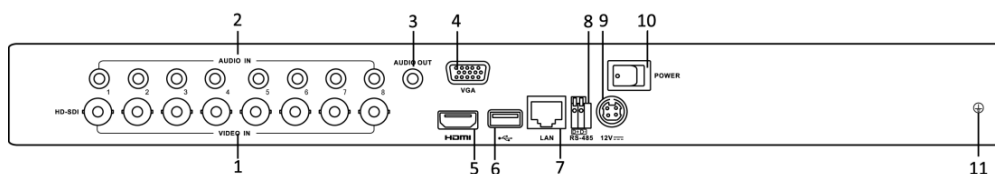


Figure 1.12 DS-7208HFHI-SE and DS-7208HFHI-ST

No.	Item	Description
1	VIDEO IN	HD-SDI interface for video input.
2	AUDIO IN	RCA connector
3	AUDIO OUT	RCA connector
4	VGA	DB15 connector for VGA output. Display local video output and menu.

No.	Item	Description
5	HDMI	HDMI video output connector.
6	USB Port	Universal Serial Bus (USB) port for additional devices.
7	Network Interface	Connector for network
8	RS-485 Interface	Connector for RS-485 devices.
9	Power Supply	DC 12V power supply.
10	Power Switch	Switch for turning on/off the device.
11	GND	Ground

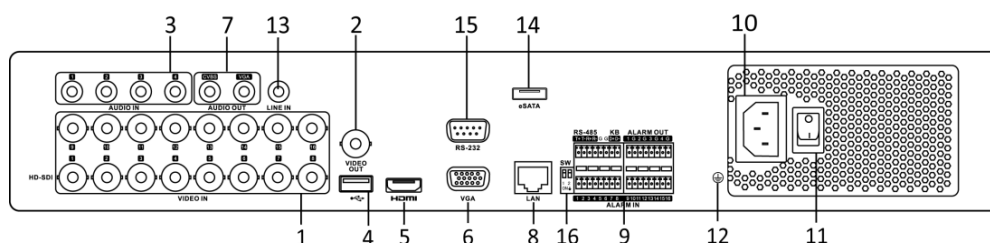


Figure 1. 13 DS-7300HFHI-ST

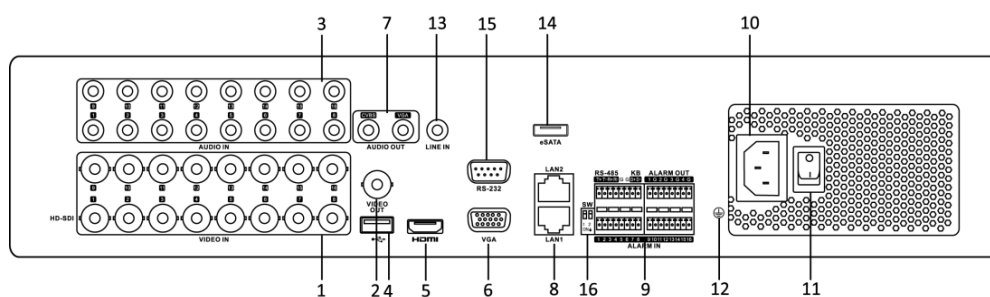


Figure 1. 14 DS-8100HFHI-ST

No.	Item	Description
1	VIDEO IN	HD-SDI interface for video input.
2	VIDEO OUT	BNC connector for video output.
3	AUDIO IN	RCA connector
4	USB Port	Universal Serial Bus (USB) port for additional devices.
5	HDMI	HDMI video output connector.
6	VGA	DB15 connector for VGA output. Display local video output and menu.
7	AUDIO OUT	RCA connector
8	Network Interface	Connector for network
9	RS-485 Interface	Connector for RS-485 devices. T+ and T- pins connect to R+ and R- pins of PTZ receiver respectively.
		D+, D- pin connects to Ta, Tb pin of controller. For cascading devices, the first DVR's D+, D- pin should be connected with the D+, D- pin of the next DVR.
		Connector for alarm input.
		Connector for alarm output.
10	Power Supply	AC 100 ~ 240V power supply.
11	Power Switch	Switch for turning on/off the device.

No.	Item	Description
12	GND	Ground
13	LINE IN	BNC connector for audio input.
14	eSATA	Connects external SATA HDD, CD/DVD-RW.
15	RS-232 Interface	Connector for RS-232 devices.
16	Termination Switch	RS-485 termination switch. Up position is not terminated. Down position is terminated with 120Ω resistance.

Chapter 2 Getting Started

2.1 Starting Up and Shutting Down the DVR

Purpose:

Proper startup and shutdown procedures are crucial to expanding the life of the DVR.

Before you start:

Check that the voltage of the extra power supply is the same with the DVR's requirement, and the ground connection is working properly.

Starting up the DVR

Steps:

1. Check the power supply is plugged into an electrical outlet. It is **HIGHLY** recommended that an Uninterruptible Power Supply (UPS) be used in conjunction with the device.
2. Turn on the power switch on the rear panel, and the Power indicator LED should turn on indicating that the unit begins to start up.
3. After startup, the Power indicator LED remains on.

Shutting down the DVR

Steps:

There are two proper ways to shut down the DVR. To shut down the DVR:

- **OPTION 1: Standard shutdown**

1. Enter the Shutdown menu.

Menu > Shutdown

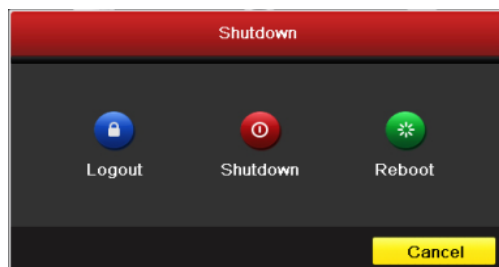


Figure 2. 1 Shutdown Menu

2. Select the **Shutdown** button.
3. Click the **Yes** button.
4. Turn off the power switch on the rear panel when the note appears (for DS-7200HFHI-SE and DS-7200HFHI-SL series only).

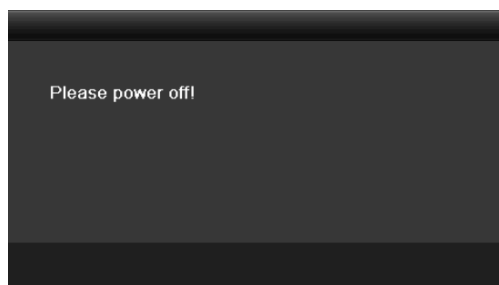


Figure 2. 2 Shutdown Tips

- **OPTION 2: By operating the front panel (for DS-7300HFHI-ST and DS-8100HFHI-ST series)**

1. Press and hold the POWER button on the front panel for 3 seconds.
2. Enter the administrator's username and password in the dialog box for authentication.
3. Click the **Yes** button.



- Do not press the POWER button again when the system is shutting down.
- The device (exclude DS-7200HFHI-SL&SE) remains standby mode after shutting down, and the POWER indicator turns red; you can turn on the device by pressing the POWER button on the remote control.

Rebooting the DVR

While in the Shutdown menu (Figure 2. 1), you can also reboot the DVR.

Steps:

1. Enter the **Shutdown** menu by clicking Menu > Shutdown.
2. Click the **Logout** button to log out or the **Reboot** button to reboot the DVR.

2.2 Using the Wizard for Basic Configuration

By default, the Setup Wizard will start once the DVR has loaded, as shown in Figure 2. 3.

Steps:

1. Please select the system language in the drop-down list on your demand.

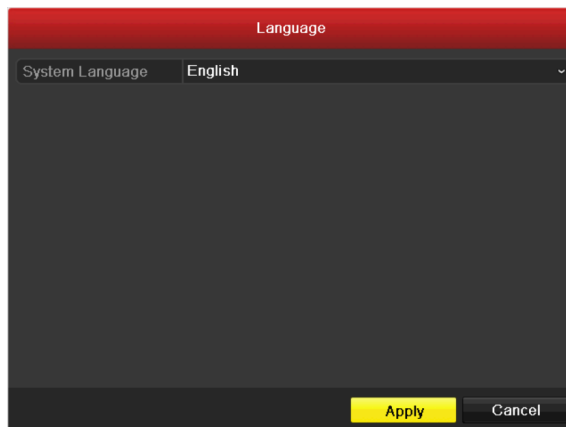


Figure 2. 3 Resolution Selection

2. The Setup Wizard can walk you through some important settings of the DVR. If you do not want to use the Setup Wizard at this time, click the **Cancel** button. You can also choose to use the Setup Wizard next time by leaving the “Start wizard when DVR starts?” checkbox in checked status.

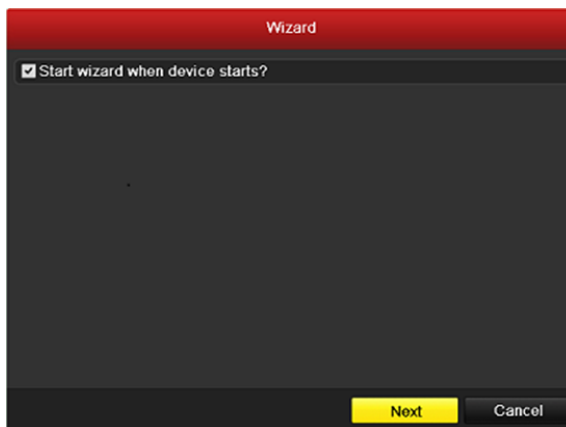


Figure 2. 4 Start Wizard Interface

3. Click **Next** button on the Wizard window to enter the **Login** window, as shown in Figure 2. 5.

Figure 2.5 Login Window

4. Enter the admin password. By default, the password is 12345.
5. To change the admin password, check the **New Admin Password** checkbox. Enter the new password and confirm the password in the given fields.
6. Click the **Next** button to enter the date and time settings window, as shown in Figure 2.6.

Figure 2.6 Date and Time Settings

7. After the time settings, click **Next** button which will take you back to the Network Setup Wizard window, as shown in Figure 2.7.

DS-7204HFHI-SL

Wizard

Working Mode	Multi-address
Select NIC	LAN1
NIC Type	10M/100M/1000M Self-adaptive
Enable DHCP	<input type="checkbox"/>
IPv4 Address	172 . 6 . 21 . 110
IPv4 Subnet Mask	255 . 255 . 255 . 0
IPv4 Default Gateway	172 . 6 . 21 . 1
Preferred DNS Server	
Alternate DNS Server	
Default Route	LAN1

Previous Next Exit

DS-8100HFHI-ST

Wizard

NIC Type	10M/100M/1000M Self-adaptive
Enable DHCP	<input type="checkbox"/>
IPv4 Address	172 . 9 . 4 . 65
IPv4 Subnet Mask	255 . 255 . 255 . 0
IPv4 Default Gateway	172 . 9 . 4 . 1
Preferred DNS Server	
Alternate DNS Server	

Previous Next Cancel

Other Models

Figure 2. 7 Network Configuration

8. Click **Next** button after you having configured the network parameters, which will take you to the **HDD Management** window, shown in Figure 2. 8.

Wizard

<input type="checkbox"/> L...	Capacity	Status	Property	Type	Free Space
<input checked="" type="checkbox"/> 1	931.51GB	Normal	R/W	Local	910GB

Init

Previous Next Cancel

Figure 2. 8 HDD Management

9. To initialize the HDD, click the **Init** button. Initialization will remove all the data saved in the HDD.
10. Click **Next** button to enter the Record Settings window, as shown in Figure 2. 9.



Figure 2. 9 Record Settings

11. Click **Copy** to copy the recording setting to other cameras.
12. Click **OK** to save the settings and exit the wizard.

Chapter 3 Live View


 
 
3.1 Introduction of Live View

Live view shows you the video image getting from each camera in real time. The DVR will automatically enter Live View mode when powered on. It is also at the very top of the menu hierarchy, thus hitting the ESC many times (depending on which menu you're on) will bring you to the Live View mode.

Live View Icons

In the live view mode, there are icons at the right top of the screen for each channel, showing the status of the record and alarm in the channel, so that you can know whether the channel is recorded, or whether there are alarms occur as soon as possible.

Table 3. 1 Description of Live View Icons

Icons	Description
	Alarm (video loss, tampering, motion detection or sensor alarm)
	Record (manual record, schedule record, motion detection or alarm triggered record)
	Alarm & Record

3.2 Operations in Live View Mode

In live view mode, there are many functions provided. The functions are listed below.

- **Single Screen:** show only one screen on the monitor.
- **Multi-screen:** show multiple screens on the monitor simultaneously.
- **Auto-switch:** the screen is auto switched to the next one. And you must set the dwell time for each screen on the configuration menu before enabling the auto-switch. Menu>Configuration>Live View>Dwell Time.
- **Start Recording:** normal record and motion detection record are supported.
- **Quick Set:** select the output mode to Standard, Bright, Gentle or Vivid.
- **Playback:** play back the recorded videos for current day.
- **Aux/Main output switch:** the DVR checks the connection of the output interfaces to define the main and auxiliary output interfaces. The priority level for the main and aux output is HDMI>VGA>CVBS. This means if the HDMI is used, it will be the main output. If the HDMI is not used, the VGA output will be the main output. See the table below.

Table 3.2 Priorities of Interfaces

	HDMI	VGA	CVBS	Main output	Auxiliary output
1	√	√	√	HDMI	VGA
2	√	×	√	HDMI	CVBS
3	×	√	√	VGA	CVBS
4	×	×	√	CVBS	

- √ means the interface is in use, × means the interface is out of use or the connection is invalid. And the HDMI, VGA and CVBS can be used at the same time.

When the aux output is enabled, the main output cannot do any operation, and you can do some basic operation on the live view mode for the Aux output.

3.2.1 Front Panel Operation





This function is not supported by DS-7200HFHI-SL and DS-7200HFHI-SE series.

Table 3.3 Front Panel Operation in Live View

Functions	Front Panel Operation
Show single screen	Press the corresponding Alphanumeric button. E.g. Press 2 to display only the screen for channel 2.
Show multi-screen	Press the PREV button.
Manually switch screens	Next screen: right direction button. Previous screen: left direction button.
Auto-switch	Press Enter button.
Playback	Press Play button.


3.2.2 Using the Mouse in Live View

Table 3.4 Mouse Operation in Live View

Name	Description
Menu	Enter the main menu of the system by right clicking the mouse.
Single Screen	Switch to the single full screen by choosing channel number from the dropdown list.
Multi-screen	Adjust the screen layout by choosing from the dropdown list.
Previous Screen	Switch to the previous screen.
Next Screen	Switch to the next screen.
Start/Stop Auto-switch	<p>Enable/disable the auto-switch of the screens.</p>  <p>The <i>dwelt time</i> of the live view configuration must be set before using Start Auto-switch.</p>
Start Recording	Start recording of all channels, Normal Record and Motion Detection Recording are selectable from the dropdown list.
Quick Set	Output Mode is configurable with Standard, Bright, Gentle and Vivid options.
Playback	Enter the playback interface and start playing back the video of the selected channel immediately.
Aux Monitor	<p>Switch to the auxiliary output mode and the operation for the main output is disabled.</p>  <p>If you enter Aux monitor mode and the Aux monitor is not connected, the mouse operation is disabled; you need to switch back to the Main output with the F1 button on front panel or VOIP/MON button on IR remote control and then press the Enter button.</p>



If the corresponding camera supports intelligent function, the Reboot Intelligence option will be included when right-clicking mouse on this camera.

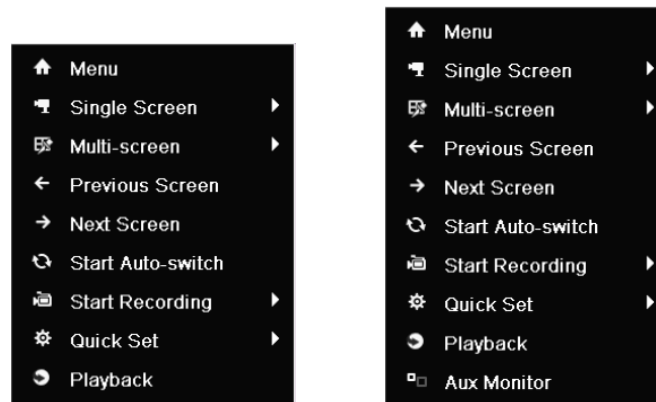

DS-7200HFHI-SL&SE&ST

DS-7300HFHI-ST & DS-8100HFHI-ST

Figure 3.1 Right-click Menu

3.2.3 Using an Auxiliary Monitor

Certain features of the Live View are also available while in an Aux monitor. These features include:

- **Single Screen:** Switch to a full screen display of the selected camera. Camera can be selected from a dropdown list.
- **Multi-screen:** Switch between different display layout options. Layout options can be selected from a dropdown list.
- **Previous Screen:** When displaying less than the maximum number of cameras in Live View, clicking this feature will switch to the previous set of displays.
- **Next Screen:** When displaying less than the maximum number of cameras in Live View, clicking this feature will switch to the next set of displays.
- **Quick Set:** Set the video output mode to Standard, Bright, Gentle or Vivid.
- **Menu Output Mode:** Select the menu output mode to HDMI/VGA, Main CVBS or Auto.
- **Main Monitor:** Enter Main operation mode.



In the live view mode of the main output monitor, the menu operation is not available while Aux output mode is enabled.

3.2.4 Main/Aux Output Switching

When the HDMI/VGA output is configured as the main output, you can perform the following operation to switch to CVBS output as the main output.

Steps:

1. Use the mouse wheel to double-click on the HDMI/VGA output screen, and the following message box pops up:

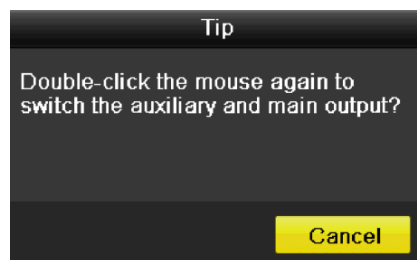


Figure 3. 2 Switch Main and Aux Output

2. Use the mouse wheel to double-click on the screen again to switch to the Aux output, or click **Cancel** to cancel the operation.
3. Select the **Menu Output Mode** to **Main CVBS** from the right-click menu on the CVBS output monitor.

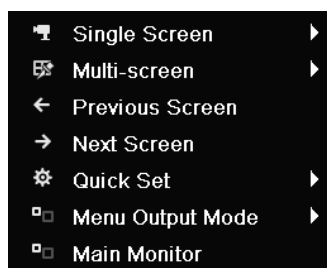


Figure 3. 3 Right-click Menu on CVBS Output Monitor

4. On the pop-up message box, click **Yes** to restart the device to enable the CVBS output as the main output.



You can select the Menu Output Mode under Menu>Configuration>More Settings to Auto or HDMI/VGA and then restart the device to switch the main output back to HDMI/VGA output.


 




3.2.5 Quick Setting Toolbar in Live View Mode

On the screen of each channel, there is a quick setting toolbar which shows when you point the mouse to the bottom of the screen.



Figure 3. 4 Quick Setting Toolbar

Table 3. 5 Description of Quick Setting Toolbar Icons

Icons	Description	Icons	Description	Icons	Description
	Enable/Disable Manual Record		Instant Playback		Mute/Audio on
	Close Live View		PTZ Control		Digital Zoom



Instant Playback only shows the record in last five minutes. If no record is found, it means there is no

record during the last five minutes.



Digital Zoom can zoom in the selected area to the full screen. Click and draw to select the area to zoom in, as shown in Figure 3. 5.



Figure 3. 5 Digital Zoom

3.3 Channel-zero Encoding



This chapter is only applicable to DS-7300HFHI-ST and DS-8100HFHI-ST.

Purpose:

Sometimes you need to get a remote view of many channels in real time from web browser or CMS(Client Management System) software, in order to decrease the bandwidth requirement without affecting the image quality, channel-zero encoding is supported as an option for you.

Steps:

1. Enter the **Live View** Settings interface.

Menu> Configuration> Live View

2. Select the **Channel-Zero Encoding** tab.

Enable Channel-Zero Enc...	<input checked="" type="checkbox"/>
Frame Rate	12fps
Max. Bitrate Mode	General
Max. Bitrate(Kbps)	1024

Figure 3. 6 Live View- Channel-Zero Encoding

3. Check the checkbox after **Enable Channel-Zero Encoding**.
4. Configure the Frame Rate, Max. Bitrate Mode and Max. Bitrate.
5. Click the **Apply** button to activate the settings.

After you set the Channel-Zero encoding, you can get a view in the remote client or web browser of 16 channels in one screen.

3.4 Adjusting Live View Settings

Purpose:

Live View settings can be customized according to different needs. You can configure the output interface, dwell time for screen to be shown, mute or turning on the audio, the screen number for each channel, etc.

Steps:

1. Enter the Live View Settings interface.

Menu> Configuration> Live View

Video Output Interface	VGA/HDMI
Live View Mode	2 * 2
Dwell Time	No Switch
Enable Audio Output	<input type="checkbox"/>
Event Output	VGA/HDMI
Full Screen Monitoring Dwell Time	10s

Figure 3. 7 Live View-General

The settings available in this menu include:

- **Video Output Interface:** Designates the output to configure the settings for. Outputs include HDMI (depends on the model) and VGA.
 - **Live View Mode:** Designates the display mode to be used for Live View.
 - **Dwell Time:** The time in seconds to *dwell* between switching of channels when enabling auto-switch in Live View.
 - **Enable Audio Output:** Enables/disables audio output for the selected video output.
 - **Event Output:** Designates the output to show event video.
 - **Full Screen Monitoring Dwell Time:** The time in seconds to show alarm event screen.
2. Set the camera order.

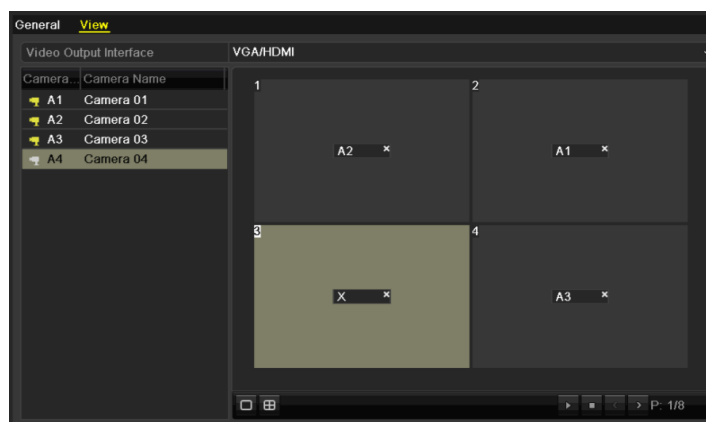


Figure 3. 8 Live View- Camera Order

- 1) Select **View** tab.
- 2) Click a window to select it, and then double-click a camera name in the camera list you would like to display. Setting an 'X' means the window will not display any channel.
- 3) Click the **Apply** button.

3.5 User Logout

Purpose:

After logging out, the monitor turns to the live view mode and if you want to do some operation, you need to enter user name and password to log in again.

Steps:

1. Enter the Shutdown menu.

Menu>Shutdown

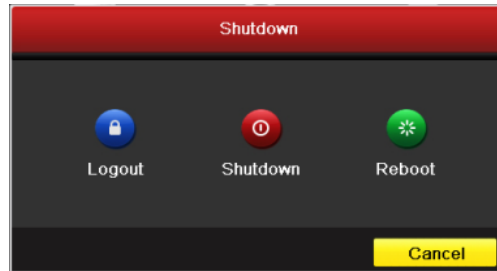


Figure 3. 9 Shutdown

2. Click **Logout**.



After you have logged out the system, menu operation on the screen is invalid. It is required a user name and password to login the system.

Chapter 4 PTZ Controls

4.1 Configuring PTZ Settings

Purpose:

Follow the procedure to set the parameters for PTZ. The configuring of the PTZ parameters should be done before you set the PTZ camera.

Before you start:

Check that the PTZ and the DVR are connected properly through RS-485 interface.

Steps:

1. Enter the PTZ Settings interface.

Menu >Camera> PTZ

General More Settings	
Camera	Analog 1
Baud Rate	9600
Data Bit	8
Stop Bit	1
Parity	None
Flow Ctrl	None
PTZ Protocol	HIKVISION
Address	0
Address range: 0~255	

Figure 4. 1 PTZ- General

2. Choose the camera for PTZ setting next to **Camera** label.
3. Enter the parameters of the PTZ camera.



All the parameters should be exactly the same as the PTZ camera parameters.

4. Click **Copy** if you want to configure same settings to other PTZ cameras.
5. Click **Apply** button to save and exit menu.

4.2 Setting PTZ Presets, Patrols & Patterns

Before you start:

Please make sure that the presets, patrols and patterns should be supported by PTZ protocols.

4.2.1 Customizing Presets

Purpose:

Follow the steps to set the Preset location which you want the PTZ camera to point to when an event takes place.

Steps:

1. Enter the PTZ Control interface.

Menu>Camera>PTZ>More Settings

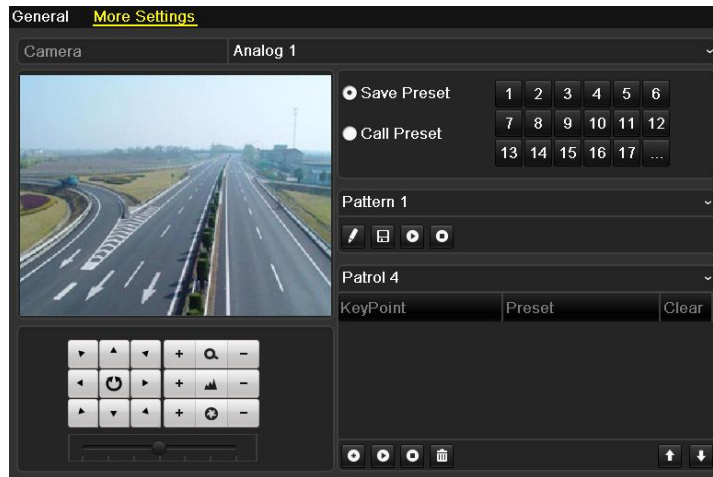


Figure 4. 2 PTZ- More Settings

2. Use the directional button to wheel the camera to the location where you want to set preset.

3. Click the round icon before **Save Preset**.

4. Click the preset number to save the preset.

Repeat the steps2-4 to save more presets. If the number of the presets you want to save is greater than 17, you can click [...] and choose the available numbers.



Figure 4. 3 More Presets

4.2.2 Calling Presets

Purpose:

This feature enables the camera to point to a specified position such as a window when an event takes place.

Call preset in the PTZ setting interface:

Steps:

1. Enter the PTZ Control interface.
Menu>Camera>PTZ>More Settings
2. Check the round icon before **Call Preset**.

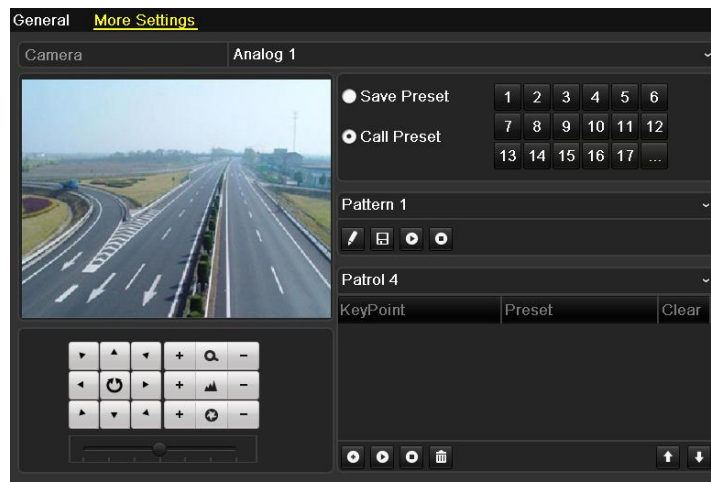


Figure 4. 4 PTZ- Call Preset

3. Choose the preset number.

Call preset in live view mode:

Steps:


1. Press the PTZ button on the front panel or click the PTZ Control icon  in the quick setting bar to enter the PTZ setting menu in live view mode.



Figure 4. 5 PTZ Toolbar

2. Choose **Camera** in the list on the menu.


3. Double-click the preset you want to call in the **Preset** list.

4.2.3 Customizing Patrols

Purpose:

Patrols can be set to move the PTZ to a set of different key points sequentially and have it stay there for a set duration before moving on to the next key point. The key points are corresponding to the presets. The presets can be set following the steps above in *Customizing Presets*.

Steps:

1. Enter the PTZ Control interface.
Menu>Camera>PTZ>More Settings
2. Select patrol number.
3. Select the  under Patrol option box to add key points for the patrol.

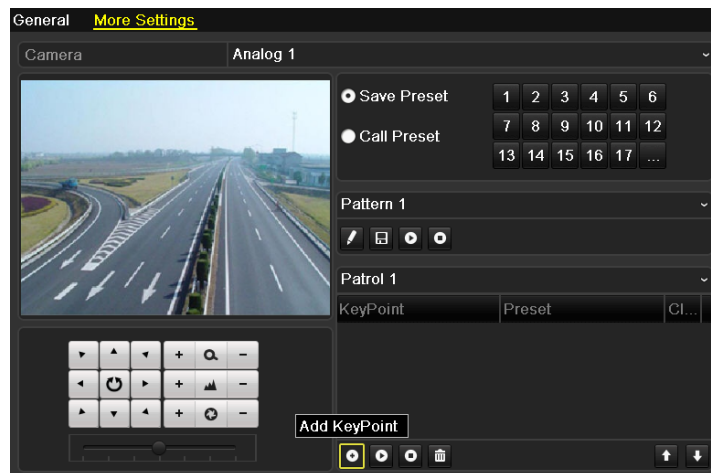


Figure 4. 6 PTZ- Add Key Point

4. Configure key point parameters, such as the key point No., duration of staying for one key point and speed of patrol. The key point is corresponding to the preset.

The **Preset** determines the order at which the PTZ will follow while cycling through the patrol.

The **Duration** refers to the time span to stay at the corresponding key point.

The **Speed** defines the speed at which the PTZ will move from one key point to the next.

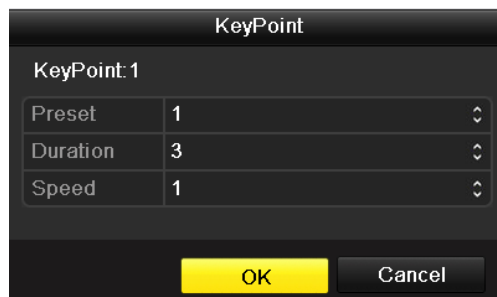




Figure 4. 7 Key point Configuration

5. Click **OK** to save the key point to the patrol.

Repeat the above steps to add more key points.

You can also click  to delete the corresponding key point and click  to delete all the key points.

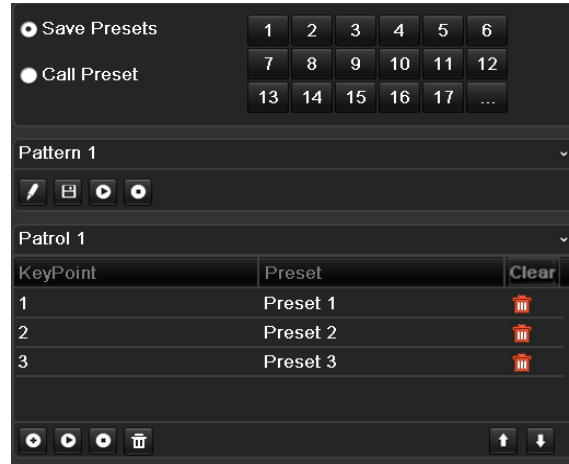


Figure 4. 8 KeyPoints Deletion



4.2.4 Calling Patrols

Purpose:

Calling a patrol makes the PTZ to move according the predefined patrol path.

Calling patrol in the PTZ setting interface:

Steps:

1. In the PTZ setting interface.
Menu> Camera> PTZ> More Settings
2. Select the patrol number, and then click  to call the patrol.
3. Click  to stop it.

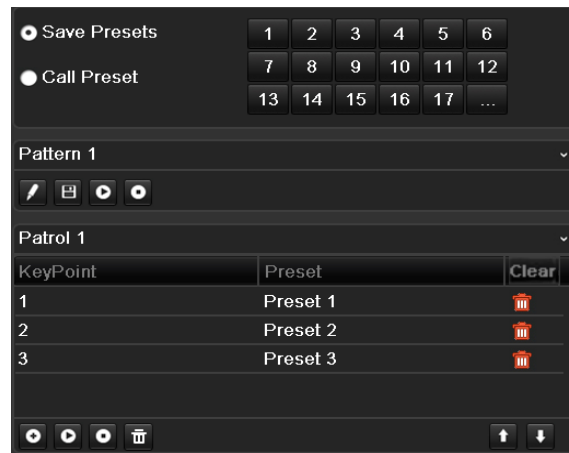



Figure 4. 9 Calling Patrol

Calling patrol in live view mode:

Steps:

1. Press PTZ control on the front panel or on the remote, or click PTZ Control icon  on the quick setting

toolbar, to show the PTZ control panel.


2. Choose **Patrol** on the control bar.
3. Double-click the patrol you want to call, or click to select the patrol and click  to call the patrol.



Figure 4.10 PTZ Panel- Patrol

4.2.5 Customizing Patterns

Purpose:

Patterns can be set by recording the movement of the PTZ. You can call the pattern to make the PTZ movement according to the predefined path.

Steps:

1. Enter the PTZ Control interface.
Menu>Camera>PTZ>More Settings
2. Choose pattern number in the option box.

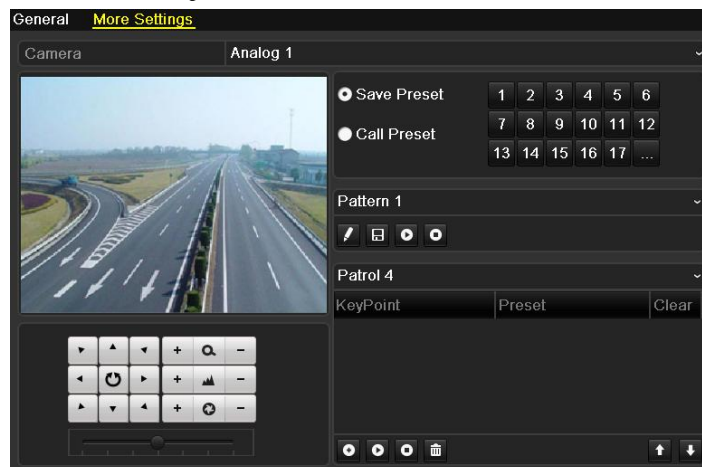




Figure 4.11 PTZ- Pattern

3. Click , and use your mouse to drag the image or click the eight directional buttons in the control box under the image to move the PTZ camera.

The movement of the PTZ is recorded as the pattern.

- Click  to save the pattern.

Repeat the above steps to save more patterns.



4.2.6 Calling Patterns

Purpose:

Follow the procedure to move the PTZ camera according to the predefined patterns.

Calling pattern in the PTZ setting interface

Steps:

- Enter the PTZ Control interface.
- Select the pattern number.
- Click , then the PTZ moves according to the pattern. Click  to stop it.

 


Figure 4. 12 PTZ- Calling Pattern

Call pattern in live view mode.

Steps:




- In the live view mode, press PTZ control on the front panel or on the remote control, or click PTZ Control icon  on the quick setting toolbar.
- And then choose **Pattern** on the control bar.
- Double-click the pattern you want to call, or you can click to select the pattern and click  to call the pattern.



Figure 4. 13 PTZ Panel- Pattern

4.3 PTZ Control Panel

In the Live View mode, you can press the PTZ Control button on the front panel or on the remote control, or choose the PTZ Control icon  to enter the PTZ panel.












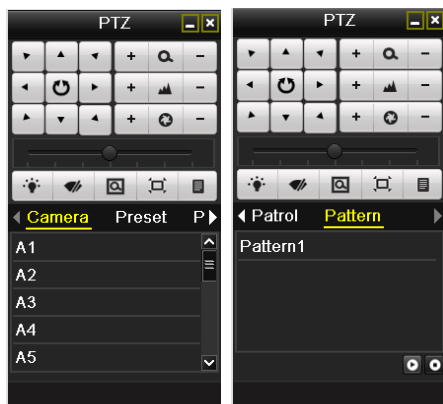






 


Figure 4. 14 PTZ Panel

Table 4. 1 Description of the PTZ panel icons

Icon	Description	Icon	Description	Icon	Description
	Direction button and the auto-cycle button		Zoom+, Focus+, Iris+		Zoom-, Focus-, Iris-
	The speed of the PTZ movement		Light on/off		Wiper on/off
	3D-Zoom		Image Centralization		Preset
	Patrol		Pattern		Menu
	Previous item		Next item		Start pattern/patrol
	Stop the patrol or pattern movement		Minimize windows		Exit

Chapter 5 Record Settings

5.1 Configuring Encoding Parameters

Before you start:

1. Make sure that the HDD has already been installed. If not, please install a HDD and initialize it.
(Menu>HDD>General)

HDD Information								
<input type="checkbox"/> Label	Capacity	Status	Property	Type	Free Space	Gro...	Edit	Del...
<input checked="" type="checkbox"/> 1	931.51GB	Normal	R/W	Local	909GB	1	-	-

Figure 5.1 HDD- General

2. Click **Advance** to check the storage mode of the HDD.
 - 1) Whether the HDD mode is *Quota*, please set the maximum record capacity. For detailed information, see *Chapter 10.5 Configuring Quota Mode*.
 - 2) If the HDD mode is *Group*, you should set the HDD group. For detailed information, see *Chapter 5.8 Configuring HDD Group for Recording*.

Storage Mode															
Mode								Group							
Record on HDD Group								1							
<input checked="" type="checkbox"/> Analog	<input checked="" type="checkbox"/> A1	<input checked="" type="checkbox"/> A2	<input checked="" type="checkbox"/> A3	<input checked="" type="checkbox"/> A4	<input checked="" type="checkbox"/> A5	<input checked="" type="checkbox"/> A6	<input checked="" type="checkbox"/> A7	<input checked="" type="checkbox"/> A8	<input checked="" type="checkbox"/> A9	<input checked="" type="checkbox"/> A10	<input checked="" type="checkbox"/> A11	<input checked="" type="checkbox"/> A12	<input checked="" type="checkbox"/> A13	<input checked="" type="checkbox"/> A14	<input checked="" type="checkbox"/> A15
	<input checked="" type="checkbox"/> A16														

Figure 5.2 HDD- Advanced

Steps:

1. Enter the Record settings interface to configure the encoding parameters:
Menu>Record>Encoding

Record Substream		
Camera	Analog 1	
Input Resolution	1080P25	
Encoding Parameters	Main Stream(Normal)	Main Stream(Event)
Stream Type	Video & Audio	Video & Audio
Resolution	HD720P	HD720P
Bitrate Type	Variable	Variable
Video Quality	Medium	Medium
Frame Rate	Full Frame	Full Frame
Max. Bitrate Mode	General	General
Max. Bitrate(Kbps)	4096	4096
Max. Bitrate Range Recommended	2304~3840(Kbps)	2304~3840(Kbps)
Pre-record	5s	
Post-record	5s	
Expired Time (day)	0	
Redundant Record	<input type="checkbox"/>	
Record Audio	<input checked="" type="checkbox"/>	

Figure 5.3 Record Encoding

2. Set the encoding parameters for recording.

- 1) Select the **Record** tab to configure.
- 2) Select a camera number in the camera dropdown list.

You can configure the stream type, the resolution, the video quality and other parameters on demand for Main Stream(Normal) and Main Stream(Event) respectively.

The **Input Resolution** of camera connected will be displayed in the live view for 5 seconds when the camera is connected, or the DVR is powered on. The input resolution includes the resolution and frame rate of the camera, e.g. 1080P25.

- 3) You can configure the advantage parameters, including pre-record, post-record time, expired time, redundant record (this option is only available when the HDD mode is *Group*) and whether you want to record audio.
 - Pre-record: The time you set to record before the scheduled time or event. For example, when an alarm triggered the recording at 10:00, if you set the pre-record time as 5 seconds, the camera records it at 9:59:55.
 - Post-record: The time you set to record after the event or the scheduled time. For example, when an alarm triggered the recording ends at 11:00, if you set the post-record time as 5 seconds, it records till 11:00:05.
 - Expired Time: The expired time is the longest time for a record file to be kept in the HDD, if the deadline is reached, the file will be deleted. You can set the expired time to 0, and then the file will not be deleted. The actual keeping time for the file should be determined by the capacity of the HDD.
 - Redundant Record: Enabling redundant record means you save the record in the redundant HDD. See *Chapter 5.7 Configuring Redundant Recording*.
 - Record Audio: Check the checkbox of Record Audio to record the sound, otherwise record the image without sound.
- 4) Click **Apply** to save the settings.
- 5) You can copy the settings to other channels by clicking **Copy**, if the setting can also be used for other channels.



Figure 5. 4 Copy Camera Settings




The redundant record is to decide whether you want the camera to save the record files in the redundant HDD. You must configure the redundant HDD in HDD settings. For detailed information,

see *Chapter 10.4.2 Setting HDD Property*.

3. Set encoding parameters for sub-stream.

- 1) Select the **Substream** tab.

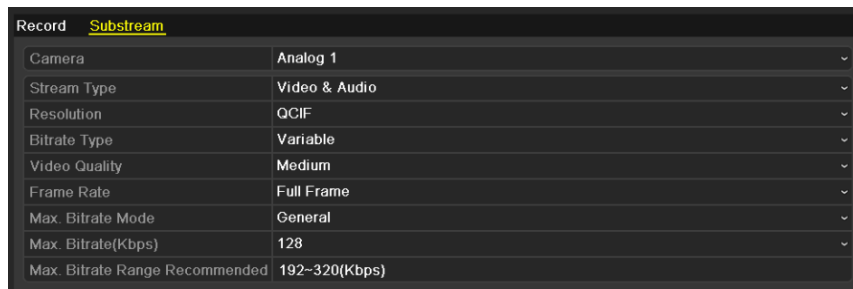

Record <u>Substream</u>	
Camera	Analog 1
Stream Type	Video & Audio
Resolution	QCIF
Bitrate Type	Variable
Video Quality	Medium
Frame Rate	Full Frame
Max. Bitrate Mode	General
Max. Bitrate(Kbps)	128
Max. Bitrate Range Recommended	192~320(Kbps)

Figure 5. 5 Sub-stream Encoding

- 2) Select a camera in the camera dropdown list.
- 3) Configure the parameters.
- 4) Click **Apply** to save the settings.
- 5) (Optional) If the parameters can also be used to other channels, click **Copy** to copy the settings to other channels.

5.2 Configuring Record Schedule


Purpose:

Set the record schedule, and then the camera will automatically start/stop recording according to the configured schedule.


Steps:

1. Enter the Record Schedule interface.

Menu> Record> Schedule

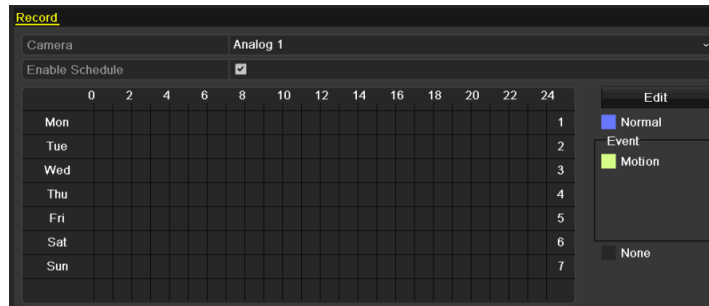

DS-7200HFHI-SL&SE&ST

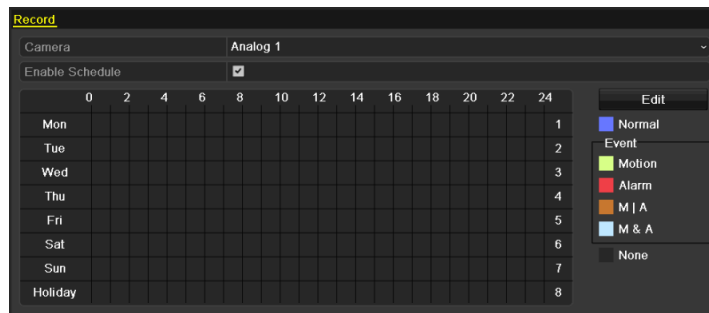

DS-7300HFHI-ST and DS-8100HFHI-ST

Figure 5. 6 Record Schedule

2. Choose the camera you want to configure in the Camera dropdown list.
3. Check the checkbox of Enable Schedule.
4. Configure the record schedule.

Edit the schedule

- 1) Click **Edit**.
- 2) In the message box, you can choose the day to which you want to set schedule.
- 3) To schedule an all-day recording, check the checkbox after the **All Day** item.

Figure 5.7 Edit Schedule- All Day

- 4) To arrange other schedule, leave the **All Day** checkbox blank and set the Start/End time.

Figure 5.8 Edit Schedule- Set Time Period



Up to 8 periods can be configured for each day. And the time periods cannot be overlapped each other.

Repeat the above steps 1)-3) to schedule recording for other days in the week. If the schedule can also be set to other days, click **Copy**.

Figure 5.9 Copy Schedule to Other Days



The **Holiday** option is available when you enable holiday schedule in **Holiday settings**. See *Chapter 5.6 Configuring Holiday Record*.

- 5) Click **OK** to save setting and back to upper level menu.

Draw the schedule

- 1) Click on the color icon to select a record type in the event list on the right-side of the interface.



Figure 5. 10 Draw the Schedule

Descriptions of the color icons are shown in the figure below.

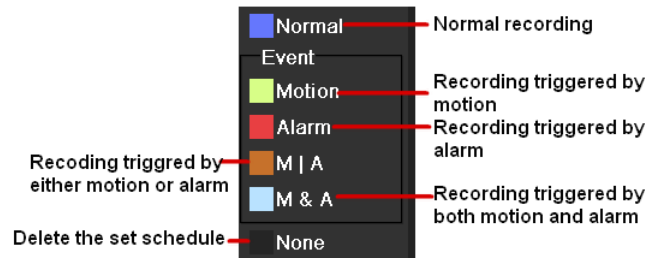


Figure 5. 11 Descriptions of the color icons

- 2) Click and drag the mouse on the schedule.
- 3) Click on the other area except for the schedule table to finish and exit the drawing.

You can repeat step 4 to set schedule for other channels. If the settings can also be used to other channels, click **Copy**, and then choose the channel to which you want to copy.



Figure 5. 12 Copy Schedule to Other Channels

5. Click **Apply** in the Record Schedule interface to save the settings.

5.3 Configuring Motion Detection Record

Purpose:

Follow the steps to set the motion detection parameters. In the live view mode, once a motion detection event takes place, the DVR can analyze it and do many actions to handle it. Enabling motion detection function can trigger certain channels to start recording, or trigger full screen monitoring, audio warning, notifying the surveillance center, sending email and so on.

Steps:

1. Enter the Motion Detection interface.

Menu>Camera>Motion

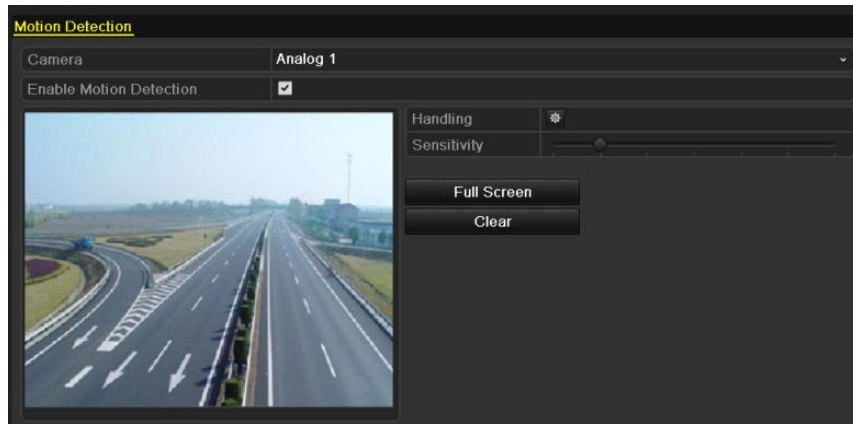


Figure 5. 13 Motion Detection

2. Configure Motion Detection:

- 1) Choose camera you want to configure.
- 2) Check the checkbox after **Enable Motion Detection**.
- 3) Drag and draw the area for motion detection by mouse. If you want to set the motion detection for all the area shot by the camera, click **Full Screen**. To clear the motion detection area, click **Clear**.

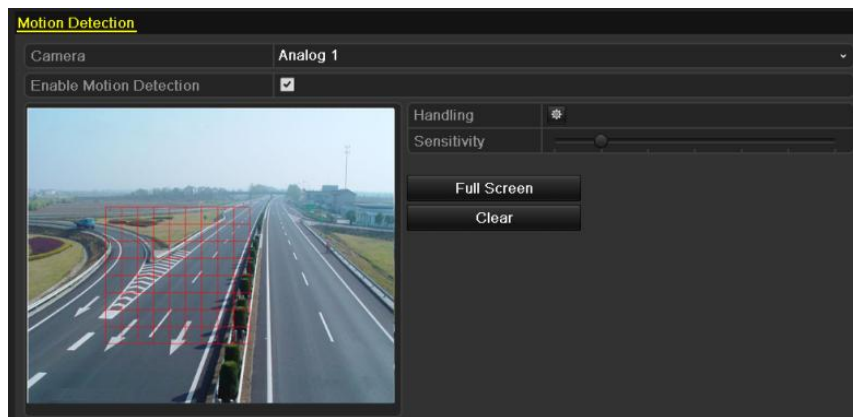


Figure 5. 14 Motion Detection- Mask

- 4) Click **Handling**, and the message box for channel information pops up.

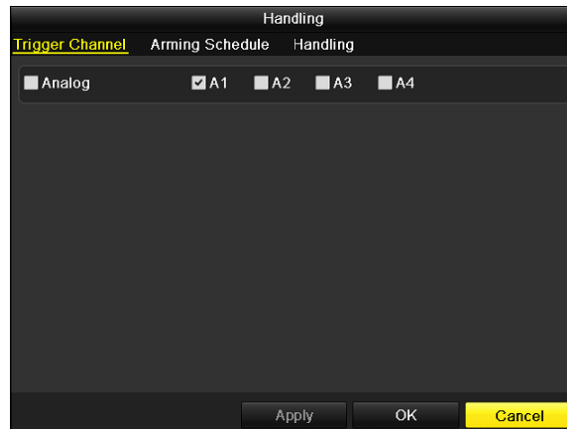


Figure 5. 15 Motion Detection Handling

- 5) Select the channels which you want the motion detection event to trigger recording.
 - 6) Click **Apply** to save the settings.
 - 7) Click **OK** to back to the upper level menu.
 - 8) Exit the Motion Detection menu.
3. Configure the schedule.
- Please refer to the step 4 of *Chapter 5.2 Configuring Record Schedule*, while you may choose Motion as the record type.

5.4 Configuring Alarm Triggered Record



The DS-7200HFHI-SL&SE&ST series DVR does not support the alarm input by default.

Purpose:

Follow the procedure to configure alarm triggered recording.

Steps:

1. Enter the Alarm setting interface.

Menu> Configuration> Alarm

The screenshot shows the 'Alarm Settings' interface with three tabs: 'Alarm Status', 'Alarm Input', and 'Alarm Output'. The 'Alarm Input' tab is selected. It contains two tables: 'Alarm Input List' and 'Alarm Output List'.

No.	Alarm Name	IP Camera Address	Alarm Type
A<-1		Local	N.O
A<-2		Local	N.O
A<-3		Local	N.O
A<-4		Local	N.O

No.	Alarm Name	IP Camera Address	Dwell Time
A->1		Local	5s

Figure 5. 16 Alarm Settings

2. Click the **Alarm Input** tab.

The screenshot shows the 'Alarm Settings - Alarm Input' tab. It contains a table with the following fields:

Alarm Input No.	A<-1
Alarm Name	
Type	N.O
Setting	<input type="checkbox"/>
Handling	

Figure 5. 17 Alarm Settings- Alarm Input

- 1) Select Alarm Input number and configure alarm parameters.
- 2) Choose N.O (normally open) or N.C (normally closed) for alarm type.
- 3) Check the checkbox of Setting.
- 4) Click the button.

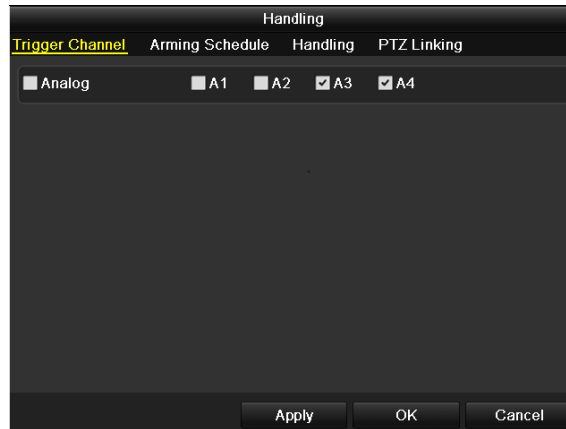


Figure 5. 18 Alarm Handling

- 5) Choose the alarm triggered recording channel.
- 6) Check the checkbox ☒ to select channel.
- 7) Click **Apply** to save settings.
- 8) Click **OK** to back to the upper level menu.

Repeat the above steps to configure other alarm input parameters.

If the setting can also be applied to other alarm inputs, click **Copy** and choose the alarm input number.

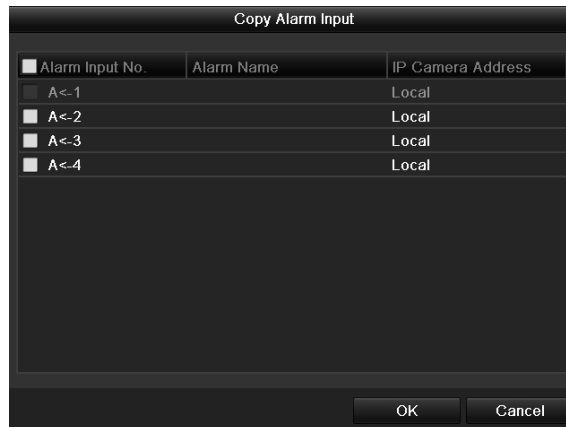


Figure 5. 19 Copy Alarm Input

3. Configure the schedule.

Please refer to the step 4 of *Chapter 5.2 Configuring Record Schedule*, while you may choose Alarm as the record type.

5.5 Manual Record

Purpose:

Follow the steps to set parameters for the manual record. Using manual record, you don't need to set a schedule for recording.

Steps:

1. Enter the Manual settings interface.

Menu> Manual

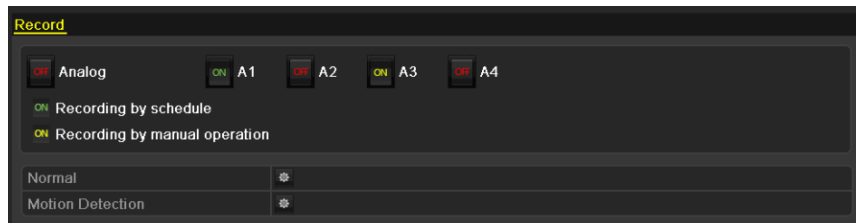


Figure 5. 20 Manual Record

2. Enable manual record.

Click the status icon **OFF** before camera number to change it to **ON**.

Or click the status icon **OFF** of **Analog** to enable manual record of all channels.

3. Disable manual record.

Click the status icon **ON** to change it to **OFF**.

Or click the status icon **ON** of **Analog** to disable manual record of all channels.



After rebooting all the manual records enabled are canceled.

5.6 Configuring Holiday Record

Purpose:

Follow the steps to configure the record schedule on holiday for that year. You may want to have different plan for recording on holiday.

Steps:


1. Enter the Record setting interface.
Menu>Record
2. Choose **Holiday** on the left bar.



No.	Holiday Name	Status	Start Date	End Date	Edit
1	Holiday1	Enabled	1.Jan	1.Jan	
2	Holiday2	Disabled	1.Jan	1.Jan	
3	Holiday3	Disabled	1.Jan	1.Jan	
4	Holiday4	Disabled	1.Jan	1.Jan	
5	Holiday5	Disabled	1.Jan	1.Jan	
6	Holiday6	Disabled	1.Jan	1.Jan	
7	Holiday7	Disabled	1.Jan	1.Jan	
8	Holiday8	Disabled	1.Jan	1.Jan	
9	Holiday9	Disabled	1.Jan	1.Jan	
10	Holiday10	Disabled	1.Jan	1.Jan	
11	Holiday11	Disabled	1.Jan	1.Jan	
12	Holiday12	Disabled	1.Jan	1.Jan	

Figure 5. 21 Holiday Settings

3. Enable Edit Holiday schedule.
 - 1) Click to enter the Edit interface.

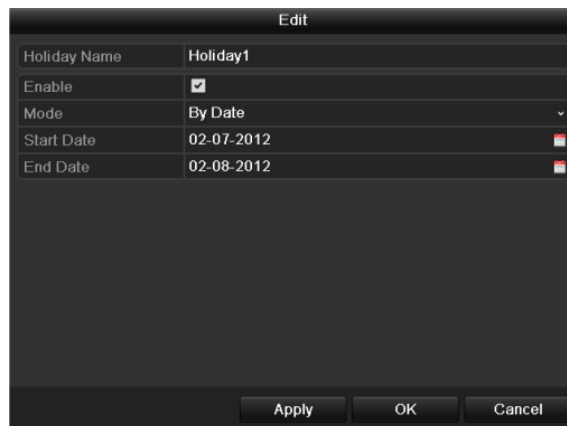

Edit	
Holiday Name	Holiday1
Enable	<input checked="" type="checkbox"/>
Mode	By Date
Start Date	02-07-2012
End Date	02-08-2012
<div>Apply OK Cancel</div>	

Figure 5. 22 Edit Holiday Settings

- 2) Check the checkbox of **Enable**.
- 3) Select Mode from the dropdown list.
There are three different modes for the date format to configure holiday schedule. By Month, By Week, and By Month are selectable.
- 4) Set the start and end date.

- 5) Click **Apply** to save settings.
- 6) Click **OK** to exit the Edit interface.
4. Configure the record schedule.

Please refer to the *Chapter 5.2 Configuring Record Schedule*, while you may choose Holiday in the Schedule dropdown list, or you can draw the schedule on the timeline of Holiday. See the two figures below.

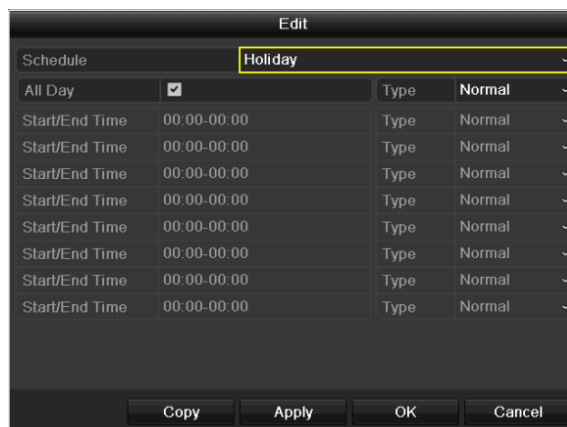


Figure 5.23 Edit Schedule- Holiday



Figure 5.24 Draw Schedule- Holiday



Up to 8 periods can be configured for each day. And the time periods cannot be overlapped each other. In the time table of the channel, both holiday schedule and normal day schedule are displayed. Repeat the above step 4 to set Holiday schedule for other channel. If the holiday schedule can also be used to other channels, click **Copy** and choose the channel you want to apply the settings.

5.7 Configuring Redundant Recording

Purpose:

Enabling redundant recording, which means saving the record files not only in the R/W HDD but also in the redundant HDD, will effectively enhance the data safety and reliability.


Before you start:

You must set the Storage mode in the HDD advanced settings to Group before you set the HDD property to Redundant. For detailed information, please refer to *Chapter 10.4 Managing HDD Group*. There should be at least another HDD which is in Read/Write status.

Steps:

1. Enter HDD Information interface.

Menu> HDD

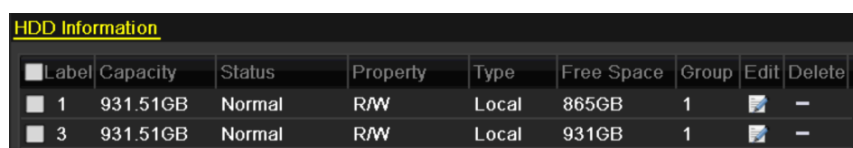

Label	Capacity	Status	Property	Type	Free Space	Group	Edit	Delete
1	931.51GB	Normal	R/W	Local	865GB	1		—
3	931.51GB	Normal	R/W	Local	931GB	1		—

Figure 5.25 HDD General

2. Select the **HDD** and click to enter the Local HDD Settings interface.

- 1) Set the HDD property to Redundant.



Local HDD Settings

HDD No. 1

HDD Property

☒ R/W

☐ Read-only

☐ Redundancy

Group

☒ 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8

☐ 9 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16

HDD Capacity 931.51GB

Apply OK Cancel

Figure 5.26 HDD General-Editing

- 2) Click **Apply** to save the settings.
 - 3) Click **OK** to back to the upper level menu.
 3. Enter the Record setting interface.
- Menu> Record> Encoding
- 1) Select the **Record** tab.

Camera	Analog 1	
Input Resolution	1080P25	
Encoding Parameters	Main Stream(Normal)	Main Stream(Event)
Stream Type	Video & Audio	Video & Audio
Resolution	HD720P	HD720P
Bitrate Type	Variable	Variable
Video Quality	Medium	Medium
Frame Rate	Full Frame	Full Frame
Max. Bitrate Mode	General	General
Max. Bitrate(Kbps)	4096	4096
Max. Bitrate Range Recommended	2304~3840(Kbps)	2304~3840(Kbps)
Pre-record	5s	
Post-record	5s	
Expired Time (day)	0	
Redundant Record	<input type="checkbox"/>	
Record Audio	<input checked="" type="checkbox"/>	

Figure 5. 27 Encoding Record

- 2) Select Camera you want to configure.
- 3) Check the checkbox of **Redundant Record**.
- 4) Click **Apply** to save settings.

If the encoding parameters can also be used to other channels, click **Copy** and choose the channel you want to apply the settings.

5.8 Configuring HDD Group for Recording


Purpose:

You can group the HDDs and save the record files in certain HDD group.

Steps:

1. Enter HDD setting interface.

Menu>HDD>Advanced

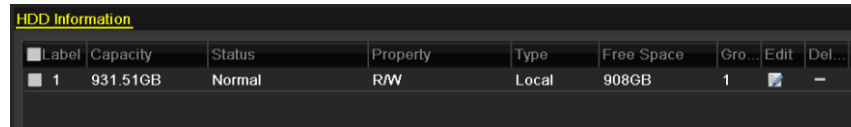


Label	Capacity	Status	Property	Type	Free Space	Gro...	Edit	Del...
1	931.51GB	Normal	R/W	Local	908GB	1		

Figure 5. 28 HDD General

2. Select **Advanced** on the left bar.

Check whether the storage mode of the HDD is Group. If not, set it to Group. For detailed information, please refer to *Chapter 10.4 Managing HDD Group*.

3. Select **General** in the left bar.

Click  to enter editing interface.


4. Configuring HDD group.

- 1) Choose a group number for the HDD group.
- 2) Click **Apply** to save your settings.
- 3) Click **OK** to back to the upper level menu.

Repeat the above steps to configure more HDD groups.

5. Choose the Channels which you want to save the record files in the HDD group.

- 1) Select **Advanced** on the left bar.

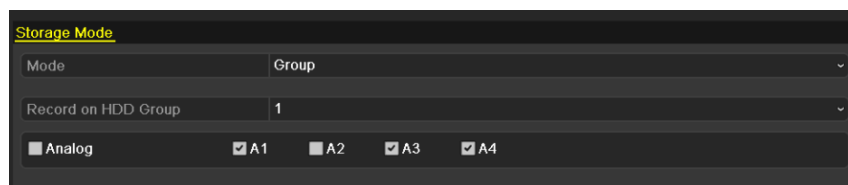

Storage Mode	
Mode	Group
Record on HDD Group	1
<input type="checkbox"/> Analog <input checked="" type="checkbox"/> A1 <input type="checkbox"/> A2 <input checked="" type="checkbox"/> A3 <input checked="" type="checkbox"/> A4	

Figure 5. 29 HDD Advanced

- 2) Choose Group number in the dropdown list of **Record on HDD Group**
- 3) Check the channels you want to save in this group.
- 4) Click **Apply** to save settings.



After you have configured the HDD groups, you can configure the Recording settings following the procedure provided in *Chapter 5.2-5.7*.

5.9 Files Protection

Purpose:

You can lock the recorded files or set the HDD property to Read-only to protect the record files from being overwritten.

Protect file by locking the record files


Steps:

1. Enter Playback setting interface.

Menu> Export



Figure 5.30 Export

2. Select the channels you want to investigate by checking the checkbox to .
3. Configure the record type, file type, start time and end time.
4. Click **Search** to show the results.

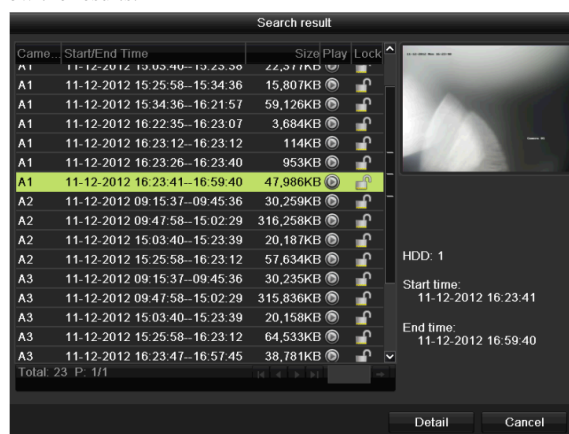




Figure 5.31 Export- Search Result

5. Protect the record files.

- 1) Find the record files you want to protect, and then click the  icon which will turn to , indicating that the file is locked.



The record files of which the recording is still not completed cannot be locked.



- 2) Click  to change it to  to unlock the file and the file is not protected.



Figure 5.32 Unlocking Attention

Protect file by setting HDD property to Read-only

Before you start:

To edit HDD property, you need to set the storage mode of the HDD to Group. See *Chapter 10.4 Managing HDD Group*.

Steps:

1. Enter HDD setting interface.

Menu> HDD

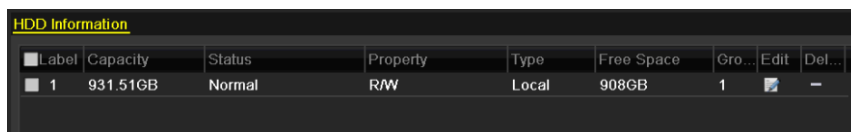



Figure 5.33 HDD General

2. Click  to edit the HDD you want to protect.

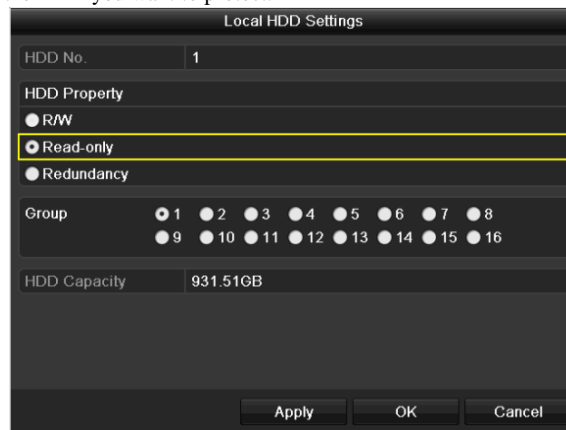


Figure 5.34 HDD General- Editing

3. Set the HDD to Read-only.
4. Click **OK** to save settings and back to the upper level menu.



- You cannot save any files in a Read-only HDD. If you want to save files in the HDD, change the property to R/W.
- If there is only one HDD and is set to Read-only, the DVR cannot record any files. Only live view mode is available.
- If you set the HDD to Read-only when the DVR is saving files in it, then the file will be saved in next R/W HDD. If there is only one HDD, the recording will be stopped.

Chapter 6 Playback


6.1 Playing Back Record Files

6.1.1 Playing Back by Channel

Purpose:

Play back the recorded video files of a specific channel in the live view mode. Channel switch is supported.

● **OPTION 1**

Choose a channel in live view mode using the mouse and click the  button in the quick setting toolbar.



Only record files recorded during the last five minutes on this channel will be played back.



Figure 6. 1 Instant Playback Interface


● **OPTION 2**

Steps:

1. Enter the Playback interface.

Mouse: right click a channel in live view mode and select Playback from the menu, as shown in Figure 6.

- 2.

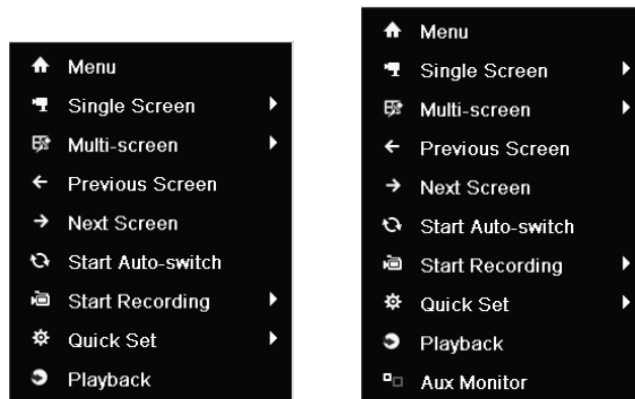

DS-7200HFHI-SL&SE&ST DS-7300HFHI-ST & DS-8100HFHI-ST

Figure 6. 2 Right-click Menu under Live View

Front Panel: press **PLAY** button to play back record files of the channel under single-screen live view mode.

Under multi-screen live view mode, the recorded files of the top-left channel will be played back.



For the DS-7300HFHI-ST and DS-8100HFHI-ST, pressing numerical buttons will switch playback to the corresponding channels during playback process.

2. Playback management.

The toolbar in the bottom part of Playback interface can be used to control playing progress, as shown in Figure 6. 3.



Figure 6. 3 Playback Interface

Click the channel(s) if you want to switch playback to another channel or execute simultaneous playback of multiple channels.



Figure 6.4 Toolbar of Playback

Table 6.1 Detailed Explanation of Playback Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Speed down
	Pause reverse play/ Reverse play/ Single-frame reverse play		Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen		Exit
	Stop		Digital Zoom		Smart Search		Video type
	Process bar		Video type bar				



Playback progress bar: use the mouse to drag the progress bar to locate special frames.

6.1.2 Playing Back by Time

Purpose:

Play back video files recorded in specified time duration. Multi-channel simultaneous playback and channel switch are supported.

Steps:

1. Enter playback interface.
Menu>Playback
2. Check the checkbox of channel(s) in the channel list and then double-click to select a date on the calendar.



Figure 6.5 Playback Calendar



If there are record files for that camera in that day, in the calendar, the icon for that day is displayed as

9. Otherwise it is displayed as 9

In the Playback interface:

The toolbar in the bottom part of Playback interface can be used to control playing process, as shown in Figure 6. 6.



Figure 6. 6 Interface of Playback by Time



Figure 6. 7 Toolbar of Playback by Time

Table 6. 2 Detailed Explanation of Playback Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Speed down
	Pause reverse play/ Reverse play/ Single-frame reverse play		Pause play/ Play/ Single-frame play		Scaling up/down the time line		Speed up
	Previous day		Next day		Full Screen		Exit
	Stop		Digital Zoom		Smart Search		Video type
	Process bar		Video type bar				



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.

6.1.3 Playing Back by Event Search

Purpose:

Play back recording files on one or several channels searched out by restricting event type (e.g. alarm input and motion detection).

Steps:

1. Enter the Playback interface.
Menu > Playback
2. Select the **Event** in the drop-down list on the top-left side.
3. Select **Alarm Input** or **Motion** as the event type, edit the Start time and End time.

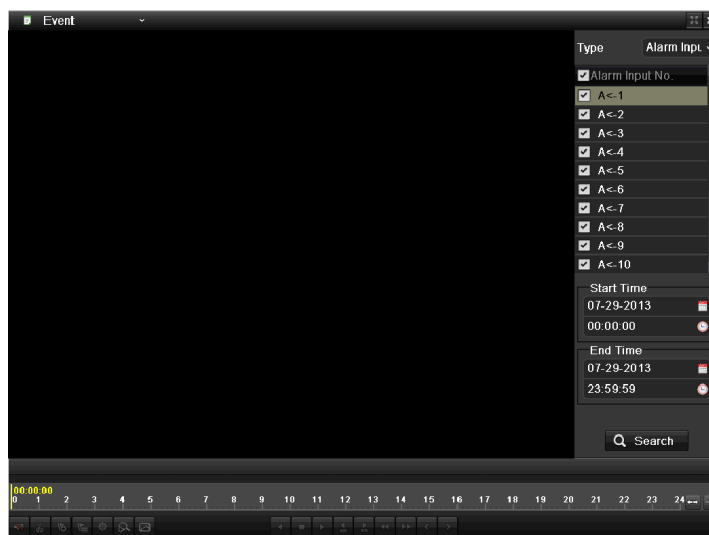


Figure 6. 8 Alarm Input Search Interface

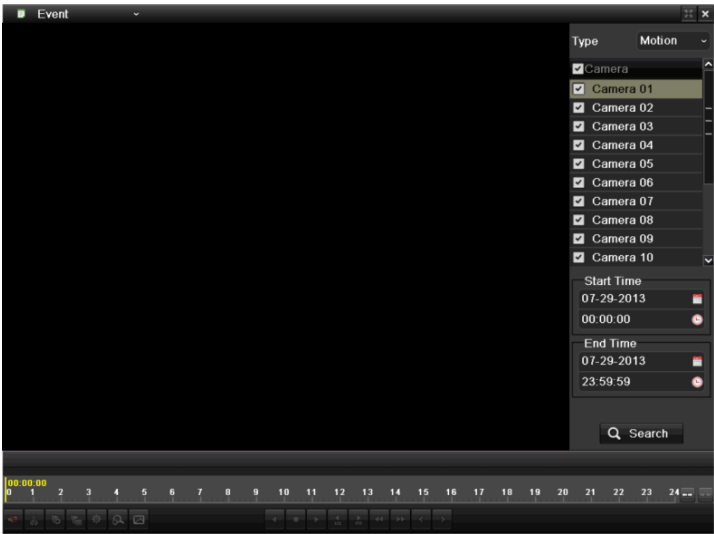


Figure 6.9 Motion Search Interface

4. Click **Search** button to get the search result information. You may refer to the right-side bar for the result.

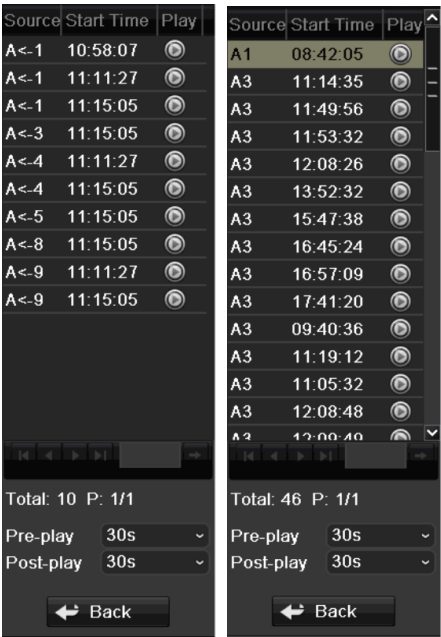




Figure 6.10 Search Result Bar (Alarm In and Motion)

5. Click  button to play back the file.
You can click the **Back** button to back to the search interface.



Pre-play and post-play can be configured.

6. (Optional) If multiple channels are triggered recording by the alarm input, clicking the  button will pop up a synchronouse playback channel selection window. Select channel(s) you want to play and click the **OK** button.

7. Playback management.

The toolbar in the bottom part of Playback interface can be used to control playing process.



Figure 6.11 Interface of Playback by Event



Figure 6.12 Toolbar of Playback by Event

Table 6.3 Detailed Explanation of Playback-by-event Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Speed down
	Pause reverse play/ Reverse play/ Single-frame reverse play		Pause play/ Play/ Single-frame play		Stop		Speed up
	Previous day		Next day		Full Screen		Exit
	Process bar		Video type		Digital Zoom		Scaling up/down the time line
	Smart Search (Not supported)						



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.

6.1.4 Playing Back by Tag

Purpose:


Video tag allows you to record related information like people and location of a certain time point during playback. You are also allowed to use video tag(s) to search for record files and position time point.


Before playing back by tag:

1. Enter Playback interface.
Menu>Playback
2. Search and play back the record file(s). Refer to *Chapter 6.1.1 Playing Back by Channel* for the detailed information about searching and playback of the record files.



Figure 6. 13 Interface of Playback by Time

Click  button to add default tag.

Click  button to add customized tag and input tag name.



Max. 64 tags can be added to a single video file.

3. Tag management.


Click  button to check, edit and delete tag(s).



Figure 6. 14 Tag Management Interface

Steps:

1. Select the **Tag** from the drop-down list in the Playback interface.
2. Choose channels, edit start time and end time, and then click Search to enter Search Result interface.



You can enter keyword in the textbox **Keyw...** to search the tag on your command.

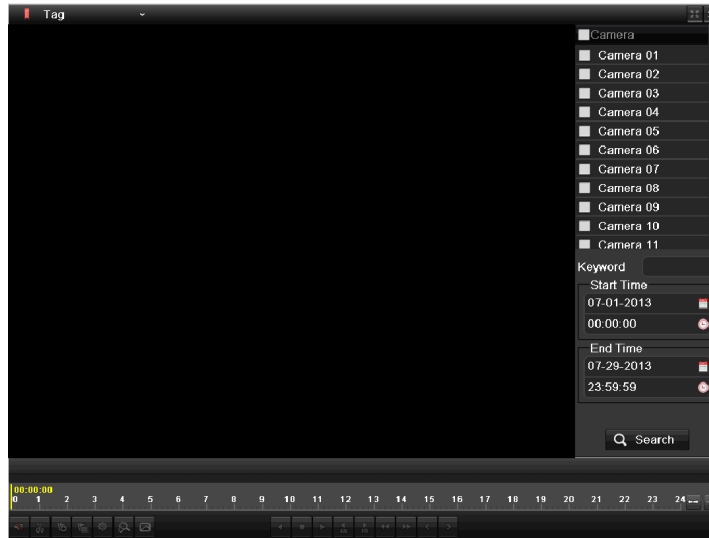


Figure 6. 15 Video Search by Tag

3. Click button to play back the file.

You can click the **Back** button to back to the search interface.



Pre-play and post-play can be configured.



Figure 6. 16 Interface of Playback by Tag



Figure 6.17 Toolbar of Playback by Tag

Table 6.4 Detailed Explanation of Playback-by-tag Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward		30s reverse
	Add default tag		Add customized tag		Tag management		Speed down
	Pause reverse play/ Reverse play/ Single-frame reverse play		Pause play/ Play/ Single-frame play		Stop		Speed up
	Previous day		Next day		Full Screen		Exit
	Process bar		Video type		Digital Zoom		Scaling up/down the time line
	Smart Search						



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.

6.1.5 Playing Back by System Logs

Purpose:

Play back record file(s) associated with channels after searching system logs.

Steps:

1. Enter Log Information interface.
Menu>Maintenance>Log Information
2. Click **Log Search** tab to enter Playback by System Logs.
Set search time and type and click **Search** button.

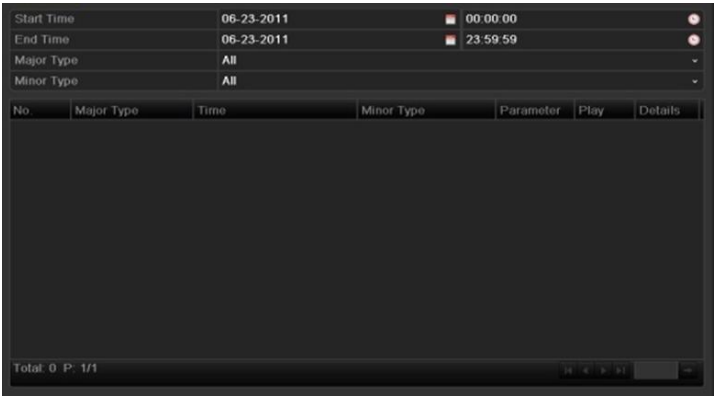


Figure 6. 18 System Log Search Interface

3. Choose a log with record file and click  button to enter Playback interface.



If there is no record file at the time point of the log, the message box “No result found” will pop up.

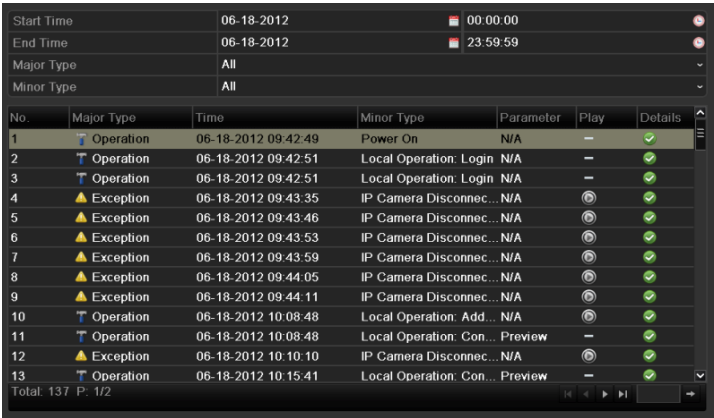


Figure 6. 19 Result of System Log Search

4. Playback management.

The toolbar in the bottom part of Playback interface can be used to control playing process.





Figure 6. 20 Interface of Playback by Log

6.1.6 Playing Back External File

Purpose:

Perform the following steps to look up and play back files in the external devices.

 Steps:

1. Enter Tag Search interface.
Menu>Playback
2. Select the **External File** in the drop-down list on the top-left side.
The files are listed in the right-side list.
You can click the  button to refresh the file list.
3. Select and click the  button to play back it.

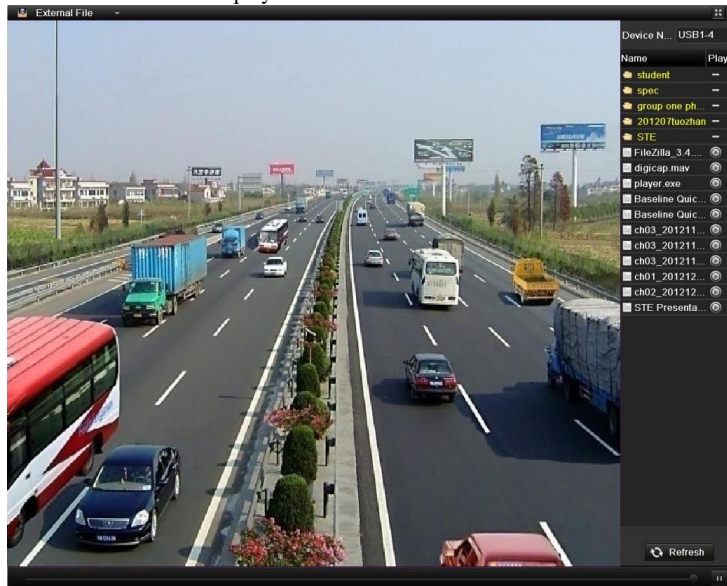


Figure 6. 21 Interface of External File Playback

6.2 Auxiliary Functions of Playback




6.2.1 Playing Back Frame by Frame

Purpose:



Play video files frame by frame, in order to check image details of the video when abnormal events happen.

Steps:

- **Using a Mouse**

Go to Playback interface and click button  and  until the speed changes to *Single* frame. One click on the playback screen represents playback or adverse playback of one frame. It is also feasible to use button  in toolbar.

- **Using the front panel (Not supported with DS-7200HFHI-SL&SE)**

Press the  button to set the speed to *Single* frame. One click on the playback screen or press  button on the front panel represents playback or adverse playback of one frame.

6.2.2 Smart Search

Purpose:


In order to locate motion detection event easily and accurately in the playback progress bar, you are allowed to analyze a certain area (scene) dynamically, and to get all of the related motion detection events that occurred in this area.



Steps:

1. Go to Playback interface and play the video.



Figure 6. 22 Interface of Playback by Time

2. Click the  button to go to analysis area selection interface.

3. Click and drag the mouse to draw area(s). You can click button  to set the full screen as target searching area. After drawing area(s), press button  to execute smart search in this area.



Multi-area and full-screen searching modes are supported.

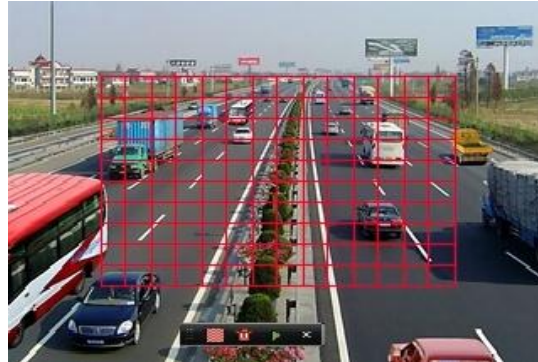


Figure 6.23 Draw Area of Smart Search


The results of smart search will be marked as  in the progress bar.












 
 



Figure 6.24 Smart Search Result with Video List



Figure 6.25 Toolbar of Smart Search Playback

Table 6.5 Detailed Explanation of Smart-search-playback Toolbar

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Audio on/ Mute		Start/Stop clipping		30s forward		30s reverse
	Previous day		Next day		Full Screen		Exit

Button	Operation	Button	Operation	Button	Operation	Button	Operation
	Pause reverse play/ Reverse play/ Single-frame reverse play		Pause play/ Play/ Single-frame play		Stop		Speed up
	Add default tag		Add customized tag		Tag management		Speed down
	Process bar		Video type		Digital Zoom		Scaling up/down the time line
	Smart Search						



Playback progress bar: use the mouse to click any point of the progress bar or drag the progress bar to locate special frames.

6.2.3 Digital Zoom

Steps:


1. Click the  button on the playback control bar to enter Digital Zoom interface.
2. Use the mouse to draw a red rectangle and the image within it will be enlarged up to 16 times.



Figure 6. 26 Draw Area for Digital Zoom

3. Right-click the image to exit the digital zoom interface.

6.2.4 Reverse Playback of Multi-channel

Purpose:


You can play back record files of multi-channel reversely. Up to 16-ch (with 1920*1080 resolution) simultaneous reverse playback is supported.

Steps:

1. Enter Playback interface.
Menu>Playback
2. Check more than one checkboxes to select multiple channels and click to select a date on the calendar.



Figure 6. 27 4-ch Synchronous Playback Interface

3. Click  to play back the record files reversely.

Chapter 7 Backup

7.1 Backing up Record Files

Before you start:

Please insert the backup device(s) into the device.

7.1.1 Quick Export

Purpose:

Export record files to backup device(s) quickly.

Steps:

1. Enter Video Export interface.
Menu>Export>Normal
2. Check the checkbox of the channel(s) you want to back up and click **Quick Export** button.



The time duration of record files on a specified channel cannot exceed one day. Otherwise, the message box “Max. 24 hours are allowed for quick export.” pops up.



Figure 7. 1 Quick Export Interface

3. Export.

In the Export interface, choose the backup device and click the **Export** button to start exporting.



Here we use USB Flash Drive and please refer to the next section Normal Backup for more backup devices supported by the device.

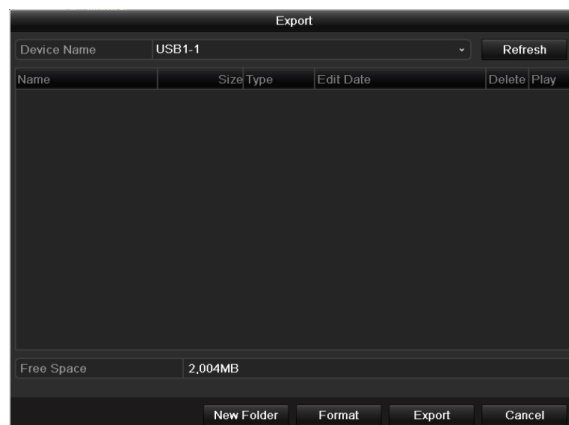


Figure 7. 2 Quick Export using USB1-1

Stay in the Exporting interface until all record files are being exported.

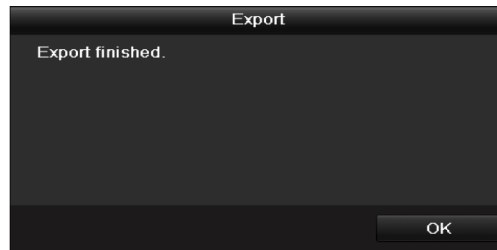


Figure 7.3 Export Finished

4. Check backup result.

Choose the record file in Export interface and click button  to check it.



The Player player.exe will be exported automatically during record file export.

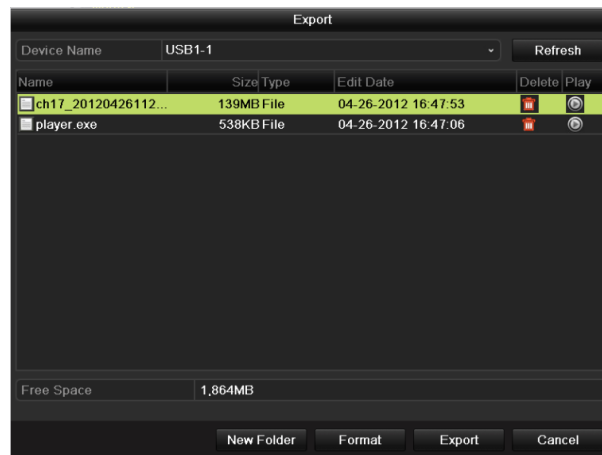


Figure 7.4 Checkup of Quick Export Result Using USB1-1

7.1.2 Backing up by Normal Video Search

Purpose:

The record files can be backed up to various USB devices, such as USB flash drives, USB HDDs, and USB writer.

Backup using USB flash drives, USB HDDs, and USB writer

Steps:

1. Enter Export interface.
Menu>Export>Normal
2. Set search condition and click **Search** button to enter the search result interface.

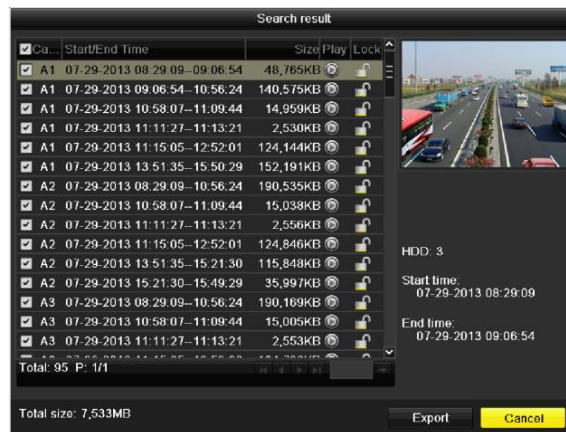


Figure 7. 5 Result of Normal Video Search for Backup

3. Select record files you want to back up.

Click button to play the record file if you want to check it.

Check the checkbox before the record files you want to back up.



The size of the currently selected files is displayed in the lower-left corner of the window.

4. Export.

Click **Export** button and start backup.



If the inserted USB device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format the USB device by clicking the **Format** button.

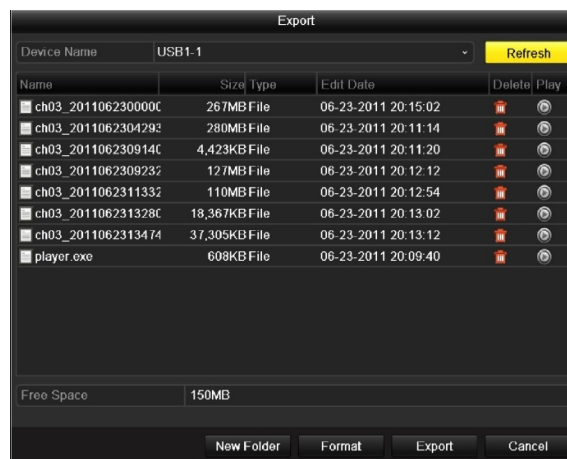


Figure 7. 6 Export by Normal Video Search using USB Flash Drive



Figure 7.7 Export by Normal Video Search using USB Writer

Stay in the Exporting interface until all record files are exported with pop-up message box "Export finished".

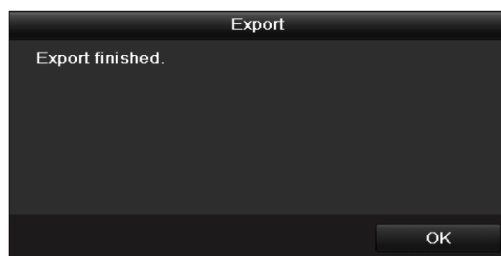



Figure 7.8 Export Finished

5. Check backup result.

Choose the record file in Export interface and click  button to check it.



The Player player.exe will be exported automatically during record file export.

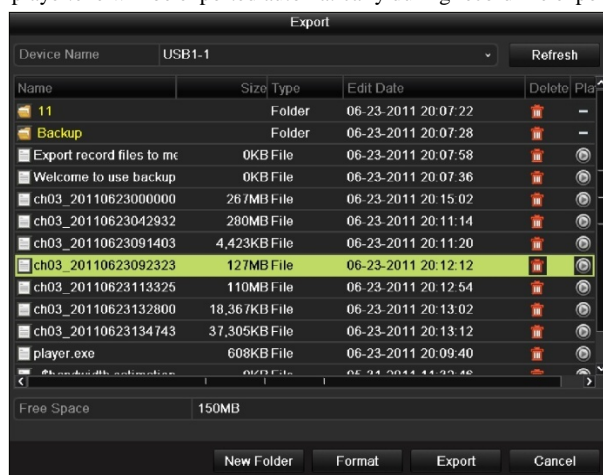


Figure 7.9 Checkup of Export Result using USB Flash Drive

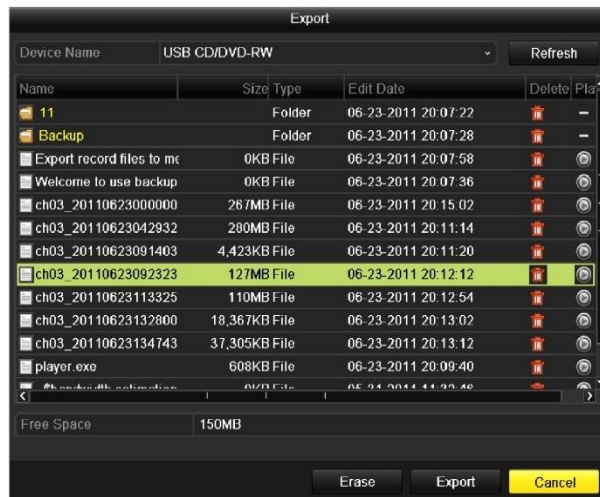


Figure 7. 10 Checkup of Export Result using USB Writer

Backup using eSATA HDDs

Steps:

1. Enter Record>Advanced and set the usage of eSATA HDD at “Export”.

Menu>Record>Advanced

Choose eSATA and set its usage at Export. Click **Yes** when pop-up message box “System will reboot automatically if the usage of eSATA is changed. Continue?”




The usages of eSATA HDD contain Record and Export. And changes in usage will take effective after rebooting the device.

2. Enter Export interface.

Menu>Export>Normal

Set search condition and click **Search** button to enter the search result interface.

3. Select record files you want to back up.

Click button  to play the record file if you want to check it.

Tick record files you want to back up.



The size of the currently selected files is displayed in the lower-left corner of the window.

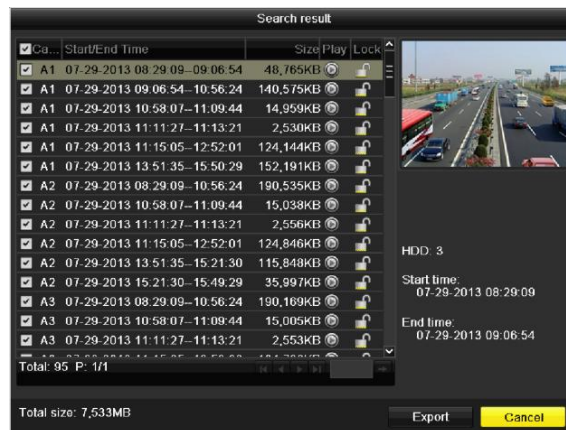


Figure 7. 11 Result of Normal Video Search for Backup

4. Export.

Click **Export** button and start backup.



- Please format the eSATA first when using it for the first time.
- If the inserted eSATA HDD is not recognized:
 - Click the **Refresh** button.
 - Reconnect device.
 - Check for compatibility from vendor.

You can also format eSATA HDD via the device.

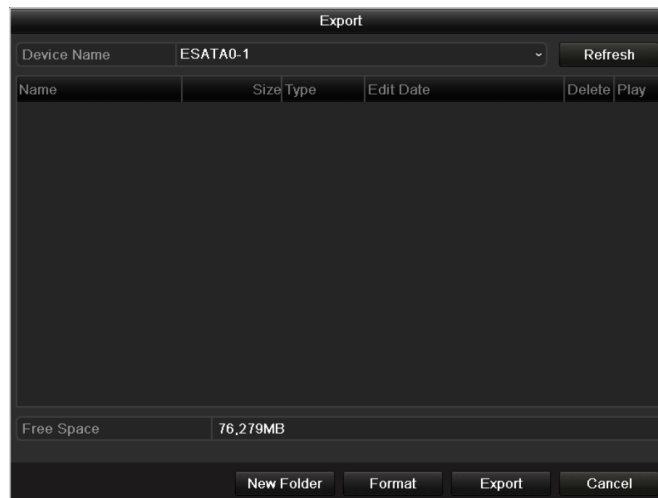


Figure 7. 12 Export by Normal Video Search Using eSATA HDD

Stay in the Exporting interface until all record files are exported with pop-up message “Export finished”.

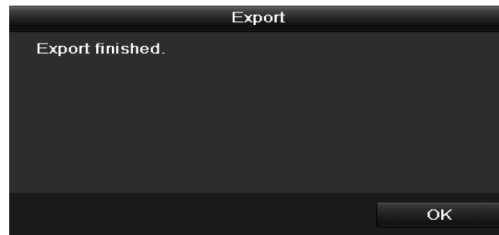


Figure 7. 13 Export Finished

5. Check backup result.

Choose the record file in Export interface and click button  to check it.



The Player player.exe will be exported automatically during record file export.

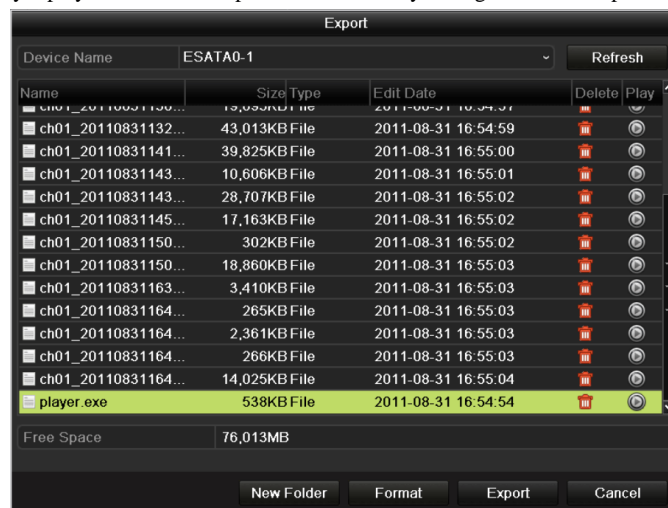


Figure 7. 14 Checkup of Export Result Using eSATA HDD

7.1.3 Backing up by Event Search

Purpose:

Back up event-related record files using USB devices, such as USB flash drives, USB HDDs, and USB writer. Quick Backup and Normal Backup are supported.



Alarm Input type is supported after the alarm module is plugged in.

Steps:

1. Enter Export interface.
Menu>Export>Event
2. Search for events.
 - 1) Select the type of event from the dropdown list of Event Type.
 - 2) Select the alarm input No. and time.

- 3) Click **Search** button to enter the Search Result interface.

Event	
Event Type	Motion
Start Time	2012-11-13 00:00:00
End Time	2012-11-13 23:59:59
<input checked="" type="checkbox"/> Analog <input checked="" type="checkbox"/> A1 <input checked="" type="checkbox"/> A2 <input checked="" type="checkbox"/> A3 <input checked="" type="checkbox"/> A4	

Figure 7.15 Event Search for Backup- Motion

Event		
Event Type	Alarm Input	
Start Time	2012-11-14 00:00:00	
End Time	2012-11-14 23:59:59	
<input checked="" type="checkbox"/> Alarm Input No.	Alarm Name	IP Camera Address
<input checked="" type="checkbox"/> A<-1		Local
<input checked="" type="checkbox"/> A<-2		Local
<input checked="" type="checkbox"/> A<-3		Local
<input checked="" type="checkbox"/> A<-4		Local

Figure 7.16 Event Search for Backup- Alarm Input

3. Select record files to export.

- 1) Select an alarm input in the list and click **Quick Export** button to enter Export interface.
- 2) Clicking **Details** button will take you to the interface with detailed information of all channels triggered by the event.
- 3) Clicking **Quick Export** button will export record files of all channels triggered by the selected alarm input.

Source	Start Time	End Time
A1	2012-11-13 08:47:13	2012-11-13 08:47:19
A1	2012-11-13 08:55:42	2012-11-13 08:55:48
<input checked="" type="checkbox"/> A1	2012-11-13 08:56:30	2012-11-13 08:56:50
A1	2012-11-13 09:02:30	2012-11-13 09:02:38
A1	2012-11-13 09:12:43	2012-11-13 09:12:51
A1	2012-11-13 09:13:04	2012-11-13 09:13:12
<input checked="" type="checkbox"/> A1	2012-11-13 09:13:20	2012-11-13 09:13:27
A1	2012-11-13 09:13:29	2012-11-13 09:13:35
A1	2012-11-13 09:13:36	2012-11-13 09:13:43
<input checked="" type="checkbox"/> A1	2012-11-13 10:03:55	2012-11-13 10:04:06
A1	2012-11-13 10:04:50	2012-11-13 10:04:57
A1	2012-11-13 10:06:51	2012-11-13 10:06:57
A1	2012-11-13 10:07:07	2012-11-13 10:07:18

Total: 86 P: 1/1

Pre-play: 30s
Post-play: 30s

Quick Export **Details** **Cancel**

Figure 7.17 Result of Event Search by Motion

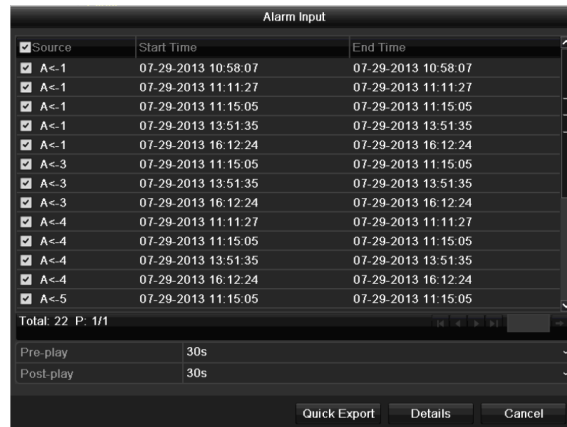


Figure 7.18 Result of Video Search by Alarm Input

- 4) Click **Details** button to view detailed information of the record file, e.g. start time, end time, file size, etc.



The size of the currently selected files is displayed in the lower-right corner of the window.

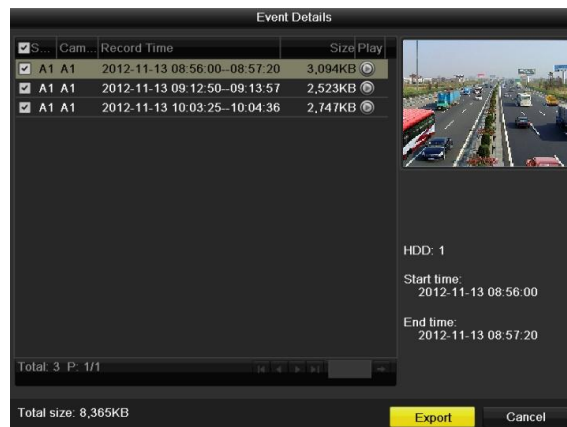


Figure 7.19 Event Details Interface- Alarm Input

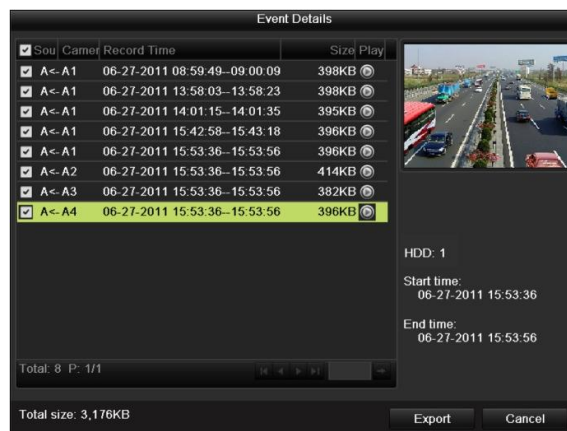


Figure 7.20 Event Details Interface- Alarm Input

4. Export.

Click the **Export** button and start backing up.



If the inserted USB device is not recognized:

- Click the Refresh button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB flash drive or USB HDDs via the device.

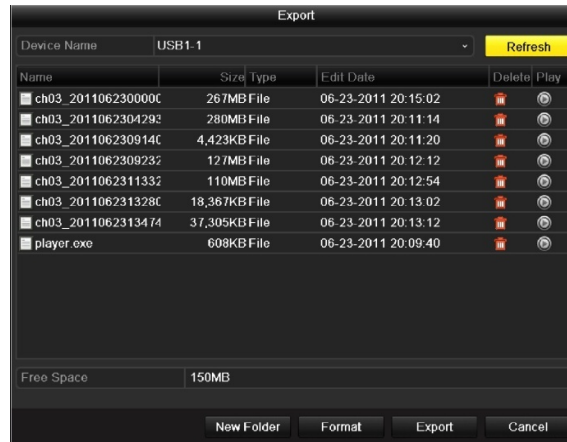


Figure 7. 21 Export by Event Using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message "Export finished".

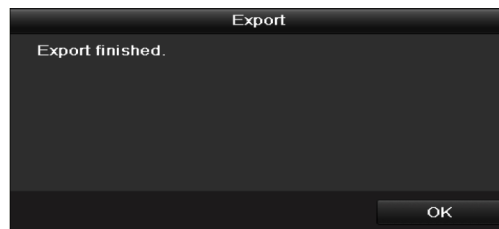


Figure 7. 22 Export Finished

5. Check backup result.



The Player player.exe will be exported automatically during record file export.

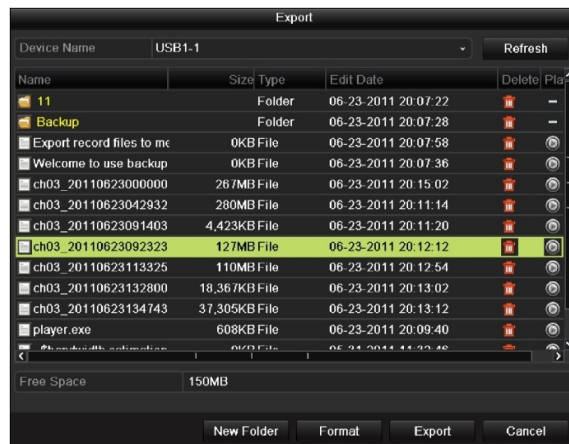




Figure 7. 23 Checkup of Event Export Result Using USB Flash Drive

7.1.4 Backing up Video Clips

Purpose:

You may also select video clips to export directly during Playback, using USB devices, such as USB flash drives, USB HDDs, and USB writers.

Steps:

1. Enter Playback interface.
Please refer to *Chapter 6 Playback*.
2. During playback, use buttons  and  in the playback toolbar to start or stop clipping record file(s).
3. Quit Playback interface after finishing clipping and you will be prompted to save the clips.



A maximum of 30 clips can be selected for each channel.



Figure 7. 24 Interface of Playback by Time

4. Click **Yes** to save video clips and enter Export interface, or click **No** to quit without saving video clips.

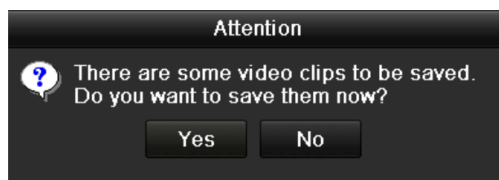


Figure 7. 25 Attention to Video Clip Saving

5. Export.

Click **Export** button and start backup.



If the inserted USB device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

You can also format USB devices by clicking the **Format** button.

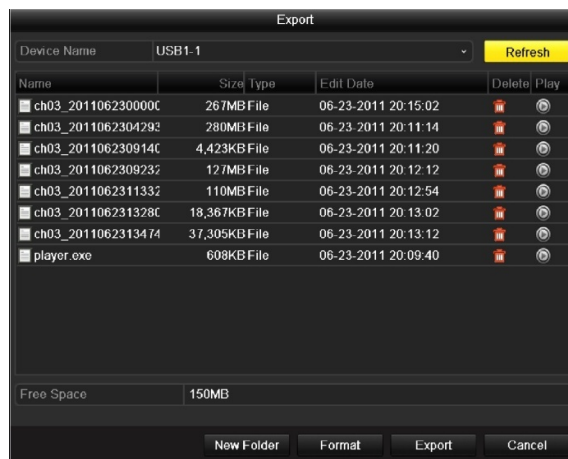


Figure 7. 26 Export Video Clips Using USB Flash Drive

Stay in the Exporting interface until all record files are exported with pop-up message "Export finished".

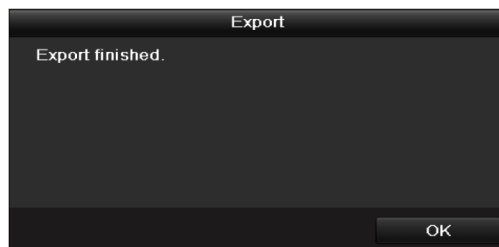


Figure 7. 27 Export Finished

6. Check backup result.



The Player player.exe will be exported automatically during record file export.

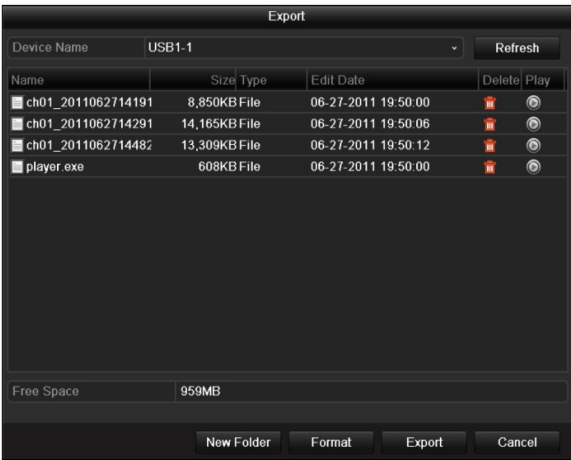


Figure 7. 28 Checkup of Video Clips Export Result Using USB Flash Drive

7.2 Managing Backup Devices

Management of USB flash drives and USB HDDs.

Steps:

1. Enter Search Result interface of record files.

Menu>Export>Normal

Set search condition and click **Search** button to enter Search Result interface.



At least one channel shall be selected.

Figure 7. 29 Normal Video Search for Backup

2. Select record files you want to back up.

Click **Export** button to enter Export interface.



At least one recording file shall be selected.

Figure 7. 30 Result of Normal Video Search for Backup

3. Backup device management.

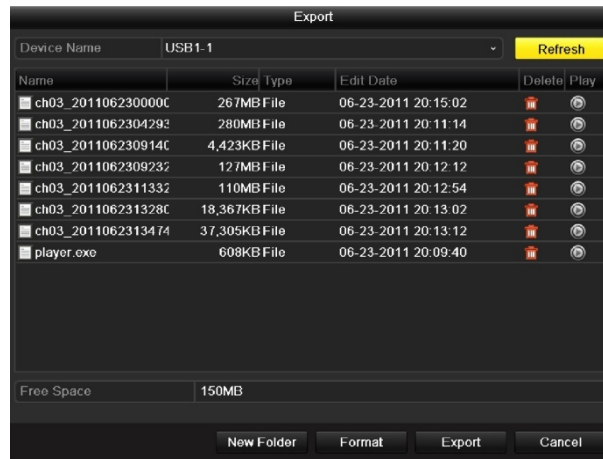
 



Figure 7. 31 USB Flash Drive Management

Click **New Folder** button if you want to create a new folder in the backup device.

Select a record file or folder in the backup device and press button  if you want to delete it.

Select a record file in the backup device and press button  to play it.

Click **Format** button to format the backup device.



If the inserted USB device is not recognized:

- Click the **Refresh** button.
- Reconnect device.
- Check for compatibility from vendor.

Management of USB writers

Steps:

1. Enter Search Result interface of record files.

Menu>Export>Normal

Set search condition and click **Search** button to enter Search Result interface.



At least one channel shall be selected.

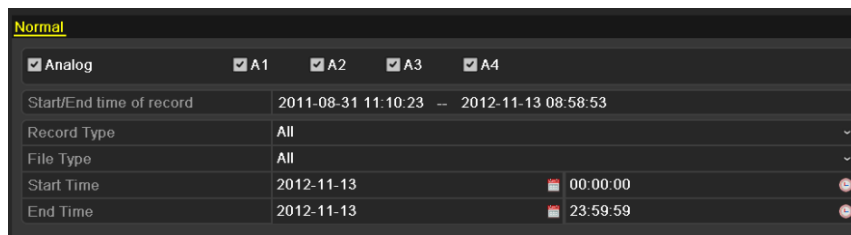


Figure 7. 32 Normal Video Search for Backup

2. Select record files you want to back up.

Click **Export** button to enter Export interface.



At least one record file shall be selected.

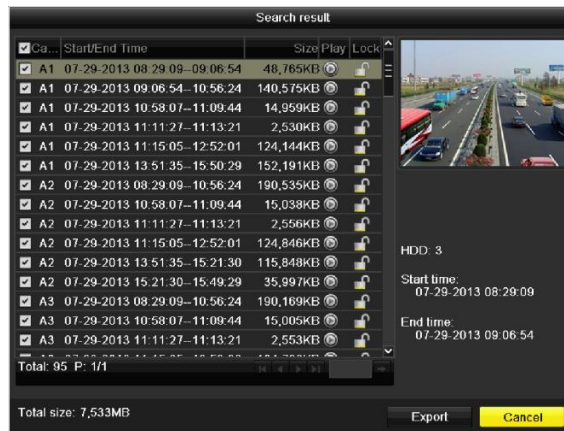


Figure 7.33 Result of Normal Video Search for Backup

3. Backup device management.

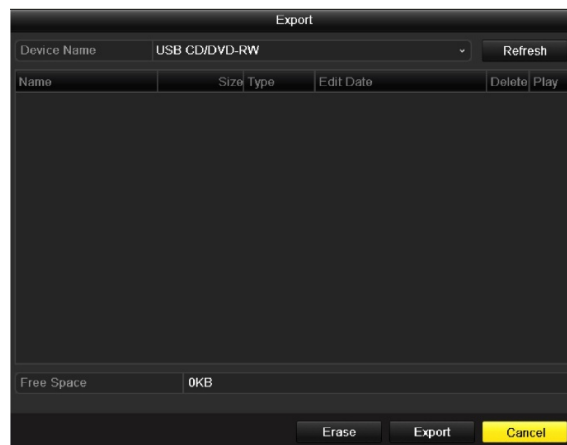


Figure 7.34 USB Writer Management

Click **Erase** button if you want to erase the files from a re-writable CD/DVD.



- There must be a re-writable CD/DVD when you make this operation.
- If the inserted USB writer is not recognized:
 - Click the **Refresh** button.
 - Reconnect device.
 - Check for compatibility from vendor.

Chapter 8 Alarm Settings

8.1 Setting Motion Detection

Steps:

1. Enter Motion Detection interface of Camera Management and choose a camera you want to set up motion detection.

Menu> Camera> Motion



Figure 8.1 Motion Detection Setup Interface

2. Set detection area and sensitivity.

Check ☒ checkbox to enable motion detection, use the mouse to draw detection area(s) and drag the sensitivity bar to set sensitivity.


Click  to set alarm response actions.



Figure 8.2 Set Detection Area and Sensitivity

3. Click **Trigger Channel** tab and select one or more channels which will start to record or become full-screen monitoring when motion alarm is triggered.

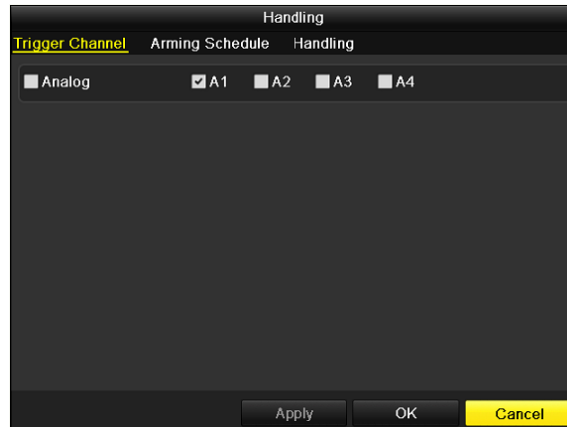


Figure 8.3 Set Trigger Camera of Motion Detection

4. Set arming schedule of the channel.

Select **Arming Schedule** tab to set the channel's arming schedule.

Choose one day of a week and up to eight time periods can be set within each day. Or you can click the **Copy** button to copy the time period settings to other day(s).



Time periods shall not be repeated or overlapped.

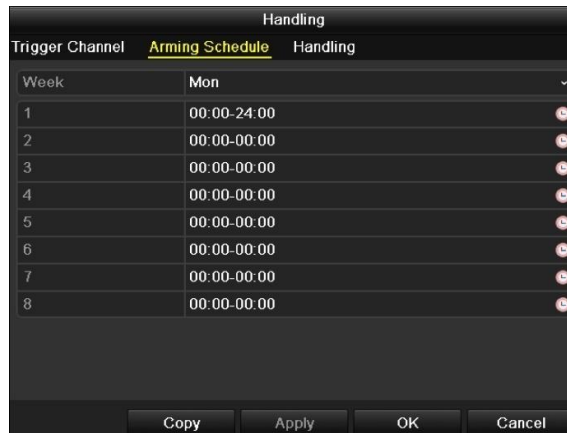


Figure 8.4 Set Arming Schedule of Motion Detection

5. Click **Handling** tab to set up alarm response actions of motion alarm (please refer to *Chapter 8.6 Setting Alarm Response Actions*).

Repeat the above steps to set up arming schedule of other days of a week.

Click the **OK** button to complete the motion detection settings of the channel.

6. If you want to set motion detection for another channel, repeat the above steps or just copy the above settings to it.



You are not allowed to copy the "Trigger Channel" action.



Figure 8. 5 Copy Settings of Motion Detection

8.2 Setting Sensor Alarms

Purpose:

Set up handling method of an external sensor alarm.

Steps:

1. Enter Alarm Settings of System Configuration and select an alarm input.

Menu> Configuration> Alarm

Select Alarm Input tab to enter Alarm Input Settings interface.

Alarm Status Alarm Input Alarm Output			
Alarm Input List			
No.	Alarm Name	IP Camera Address	Alarm Type
A<-1		Local	N.C
A<-2		Local	N.C
A<-3		Local	N.C
A<-4		Local	N.C
Alarm Output List			
No.	Alarm Name	IP Camera Address	Dwell Time
A->1		Local	5s

Figure 8. 6 Alarm Status Interface of System Configuration

2. Set the handling method of the selected alarm input.

Check the **Setting** checkbox and click **Handling** button to set its alarm response actions.

Alarm Status Alarm Input Alarm Output	
Alarm Input No.	A<-1
Alarm Name	
Type	N.C
Setting	<input checked="" type="checkbox"/>
Handling	

Figure 8. 7 Alarm Input Settings Interface

3. Select Trigger Channel tab and select one or more channels which will start to record or become full-screen monitoring when an external alarm is input.

4. Select **Arming Schedule** tab to set the channel's arming schedule.

Choose one day of a week and Max. eight time periods can be set within each day.



Time periods shall not be repeated or overlapped.

5. Select **Handling** tab to set up alarm response actions of the alarm input (please refer to *Chapter 8.6 Setting Alarm Response Actions*).

Repeat the above steps to set up arming schedule of other days of a week. You can also use **Copy** button to copy an arming schedule to other days.



Figure 8.8 Set Arming Schedule of Alarm Input

6. If necessary, select **PTZ Linking** tab and set PTZ linkage of the alarm input.
Set PTZ linking parameters and click the **OK** button to complete the settings of the alarm input.



Please check whether the PTZ or speed dome supports PTZ linkage.

One alarm input can trigger presets, patrol or pattern of more than one channel. But presets, patrols and patterns are exclusive.

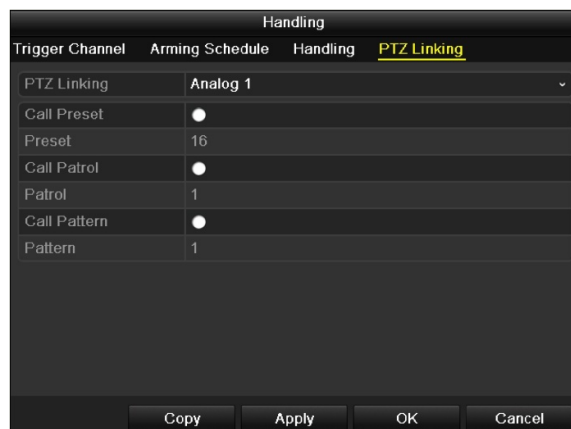


Figure 8.9 Set PTZ Linking of Alarm Input

7. If you want to set handling method of another alarm input, repeat the above steps or just copy the above settings to it.

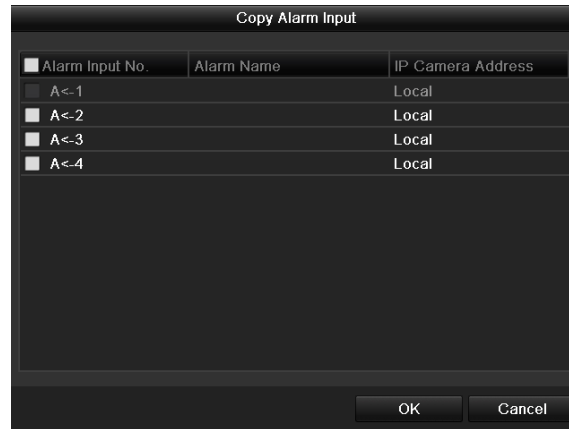


Figure 8. 10 Copy Settings of Alarm Input

8.3 Detecting Video Loss

Purpose:

Detect video loss of a channel and take alarm response action(s).

Steps:

1. Enter Video Loss interface of Camera Management and select a channel you want to detect.

Menu> Camera> Video Loss

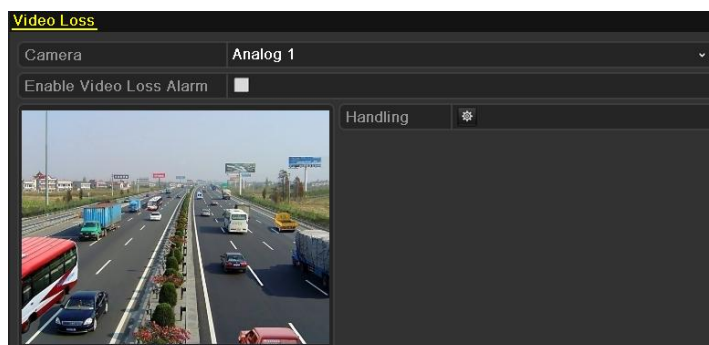



Figure 8.11 Video Loss Setup Interface

2. Set up handling method of video loss.

Check the checkbox of “Enable Video Loss Alarm”.

Click  button to set up handling method of video loss.

3. Set arming schedule of the channel.

Select **Arming Schedule** tab to set the channel’s arming schedule.

Choose one day of a week and up to eight time periods can be set within each day. Or you can click the

Copy button to copy the time period settings to other day(s).



Time periods shall not be repeated or overlapped.

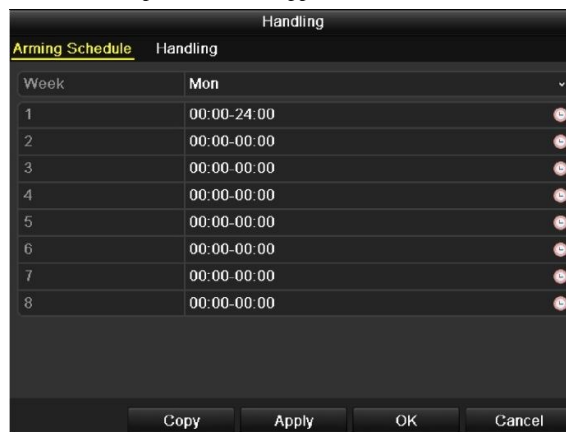


Figure 8.12 Set Arming Schedule of Video Loss

Repeat the above steps to set arming schedule of other days of a week. You can also use **Copy** button to copy an arming schedule to other days.

4. Select **Handling** tab to set up alarm response action of video loss (please refer to *Chapter 8.6 Setting Alarm Response Actions*).
5. Click the **OK** button to complete the video loss settings of the channel.
Repeat the above steps to finish settings of other channels, or click the **Copy** button copy the above settings to them.

8.4 Detecting Video Tampering

Purpose:

Trigger alarm when the lens is covered and take alarm response action(s).


Steps:

1. Enter Video Tampering interface of Camera Management and select a channel you want to detect video tampering.

Menu> Camera> Video Tempering Detection



Figure 8.13 Video Tempering Interface

2. Check the checkbox of “Enable Video Tampering”.
3. Drag the sensitivity bar and choose a proper sensitivity level.
4. Click  to set handling method of video tampering. Set arming schedule and alarm response actions of the channel.
 - 1) Click **Arming Schedule** tab to set the arming schedule of response action.
 - 2) Choose one day of a week and up to eight time periods can be set within each day.



Time periods shall not be repeated or overlapped.

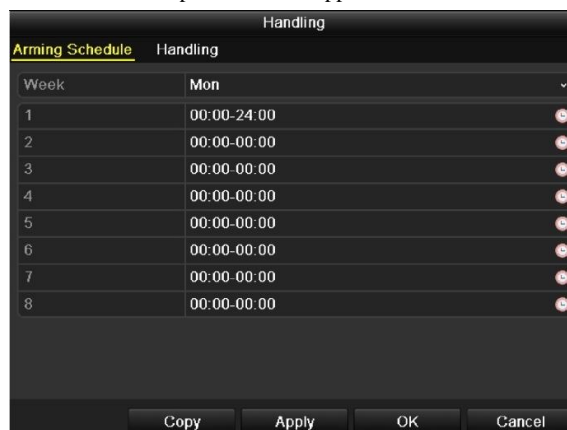


Figure 8.14 Set Arming Schedule of Video Tampering

- 3) Select Handling tab to set alarm response actions of video tampering alarm (please refer to *Chapter*

8.6 Setting Alarm Response Actions).

Repeat the above steps to set arming schedule of other days of a week. You can also use **Copy** button to copy an arming schedule to other days.

- 4) Click the **OK** button to complete the video tampering settings of the channel.

Repeat the above steps to finish settings of other channels, or click the **Copy** button copy the above settings to them.

8.5 Handling Exceptions

Purpose:

Exception settings refer to the handling method of various exceptions, e.g.

- **HDD Full:** The HDD is full.
- **HDD Error:** Writing HDD error, unformatted HDD, etc.
- **Network Disconnected:** Disconnected network cable.
- **IP Conflicted:** Duplicated IP address.
- **Illegal Login:** Incorrect user ID or password.
- **Input/Recording Resolution Mismatch:** The input resolution is smaller than the recording resolution.
- **Record Exception:** No space for saving recorded files.

Steps:

Enter Exception interface of System Configuration and handle various exceptions.

Menu> Configuration> Exceptions

Please refer to *Chapter 8.6 Setting Alarm Response Actions* for detailed alarm response actions.

Exception

Exception Type	HDD Full
Audible Warning	<input type="checkbox"/>
Notify Surveillance Center	<input type="checkbox"/>
Send Email	<input type="checkbox"/>

DS-7200HFHI-SL&SE&ST

Exception

Exception Type	HDD Full
Audible Warning	<input type="checkbox"/>
Notify Surveillance Center	<input type="checkbox"/>
Send Email	<input type="checkbox"/>
Trigger Alarm Output	<input type="checkbox"/>

DS-7300HFHI-ST and DS-8100HFHI-ST

Figure 8. 15 Exceptions Settings Interface

8.6 Setting Alarm Response Actions

Purpose:

Take alarm response actions will be activated when an alarm or exception occurs, including Full Screen Monitoring, Audible Warning (buzzer), Notify Surveillance Center, Send Email and Trigger Alarm Output.

● **Full Screen Monitoring**

When an alarm is triggered, the local monitor (HDMI or VGA monitor) display in full screen the video image from the alarming channel configured for full screen monitoring.

If alarms are triggered simultaneously in several channels, their full-screen images will be switched at an interval of 10 seconds (default dwell time). A different dwell time can be set by going to Menu > Configuration > Live View.

Auto-switch will terminate once the alarm stops and you will be taken back to the Live View interface.

● **Audible Warning**

Trigger an audible *beep* when an alarm is detected.

● **Notify Surveillance Center**

Sends an exception or alarm signal to remote alarm host when an event occurs. The alarm host refers to the PC installed with Remote Client.



The alarm signal will be transmitted automatically at detection mode when remote alarm host is configured. Please refer to *Chapter 9.2.6 Configuring the Remote Alarm Host* for details of alarm host configuration.

● **Send Email**

Send an email with alarm information to a user or users when an alarm is detected.

Please refer to *Chapter 9.2.10 Configuring Email* for details of Email configuration.


● **Trigger Alarm Output**

Trigger an alarm output when an alarm is triggered.

Steps:

1. Enter Alarm Output interface.

Menu> Configuration> Alarm> Alarm Output

Select an alarm output and set alarm name and dwell time. Click  button to set the arming schedule of alarm output.



If “Manually Clear” is selected in the dropdown list of Dwell Time, you can clear it only by going to Menu> Manual> Alarm.

Alarm Status	Alarm Input	Alarm Output
Alarm Output No.	A->1	
Alarm Name	out1	
Dwell Time	5s	
Handling		

Figure 8. 16 Alarm Output Settings Interface

2. Set up arming schedule of the alarm output.

Choose one day of a week and up to 8 time periods can be set within each day.



Time periods shall not be repeated or overlapped.

A screenshot of the "Arming Schedule" dialog box. The dialog has a title bar "Handling" and a subtitle "Arming Schedule". It features a table with 8 rows and 2 columns: "Week" and "Mon". The first row is selected, showing "1" in the "Week" column and "00:00-24:00" in the "Mon" column. Each row has a small circular icon with a red 'X' to its right. At the bottom of the dialog are four buttons: "Copy", "Apply", "OK", and "Cancel".

Week	Mon
1	00:00-24:00
2	00:00-00:00
3	00:00-00:00
4	00:00-00:00
5	00:00-00:00
6	00:00-00:00
7	00:00-00:00
8	00:00-00:00

Figure 8. 17 Set Arming Schedule of Alarm Output

3. Repeat the above steps to set arming schedule of other days of a week. You can also use Copy button to copy an arming schedule to other days.

Click the **OK** button to complete the arming schedule setting of alarm output.

4. Click the **Apply** button to save the settings.

8.7 Triggering or Clearing Alarm Output Manually

Purpose:

Sensor alarm can be triggered or cleared manually. If “Manually Clear” is selected in the dropdown list of dwell time of an alarm output, the alarm can be cleared only by clicking **Clear** button in the following interface.

Steps:

Select the alarm output you want to trigger or clear and make related operations.

Menu> Manual> Alarm

Click **Trigger/Clear** button if you want to trigger or clear an alarm output.

Click **Trigger All** button if you want to trigger all alarm outputs.

Click **Clear All** button if you want to clear all alarm output.



No.	Alarm Name	IP Camera Address	Trigger
A->1		Local	No

Figure 8. 18 Clear or Trigger Alarm Output Manually

Chapter 9 Network Settings

9.1 Configuring General Settings

Purpose:

Network settings must be properly configured before you operate DVR over network.

Steps:

1. Enter the Network Settings interface.

Menu > Configuration > Network

Working Mode	Net Fault-tolerance
Select NIC	bond0
NIC Type	10M/100M/1000M Self-adaptive
Enable DHCP	<input type="checkbox"/>
IPv4 Address	172 .6 .21 .159
IPv4 Subnet Mask	255 .255 .255 .0
IPv4 Default Gateway	172 .6 .21 .1
IPv6 Address 1	fec0::a:240:48ff:fe62:dcd/64
IPv6 Address 2	2002:ac06:1578:a:240:48ff:fe62:dcd/64
IPv6 Default Gateway	
MAC Address	00:40:48:62:0d:cd
MTU(Bytes)	1500
Preferred DNS Server	
Alternate DNS Server	
Main NIC	LAN1

DS-8100HFHI-ST

NIC Type	10M/100M/1000M Self-adaptive
Enable DHCP	<input type="checkbox"/>
IPv4 Address	172 .6 .23 .216
IPv4 Subnet Mask	255 .255 .255 .0
IPv4 Default Gateway	172 .6 .23 .1
IPv6 Address 1	fe80::8ee7:48ff:fe24:4214/64
IPv6 Address 2	
IPv6 Default Gateway	
MAC Address	8c:e7:48:24:42:14
MTU(Bytes)	1500
Preferred DNS Server	
Alternate DNS Server	

Other Models

Figure 9. 1 Network Settings Interface

2. Select the **General** tab.
3. In the **General Settings** interface, you can configure the following settings: Working mode (applicable for DS-8100HFHI-ST only), NIC Type, IPv4 Address, IPv4 Gateway, MTU and DNS Server.

If the DHCP server is available, you can check the checkbox of **DHCP** to automatically obtain an IP address and other network settings from that server.



The valid value of MTU is from 500 to 1500.

4. After having configured the general settings, click the **Apply** button to save the settings.

Working Mode

There are two 10M/100M/1000M NIC cards provided by the DS-8100HFHI-ST series device, and it allows the device to work in the Multi-address, Load Balance and Net-fault Tolerance modes.

Multi-address Mode: The parameters of the two NIC cards can be configured independently. You can select LAN1 or LAN2 in the NIC type field for parameter settings.

You can select one NIC card as default route. And then the system is connecting with the extranet the data will be forwarded through the default route.

Net-fault Tolerance Mode: The two NIC cards use the same IP address, and you can select the Main NIC to LAN1 or LAN2. By this way, in case of one NIC card failure, the device will automatically enable the other standby NIC card so as to ensure the normal running of the whole system.

Load Balance Mode: By using the same IP address and two NIC cards share the load of the total bandwidth, which enables the system to provide two Gigabit network capacity.

9.2 Configuring Advanced Settings

9.2.1 Configuring PPPoE Settings

Purpose:

The DVR also allows access by Point-to-Point Protocol over Ethernet (PPPoE).

Steps:

1. Enter the **Network Settings** interface.
Menu > Configuration > Network
2. Select the **PPPoE** tab to enter the PPPoE Settings interface.

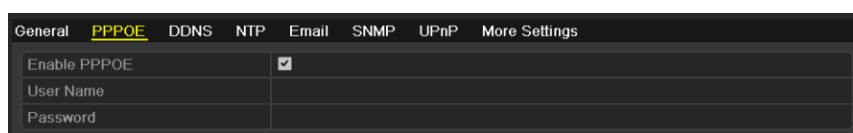


Figure 9.2 PPPoE Settings Interface

3. Check the **PPPoE** checkbox to enable this feature.
4. Enter **User Name** and **Password** for PPPoE access.



The User Name and Password should be assigned by your ISP.

5. Click the **Apply** button to save the settings.
6. After successful settings, the system asks you to reboot the device to enable the new settings, and the PPPoE dial-up is automatically connected after reboot.

You can go to Menu > Maintenance > System Info > Network interface to view the status of PPPoE connection. Please refer to *Chapter 12.1.5 Viewing Network Information* for PPPoE status.

9.2.2 Configuring DDNS

Purpose:

If your DVR is set to use PPPoE as its default network connection, you may set Dynamic DNS (DDNS) to be used for network access.

Prior registration with your ISP is required before configuring the system to use DDNS.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **DDNS** tab to enter the DDNS Settings interface.

Enable DDNS	<input type="checkbox"/>
DDNS Type	IPServer
Server Address	
Device Domain Name	
User Name	
Password	
Confirm	

Figure 9.3 DDNS Settings Interface

3. Check the **DDNS** checkbox to enable this feature.
4. Select **DDNS Type**. Five different DDNS types are selectable: IPServer, DynDNS, PeanutHull, NO-IP and HiDDNS.
 - **IPServer:** Enter **Server Address** for IPServer.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	IPServer
Server Address	
Device Domain Name	
User Name	
Password	
Confirm	

Figure 9.4 IPServer Settings Interface

- **DynDNS:**
 - 1) Enter **Server Address** for DynDNS (i.e. members.dyndns.org).
 - 2) In the DVR Domain Name text field, enter the domain obtained from the DynDNS website.
 - 3) Enter the **User Name** and **Password** registered in the DynDNS website.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	DynDNS
Server Address	
Device Domain Name	
User Name	
Password	
Confirm	

Figure 9.5 DynDNS Settings Interface

- **PeanutHull:** Enter the **User Name** and **Password** obtained from the PeanutHull website.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	PeanutHull
Server Address	
Device Domain Name	
User Name	
Password	
Confirm	

Figure 9.6 PeanutHull Settings Interface

- **NO-IP:**

Enter the account information in the corresponding fields. Refer to the DynDNS settings.

 - 1) Enter **Server Address** for NO-IP.
 - 2) In the DVR Domain Name text field, enter the domain obtained from the NO-IP website (www.no-ip.com).
 - 3) Enter the **User Name** and **Password** registered in the NO-IP website.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	NO-IP
Server Address	
Device Domain Name	
User Name	
Password	
Confirm	

Figure 9. 7 NO-IP Settings Interface

- **HiDDNS:**


- 1) The **Server Address** of the HiDDNS server appears by default: www.hik-online.com.
- 2) Enter the **Device Domain Name**. You can use the alias you registered in the HiDDNS server or define a new device domain name. If a new alias of the device domain name is defined in the DVR, it will replace the old one registered on the server. You can register the alias of the device domain name in the HiDDNS server first and then enter the alias to the **Device Domain Name** in the DVR; you can also enter the domain name directly on the DVR to create a new one.

Enable DDNS	<input checked="" type="checkbox"/>
DDNS Type	HiDDNS
Server Address	www.hik-online.com
Device Domain Name	
User Name	
Password	
Confirm	

Figure 9. 8 HiDDNS Settings Interface


Register the device on the HiDDNS server.

- 1) Go to the HiDDNS website: www.hik-online.com.
- 2) Click [Register new user](#) to register an account if you do not have one and use the account to log in.

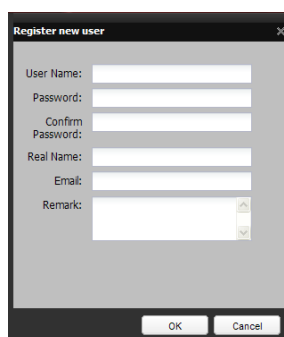

A dialog box titled "Register new user" with a close button (X) in the top right corner. It contains the following fields: User Name, Password, Confirm Password, Real Name, Email, and Remark. At the bottom, there are "OK" and "Cancel" buttons.

Figure 9. 9 Register an Account

- 3) In the Device Management interface, click  to register the device.

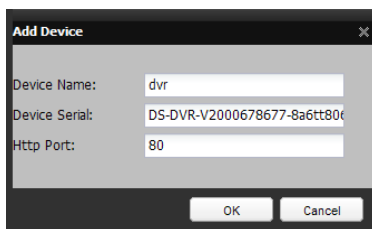


Figure 9.10 Register the Device



The device name can only contain the lower-case English letter, numeric and '-'; and it must start with the lower-case English letter and cannot end with '-'.

Access the Device via Web Browser or Client Software

After having successfully registered the device on the HiDDNS server, you can access your device via web browser or Client Software with the **Device Domain Name (Device Name)**.

OPTION 1: Access the Device via Web Browser


Open a web browser, and enter *http://www.hik-online.com/alias* in the address bar. Alias refers to the **Device Domain Name** on the device or the **Device Name** on the HiDDNS server.

Example: *http://www.hik-online.com/dvr*



If you mapped the HTTP port on your router and changed it to port No. except 80, you have to enter *http://www.hik-online.com/alias:HTTP port* in the address bar to access the device. You can refer to *Chapter 9.2.5 Configuring UPnP™* for the mapped HTTP port No.

OPTION 2: Access the devices via iVMS4200

For iVMS-4200, in the Add Device window, select  **HiDDNS** and then edit the device information.

Nickname: Edit a name for the device as you want.

Server Address: www.hik-online.com

Device Domain Name: It refers to the **Device Domain Name** on the device or the **Device Name** on the HiDDNS server you created.

User Name: Enter the user name of the device. By default it is admin.

Password: Enter the password of the device. By default it is 12345.

Figure 9.11 Access Device via iVMS4200

- Click the **Apply** button to save and exit the interface.

9.2.3 Configuring NTP Server

Purpose:

A Network Time Protocol (NTP) Server can be configured on your DVR to ensure the accuracy of system date/time.

Steps:

- Enter the Network Settings interface.
Menu > Configuration > Network
- Select the **NTP** tab to enter the NTP Settings interface.

Figure 9.12 NTP Settings Interface

- Check the **Enable NTP** checkbox to enable this feature.
- Configure the following NTP settings:
 - Interval:** Time interval between the two synchronizing actions with NTP server. The unit is minute.
 - NTP Server:** IP address of NTP server.
 - NTP Port:** Port of NTP server.
- Click the **Apply** button to save and exit the interface.



The time synchronization interval can be set from 1 to 10080 minutes, and the default value is 60 minutes. If the DVR is connected to a public network, you should use a NTP server that has a time synchronization function, such as the server at the National Time Center (IP Address: 210.72.145.44). If the DVR is set in a more customized network, NTP software can be used to establish a NTP server used for time synchronization.


9.2.4 Configuring SNMP

Purpose:

You can use SNMP protocol to get device status and parameters related information.

Steps:


1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **SNMP** tab to enter the SNMP Settings interface.

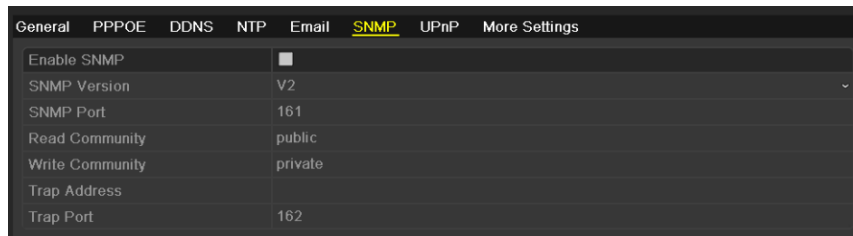

General	PPPOE	DDNS	NTP	Email	SNMP	UPnP	More Settings
Enable SNMP					<input type="checkbox"/>		
SNMP Version					V2		
SNMP Port					161		
Read Community					public		
Write Community					private		
Trap Address							
Trap Port					162		

Figure 9.13 SNMP Settings Interface

3. Check the **Enable SNMP** checkbox to enable this feature.
4. Configure the following SNMP settings:
 - **Trap Address:** IP Address of SNMP host.
 - **Trap Port:** Port of SNMP host.

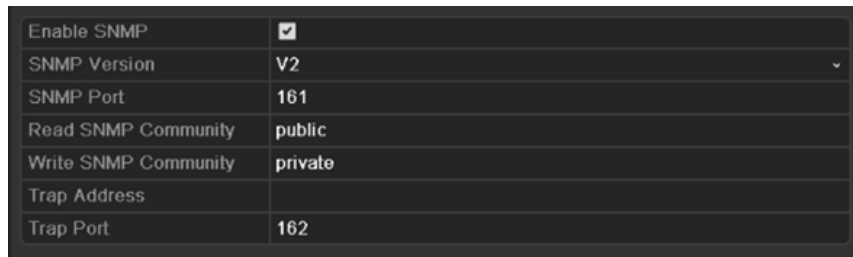

Enable SNMP	<input checked="" type="checkbox"/>
SNMP Version	V2
SNMP Port	161
Read SNMP Community	public
Write SNMP Community	private
Trap Address	
Trap Port	162

Figure 9.14 Configure SNMP Settings

5. Click the **Apply** button to save and exit the interface.



Before setting the SNMP, please download the SNMP software and manage to receive the device information via SNMP port. By setting the Trap Address, the DVR is allowed to send the alarm event and exception message to the surveillance center.

9.2.5 Configuring UPnP™

Purpose:

Universal Plug and Play (UPnP™) can permit the device seamlessly discover the presence of other network devices on the network and establish functional network services for data sharing, communications, etc. You can use the UPnP™ function to enable the fast connection of the device to the WAN via a router without port mapping.

Before you start:

If you want to enable the UPnP™ function of the device, you must enable the UPnP™ function of the router to which your device is connected. When the network working mode of the device is set as multi-address, the Default Route of the device should be in the same network segment as that of the LAN IP address of the router.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **UPnP** tab to enter the UPnP™ interface.

Enable UPnP ☐

Mapping Type: Manual

Port Type	Edit	External Port	Mapping IP Address	Port	Status
Server Port		8000	0.0.0.0	8000	Inactive
HTTP Port		80	0.0.0.0	80	Inactive
RTSP Port		554	0.0.0.0	554	Inactive

Refresh

Figure 9.15 UPnP™ Settings Interface

3. Check ☒ checkbox to enable UPnP™.
4. Select the Mapping Type as Manual or Auto in the drop-down list.

OPTION 1: Auto

If you select Auto, the Port Mapping items are read-only, and the external ports are set by the router automatically.

- 1) Click **Apply** button to save the settings.
- 2) You can click **Refresh** button to get the latest status of the port mapping.

Enable UPnP ☒

Mapping Type: Auto

Port Type	Edit	External Port	Mapping IP Address	Port	Status
Server Port		43728	172.6.21.31	8000	Active
HTTP Port		31397	172.6.21.31	80	Active
RTSP Port		59826	172.6.21.31	554	Active

Refresh

Figure 9.16 UPnP™ Settings Finished-Auto

OPTION 2: Manual

If you select Manual as the mapping type, you can edit the external port on your demand by clicking to activate the External Port Settings dialog box.

Steps:

- 1) Click to activate the External Port Settings dialog box. Configure the external port No. for server port, http port and RTSP port respectively.



- You can use the default port No., or change it according to actual requirements.
- External Port indicates the port No. for port mapping in the router.
- The value of the RTSP port No. should be 554 or between 1024 and 65535, while the value of

the other ports should be between 1 and 65535 and the value must be different from each other. If multiple devices are configured for the UPnP™ settings under the same router, the value of the port No. for each device should be unique.

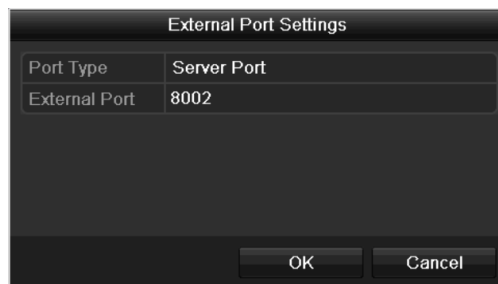


Figure 9.17 External Port Settings Dialog Box

- 2) Click **Apply** button to save the settings.
- 3) You can click **Refresh** button to get the latest status of the port mapping.

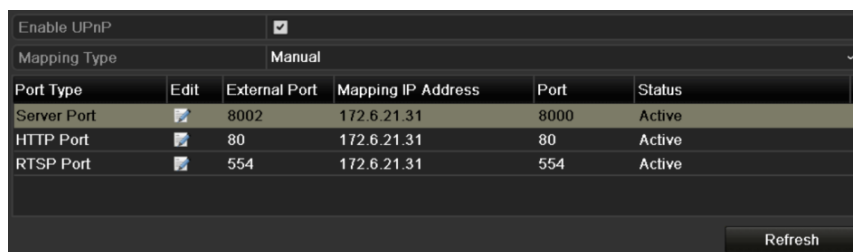


Figure 9.18 UPnP™ Settings Finished-Manual

9.2.6 Configuring the Remote Alarm Host

Purpose:

With a remote alarm host configured, the DVR will send the alarm event or exception message to the host when an alarm is triggered. The remote alarm host must have the Network Video Surveillance software installed.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **More Settings** tab to enter the More Settings interface.

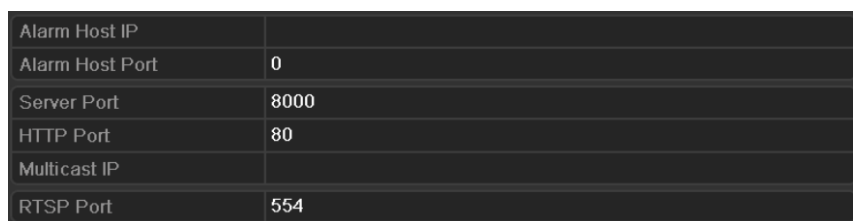


Figure 9.19 More Settings Interface

3. Enter **Alarm Host IP** and **Alarm Host Port** in the text fields.

The **Alarm Host IP** refers to the IP address of the remote PC on which the CMS (Client Management

System) software (e.g., iVMS-4200) is installed, and the **Alarm Host Port** must be the same as the alarm monitoring port configured in the software (default port is 7200).

Alarm Host IP	172.5.8.111
Alarm Host Port	7200
Server Port	8000
HTTP Port	80
Multicast IP	
RTSP Port	554

Figure 9.20 Configure Alarm Host

- Click the **Apply** button to save and exit the interface.

9.2.7 Configuring Multicast

Purpose:

The multicast can be configured to realize live view for more than 128 cameras through network.

A multicast address spans the Class-D IP range of 224.0.0.0 to 239.255.255.255. It is recommended to use the IP address ranging from 239.252.0.0 to 239.255.255.255.

Steps:

- Enter the Network Settings interface.
Menu > Configuration > Network
- Select the **More Settings** tab to enter the More Settings interface.
- Set **Multicast IP**. When adding a device to the CMS (Client Management System) software, the multicast address must be the same as the DVR's multicast IP.

Alarm Host IP	172.5.8.111
Alarm Host Port	7200
Server Port	8000
HTTP Port	80
Multicast IP	239.252.2.50
RTSP Port	554

Figure 9.21 Configure Multicast

- Click the **Apply** button to save and exit the interface.

9.2.8 Configuring RTSP

Purpose:

The RTSP (Real Time Streaming Protocol) is a network control protocol designed for using in entertainment and communications systems to control streaming media servers.

Steps:

- Enter the Network Settings menu:
Menu > Configuration > Network
- Select the **More Settings** tab to enter the More Settings menu.

Alarm Host IP	172.5.8.111
Alarm Host Port	7200
Server Port	8000
HTTP Port	80
Multicast IP	239.252.2.50
RTSP Port	554

Figure 9.22 RTSP Settings Interface

3. Enter the RTSP port in the text field of **RTSP Service Port**. The default RTSP port is 554, and you can change it according to different requirements.
4. Click the **Apply** button to save and exit the menu.

9.2.9 Configuring Server and HTTP Ports

Purpose:

You can change the server and HTTP ports in the Network Settings menu. The default server port is 8000 and the default HTTP port is 80.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **More Settings** tab to enter the More Settings interface, as shown in Figure 9.23.
3. Enter new **Server Port** and **HTTP Port**.

Alarm Host IP	
Alarm Host Port	
Server Port	8000
HTTP Port	80
Multicast IP	
RTSP Port	

Figure 9.23 Host/Others Settings Menu

4. Enter the Server Port and HTTP Port in the text fields. The default Server Port is 8000 and the HTTP Port is 80, and you can change them according to different requirements.
5. Click the **Apply** button to save and exit the interface.



The Server Port should be set to the range of 2000-65535 and it is used for remote client software access.
The HTTP port is used for remote web browser access.

9.2.10 Configuring Email

Purpose:

The system can be configured to send an Email notification to all designated users if an event is detected, e.g. an alarm or motion event is detected, etc.

Before configuring the Email settings, the DVR must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notification. Additionally, the Preferred DNS server must be configured.

Before you start:

Make sure you have configured the IPv4 Address, IPv4 Subnet Mask, IPv4 Gateway and the Preferred DNS Server in the Network Settings menu. Please refer to *Chapter 9.1 Configuring General Settings* for detailed information.

Steps:

1. Enter the Network Settings interface.
Menu > Configuration > Network
2. Select the **Email** tab to enter the Email Settings interface.

Enable Server Authentication...	<input type="checkbox"/>
User Name	
Password	
SMTP Server	126.smtp.com
SMTP Port	25
Enable SSL	<input checked="" type="checkbox"/>
Sender	test01
Sender's Address	test01@126.com
Select Receivers	Receiver 1 ▼
Receiver	test02
Receiver's Address	test02@163.com
Enable Attached Picture	<input checked="" type="checkbox"/>
Interval	2s ▼

Figure 9. 24 Email Settings Interface

3. Configure the following Email settings:

Enable Server Authentication (optional): Check the checkbox to enable the server authentication feature.

User Name: The user account of sender's Email for SMTP server authentication.

Password: The password of sender's Email for SMTP server authentication.

SMTP Server: The SMTP Server IP address or host name (e.g., smtp.263xmail.com).

SMTP Port No.: The SMTP port. The default TCP/IP port used for SMTP is 25.

Enable SSL (optional): Click the checkbox to enable SSL if required by the SMTP server.

Sender: The name of sender.

Sender's Address: The Email address of sender.

Select Receivers: Select the receiver. Up to 3 receivers can be configured.

Receiver: The name of the receiver of the Email.

Receiver's Address: The Email address of the receiver.

Enable Attached Pictures: Check the checkbox of **Enable Attached Picture** if you want to send email with attached alarm images. The interval is the time between two captures of the alarm images.

Interval: The interval refers to the time between two actions of sending attached pictures.

E-mail Test: Sends a test message to verify that the SMTP server can be reached.

4. Click the **Apply** button to save the Email settings.

5. You can click the **Test** button to test whether your Email settings work. The corresponding Attention message box pops up.

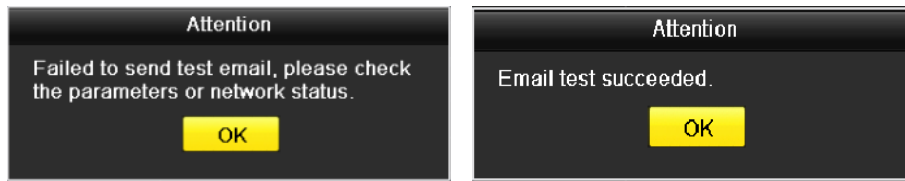


Figure 9. 25 Email Testing Attention

9.3 Checking Network Traffic

Purpose:

You can check the network traffic to obtain real-time information of DVR such as linking status, MTU, sending/receiving rate, etc.

Steps:

1. Enter the Network Traffic interface.

Menu > Maintenance > Net Detect

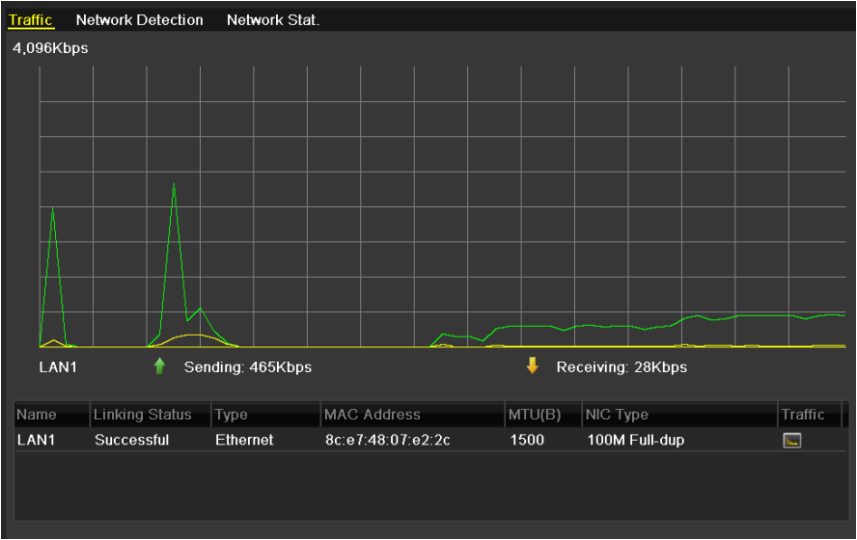


Figure 9. 26 Network Traffic Interface

2. You can view the sending rate and receiving rate information on the interface. The traffic data is refreshed every 1 second.

9.4 Configuring Network Detection

Purpose:

You can obtain network connecting status of DVR through the network detection function, including network delay, packet loss, etc.

9.4.1 Testing Network Delay and Packet Loss

Steps:

1. Enter the Network Traffic interface.
Menu > Maintenance > Net Detect
2. Click the **Network Detection** tab to enter the Network Detection menu.

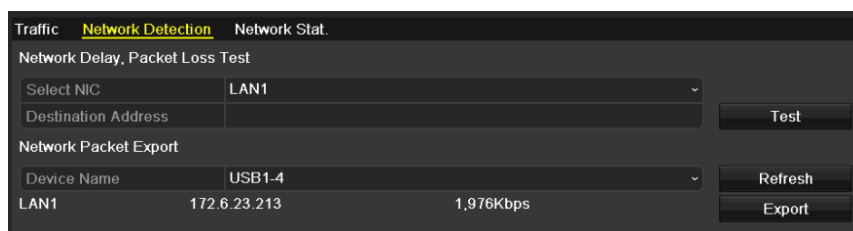


Figure 9.27 Network Detection Interface

3. Select a NIC to test network delay and packet loss.
4. Enter the destination address in the text field of **Destination Address**.
5. Click the **Test** button to start testing network delay and packet loss. The testing result pops up on the window. If the testing is failed, the error message box will pop up as well.

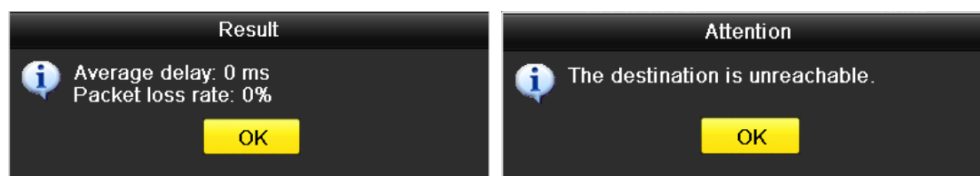


Figure 9.28 Testing Result of Network Delay and Packet Loss

9.4.2 Exporting Network Packet

Purpose:

By connecting the DVR to network, the captured network data packet can be exported to USB-flash disk, SATA and other local backup devices.

Steps:

1. Enter the Network Traffic interface.
Menu > Maintenance > Net Detect
2. Click the **Network Detection** tab to enter the Network Detection interface.

3. Select the backup device from the dropdown list of Device Name.



Click the **Refresh** button if the connected local backup device cannot be displayed. When it fails to detect the backup device, please check whether it is compatible with the DVR. You can format the backup device if the format is incorrect.

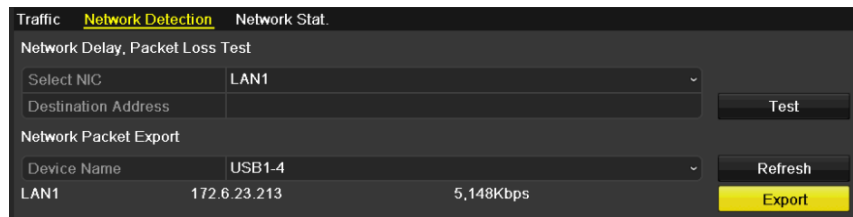


Figure 9. 29 Export Network Packet

4. Click the **Export** button to start exporting.
5. After the exporting is complete, click **OK** to finish the packet export.

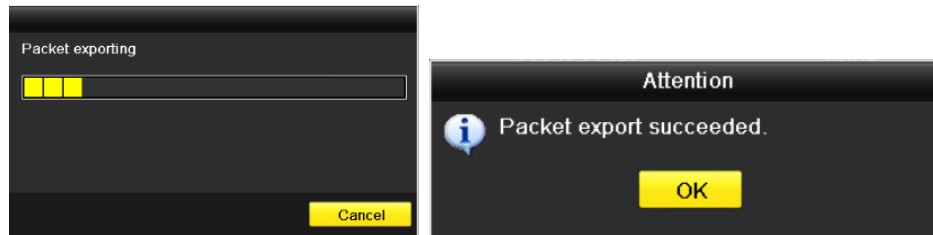


Figure 9. 30 Packet Export Attention



Up to 1M data can be exported each time.

9.4.3 Checking Network Status

Purpose:

You can also check the network status and quick set the network parameters in this interface.

Steps:

Click Status on the right bottom of the page.

The screenshot shows a web interface with three tabs: Traffic, Network Detection (selected), and Network Stat. Under Network Detection, there is a section 'Network Delay, Packet Loss Test' with a 'Select NIC' dropdown set to 'LAN1' and a 'Destination Address' field. To the right is a 'Test' button. Below this is a 'Network Packet Export' section with a 'Device Name' dropdown set to 'USB1-4'. To the right are 'Refresh' and 'Export' buttons. At the bottom, there is a summary row showing 'LAN1', '172.6.23.213', and '1.976Kbps'.

Figure 9.31 Checking Network Status

If the network is normal the following message box pops out.

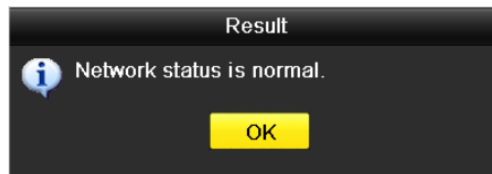


Figure 9.32 Network Status Checking Result

If the message box pops out with other information instead of this one, you can click **Network** button to show the quick setting interface of the network parameters.

The screenshot shows a 'Network' configuration dialog box. It has several fields: 'NIC Type' (10M/100M/1000M Self-adaptive), 'Enable DHCP' (checkbox), 'IPv4 Address' (172.6.23.213), 'IPv4 Subnet Mask' (255.255.255.0), 'IPv4 Default Gateway' (172.6.23.1), 'Preferred DNS Server', and 'Alternate DNS Server'. At the bottom are 'Apply', 'OK', and 'Cancel' buttons.

Figure 9.33 Network Parameters Configuration

9.4.4 Checking Network Statistics

Purpose:


You can check the network statistics to obtain the real-time information of the device.

Steps:

1. Enter the Network Statistics interface.

Menu > Maintenance> Net Detect

2. Click the **Network Stat.** tab to enter the Network Statistics menu.

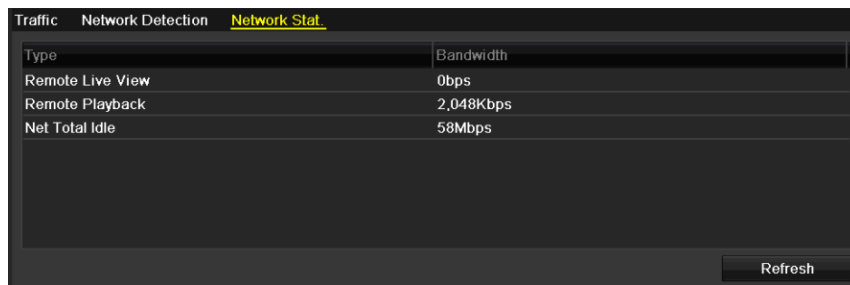

The screenshot shows a web interface with three tabs: 'Traffic', 'Network Detection', and 'Network Stat.'. The 'Network Stat.' tab is selected and highlighted in yellow. Below the tabs is a table with two columns: 'Type' and 'Bandwidth'. The table contains three rows of data. At the bottom right of the interface is a 'Refresh' button.

Type	Bandwidth
Remote Live View	0bps
Remote Playback	2,048Kbps
Net Total Idle	58Mbps

Figure 9. 34 Network Stat. Interface

3. View the bandwidth of Remote Live View, bandwidth of Remote Playback, and bandwidth of Net Total Idle.
4. Click **Refresh** button to get the latest bandwidth statistics.

Chapter 10 HDD Management

10.1 Initializing HDDs

Purpose:

A newly installed hard disk drive (HDD) must be initialized before it can be used with your DVR.

Steps:

1. Enter the HDD Information interface.

Menu > HDD>General.

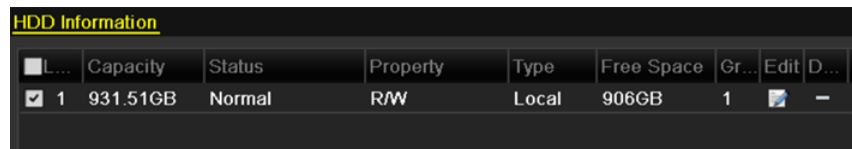


Figure 10. 1 HDD Information Interface

2. Select HDD to be initialized.
3. Click the **Init** button.

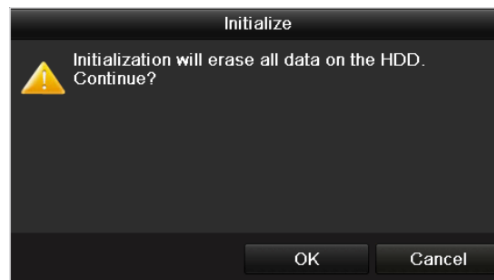


Figure 10. 2 Confirm Initialization

4. Select the **OK** button to start initialization.

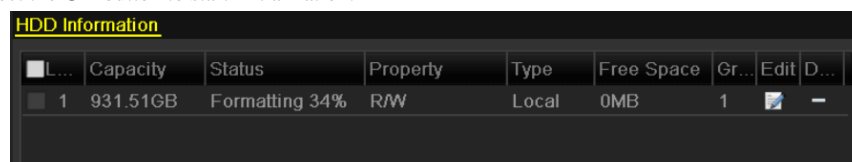


Figure 10. 3 Start Initialization

5. After the HDD has been initialized, the status of the HDD will change from *Uninitialized* to *Normal*.

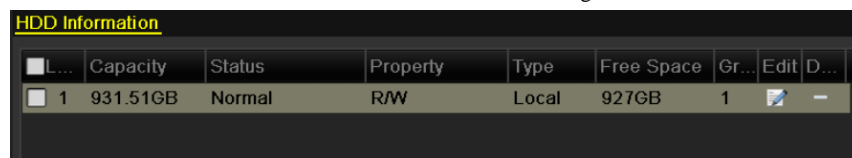


Figure 10. 4 HDD Status Changes to Normal



Initializing the HDD will erase all data on it.

10.2 Managing Network HDD


Purpose:

You can add the allocated NAS or disk of IP SAN to DVR, and use it as network HDD.

Steps:

1. Enter the HDD Information interface.


Menu > HDD>General

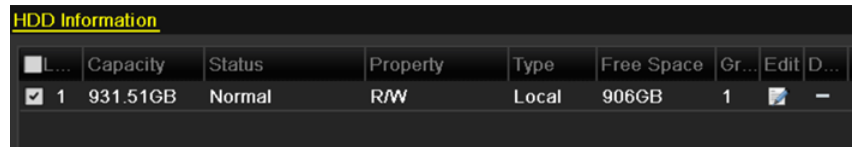

L...	Capacity	Status	Property	Type	Free Space	Gr...	Edit	D...
<input checked="" type="checkbox"/> 1	931.51GB	Normal	R/W	Local	906GB	1		-

Figure 10.5 HDD Information Interface

2. Click the **Add** button to enter the Add NetHDD interface, as shown in Figure 10.6.

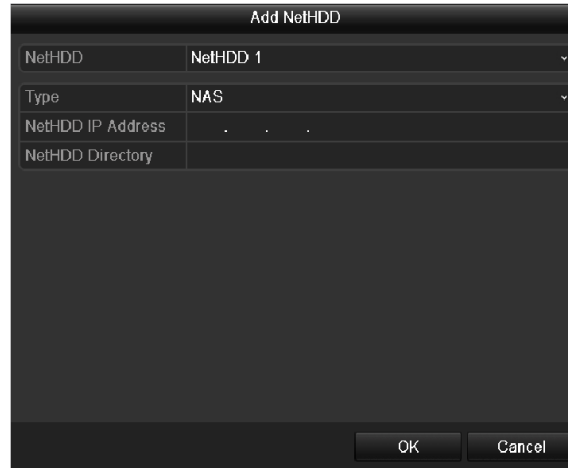

Add NetHDD	
NetHDD	NetHDD 1
Type	NAS
NetHDD IP Address	.
NetHDD Directory	
<div>OK Cancel</div>	

Figure 10.6 HDD Information Interface

3. Add the allocated NetHDD.
4. Select the type to NAS or IP SAN.
5. Configure the NAS or IP SAN settings.
 - **Add NAS disk:**
 - 1) Enter the NetHDD IP address in the text field.
 - 2) Enter the NetHDD Directory in the text field.
 - 3) Click the **OK** button to add the configured NAS disk.



Up to 8 NAS disks can be added.

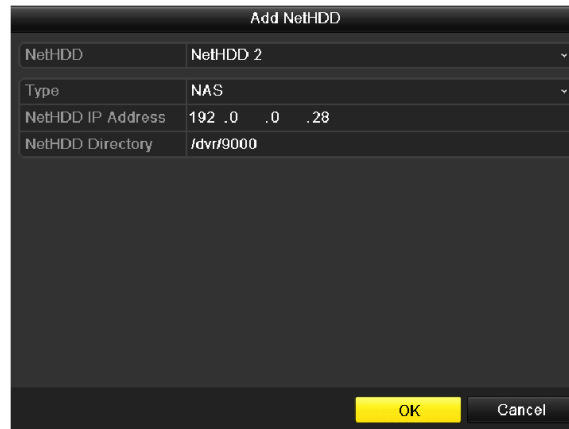


Figure 10.7 Add NAS Disk

- **Add IP SAN:**

- 1) Enter the NetHDD IP address in the text field.
- 2) Click the **Search** button to the available IP SAN disks.
- 3) Select the IP SAN disk from the list shown below.
- 4) Click the **OK** button to add the selected IP SAN disk.



Up to 1 IP SAN disk can be added.

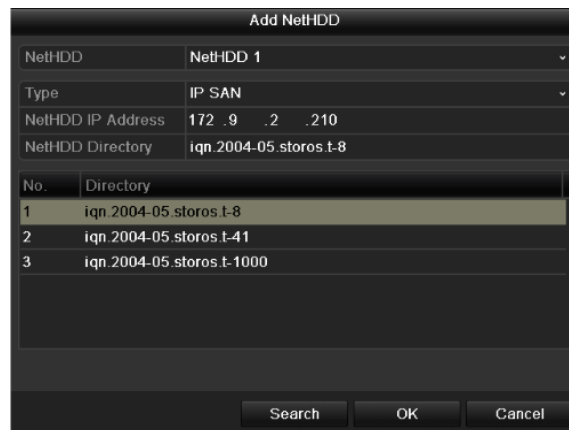


Figure 10.8 Add IP SAN Disk

6. After having successfully added the NAS or IP SAN disk, return to the HDD Information menu. The added NetHDD will be displayed in the list.



If the added NetHDD is uninitialized, please select it and click the **Init** button for initialization.

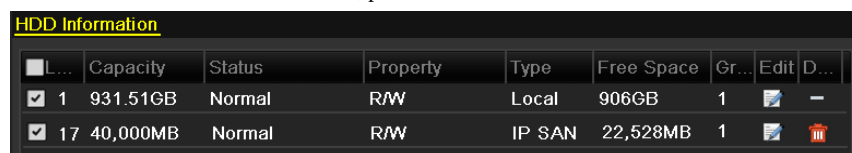


Figure 10.9 Initialize Added NetHDD

10.3 Managing eSATA

Purpose:

When there is an external eSATA device connected to DVR, you can configure eSATA for the use of Record or Export, and you can manage the eSATA in the DVR.

Steps:

1. Enter the Advanced Record Settings interface.

Menu > Record > Advanced

2. Select the eSATA type to Export or Record from the dropdown list of **eSATA**.

Export: use the eSATA for backup. Refer to *Backup using eSATA HDDs* in *Chapter 7.1.2 Backing up by Normal Video Search* for operating instructions.

Record: use the eSATA for record. Refer to the following steps for operating instructions.

 


Figure 10. 10 Set eSATA Mode

3. When the eSATA type is selected to Record, enter the HDD Information interface.

Menu > HDD > General

4. Edit the property of the selected eSATA, or initialize it is required.



Two storage modes can be configured for the eSATA when it is used for Record. Please refer to *Chapter 10.4 Managing HDD Group* and *Chapter 10.5 Configuring Quota Mode* for details.

Label	Capacity	Status	Property	Type	Free Space	Gro...	Edit	Del...
4	931.51GB	Normal	R/W	Local	921GB	1		
18	10,048MB	Uninitialized	R/W	NAS	0MB	1		
25	931.51GB	Normal	R/W	eSATA	894GB	1		

Figure 10. 11 Initialize Added eSATA

10.4 Managing HDD Group

10.4.1 Setting HDD Groups

Purpose:

Multiple HDDs can be managed in groups. Video from specified channels can be recorded onto a particular HDD group through HDD settings.

Steps:

1. Enter the Storage Mode interface.
Menu > HDD > Advanced
2. Set the **Mode** to Group, as shown in Figure 10. 12.

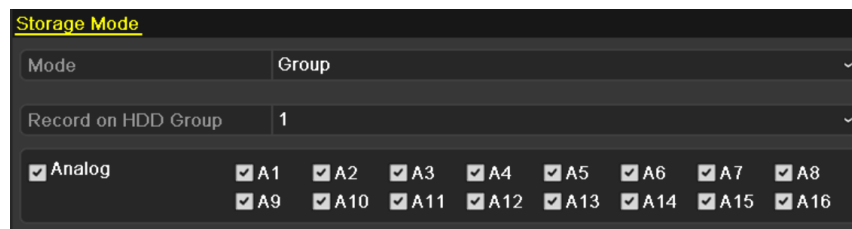


Figure 10. 12 Storage Mode Interface

3. Click the **Apply** button and the following Attention box will pop up.

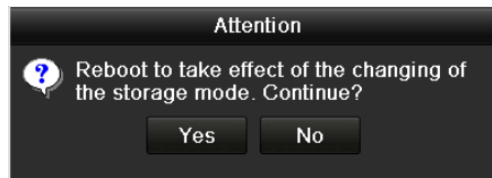



Figure 10. 13 Attention for Reboot

4. Click the **Yes** button to reboot the device to activate the changes.
5. After reboot of device, enter the HDD Information interface.
Menu > HDD > General
6. Select HDD from the list and click the  icon to enter the Local HDD Settings interface, as shown in Figure 10. 14.

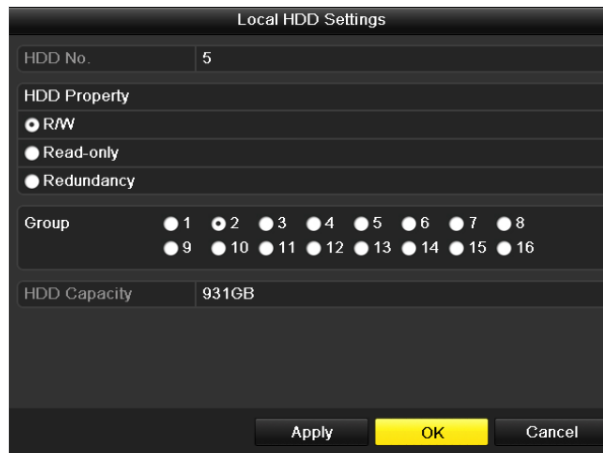


Figure 10.14 Local HDD Settings Interface

7. Select the Group number for the current HDD.



The default group No. for each HDD is 1.

8. Click the **OK** button to confirm the settings.

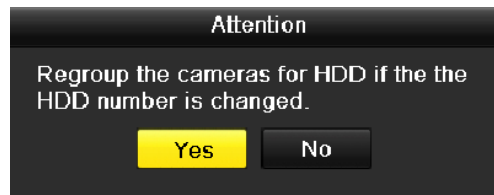


Figure 10.15 Confirm HDD Group Settings

9. In the pop-up Attention box, click the **Yes** button to finish the settings.

10.4.2 Setting HDD Property

Purpose:

The HDD property can be set to redundancy, read-only or read/write (R/W). Before setting the HDD property, please set the storage mode to Group (refer to step1-4 of *Chapter 10.4.1 Setting HDD Groups*).

A HDD can be set to read-only to prevent important recorded files from being overwritten when the HDD becomes full in overwrite recording mode.

When the HDD property is set to redundancy, the video can be recorded both onto the redundancy HDD and the R/W HDD simultaneously so as to ensure high security and reliability of video data.

Steps:

1. Enter the HDD Information interface.
Menu > HDD > General
2. Select HDD from the list and click the  icon to enter the Local HDD Settings interface, as shown in Figure 10.16.



Figure 10. 16 Set HDD Property

3. Set the HDD property to R/W, Read-only or Redundancy.
4. Click the **OK** button to save the settings and exit the interface.
5. In the HDD Information menu, the HDD property will be displayed in the list.



At least 2 hard disks must be added on your DVR when you want to set a HDD to Redundancy, and there is one HDD with R/W property.

10.5 Configuring Quota Mode

Purpose

Each camera can be configured with allocated quota for the storage of recorded files.

Steps

1. Enter the Storage Mode interface.
Menu > HDD > Advanced
2. Set the **Mode** to Quota, as shown in Figure 10. 17.



The DVR must be rebooted to enable the changes to take effect.

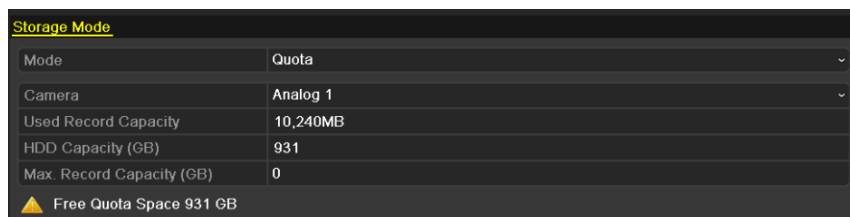


Figure 10. 17 Storage Mode Settings Interface

3. Select a camera for which you want to configure quota.
4. Enter the storage capacity in the text field of **Max. Record Capacity (GB)**, as shown in Figure 10. 18.

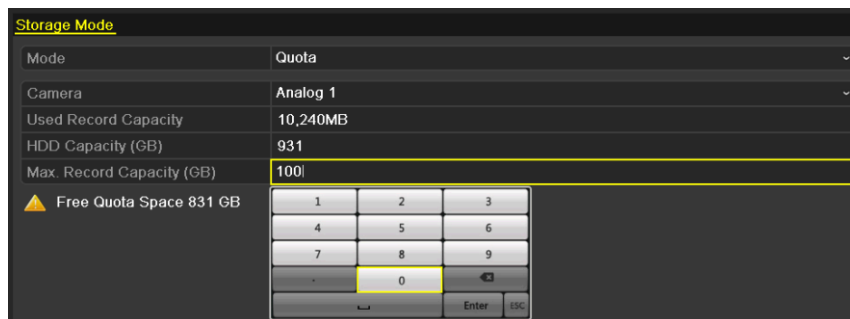


Figure 10. 18 Configure Record Quota

5. You can copy the quota settings of the current camera to other cameras if required. Click the **Copy** button to enter the Copy Camera interface, as shown in Figure 10. 19.



Figure 10. 19 Copy Settings to Other Camera(s)

6. Select the camera (s) to be configured with the same quota settings. You can also click the checkbox of Analog to select all cameras.
7. Click the **OK** button to finish the Copy settings and back to the Storage Mode interface.
8. Click the **Apply** button to apply the settings.



If the quota capacity is set to 0, then all cameras will use the total capacity of HDD for record.

10.6 Checking HDD Status


Purpose:

You may check the status of the installed HDDs on DVR so as to take immediate check and maintenance in case of HDD failure.

Checking HDD Status in HDD Information Interface

Steps:

1. Enter the HDD Information interface.
Menu > HDD>General
2. Check the status of each HDD which is displayed on the list, as shown in Figure 10. 20.

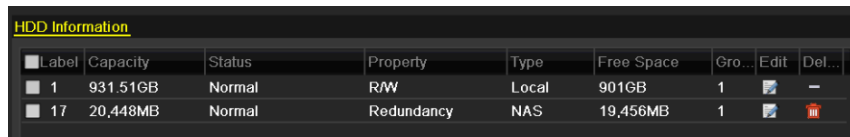

Label	Capacity	Status	Property	Type	Free Space	Gr...	Edit	Del...
1	931.51GB	Normal	R/W	Local	901GB	1		—
17	20,448MB	Normal	Redundancy	NAS	19,456MB	1		

Figure 10. 20 View HDD Status (1)




If the status of HDD is *Normal* or *Sleeping*, it works normally. If the status is *Uninitialized* or *Abnormal*, please initialize the HDD before use. And if the HDD initialization is failed, please replace it with a new one.

Checking HDD Status in System Information Interface

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **HDD** tab to view the status of each HDD displayed on the list, as shown in Figure 10. 21.

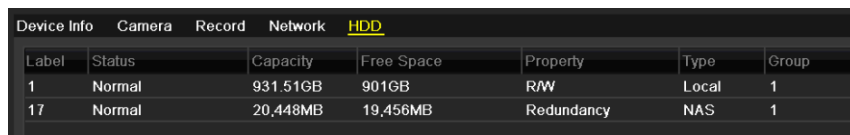

Label	Status	Capacity	Free Space	Property	Type	Group
1	Normal	931.51GB	901GB	R/W	Local	1
17	Normal	20,448MB	19,456MB	Redundancy	NAS	1

Figure 10. 21 View HDD Status (2)

10.7 Checking S.M.A.R.T Information

Purpose:

The S.M.A.R.T. (Self-Monitoring, Analysis and Reporting Technology) is a monitoring system for HDD to detect and report on various indicators of reliability in the hopes of anticipating failures.

Steps:

1. Enter the HDD Detect interface.
Menu > HDD > HDD Detect
2. Click the S.M.A.R.T. Settings tab to enter the interface.
3. Select the HDD to view its S.M.A.R.T. information list, as shown in Figure 10. 22.



If you want to use the HDD even when the S.M.A.R.T. checking is failed, you can check the checkbox before the **Continue to use this disk when self-evaluation is failed** item.

S.M.A.R.T. Settings

Bad Sector Detection

Continue to use this disk when self-evaluation is failed.

HDD

1

Self-test Status

Not tested

Self-test Type

Short Test

S.M.A.R.T.

Temperature (°C)

39

Power On (days)

267

Self-evaluation

Pass

All-evaluation

Functional

S.M.A.R.T. Information

ID	Attribute Name	Status	Flags	Threshold	Value	Worst	Raw Value
0x1	Raw Read Error Rate	OK	2f	51	200	200	0
0x3	Spin Up Time	OK	27	21	163	107	4833
0x4	Start/Stop Count	OK	32	0	100	100	348
0x5	Reallocated Sector Count	OK	33	140	200	200	0
0x7	Seek Error Rate	OK	2e	0	200	200	0
0x9	Power-on Hours Count	OK	32	0	92	92	6417
0xa	Spin Up Retry Count	OK	32	0	100	100	0

Figure 10. 22 S.M.A.R.T Settings Interface

10.8 Detecting Bad Sector

Purpose:

You can detect the bad sector of the HDD to check the status of the HDD.

Steps:

1. Enter the HDD Detect interface.

Menu>HDD>HDD Detect

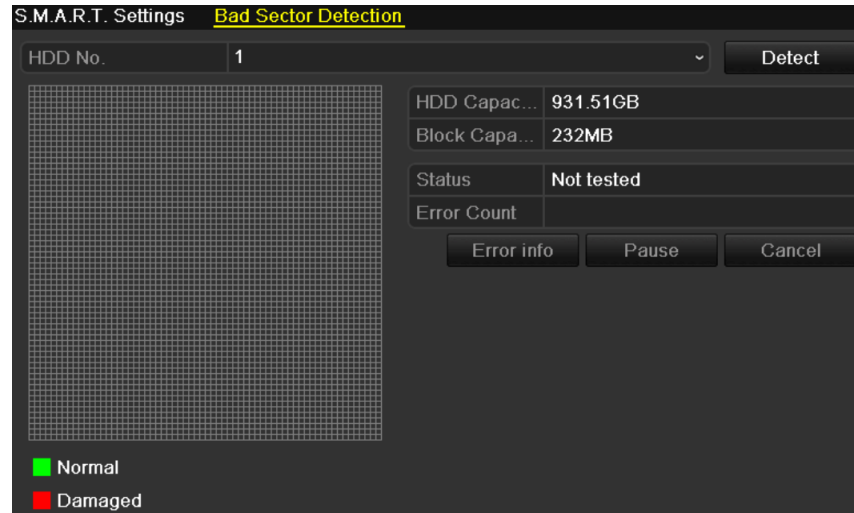


Figure 10.23 Bad Sector Detection

2. Click the Bad Sector Detection tab to enter the interface.
3. Select a HDD and click the **Detect** button to start detecting.

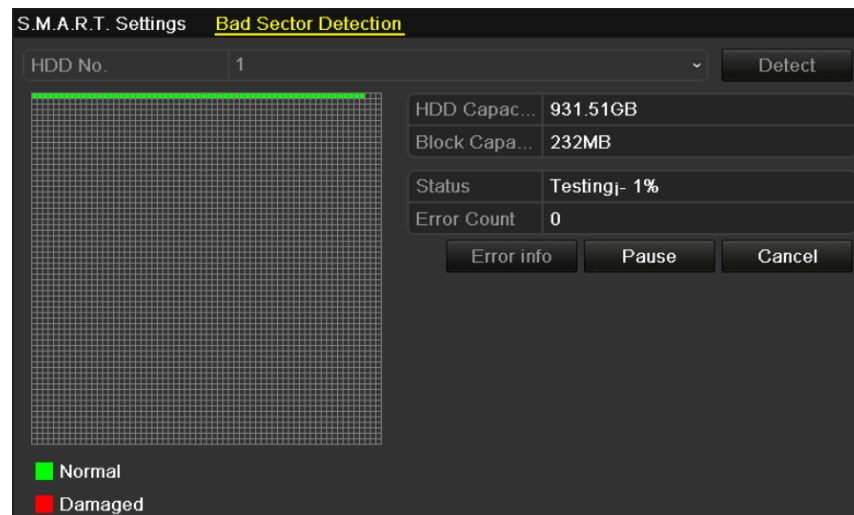


Figure 10.24 Bad Sector Detecting

4. You can click the **Pause** button to pause the detection and click the **Resume** button to resume the detection.
5. If there is error information about the HDD, you can click the **Error Info** button to view the information.

10.9 Configuring HDD Error Alarms

Purpose:

You can configure the HDD error alarms when the HDD status is *Uninitialized* or *Abnormal*.

Steps:

1. Enter the Exception interface.
Menu > Configuration > Exceptions
2. Select the Exception Type to **HDD Error** from the dropdown list.
3. Check the checkbox(s) below to select the linkage action(s) for HDD error, as shown in Figure 10. 25.
The linkage actions can be selected to: Audible Warning, Notify Surveillance Center, Send Email and Trigger Alarm Output.



Trigger alarm output is applicable to the DS-7300HFHI-ST and DS-8100HFHI-ST.

Please refer to *Chapter 8.6 Setting Alarm Response Actions*.

Exception	
Exception Type	HDD Full
Audible Warning	<input type="checkbox"/>
Notify Surveillance Center	<input type="checkbox"/>
Send Email	<input type="checkbox"/>
Trigger Alarm Output	<input type="checkbox"/>

Figure 10. 25 Configure HDD Error Alarm

4. When the Trigger Alarm Output is selected, you can also select the alarm output to be triggered from the list below.
5. Click the **Apply** button to save the settings.

Chapter 11 Camera Settings

11.1 Configuring OSD Settings

Purpose:

You can configure the OSD (On-screen Display) settings for the camera, including date /time, camera name, etc.

Steps:

1. Enter the OSD Configuration interface.
Menu > Camera > OSD
2. Select the camera to configure OSD settings.
3. Edit the Camera Name in the text field.
4. Configure the Display Name, Display Date and Display Week by checking the checkbox.
5. Select the Date Format, Time Format, Display Mode and the OSD font.

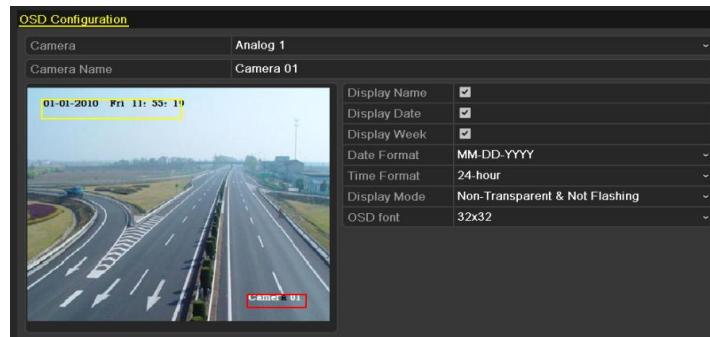


Figure 11.1 OSD Configuration Interface

6. You can use the mouse to click and drag the text frame on the preview window to adjust the OSD position.
7. Copy Camera Settings
 - 1) If you want to copy the OSD settings of the current camera to other cameras, click the **Copy** button to enter the Copy Camera interface, as shown in Figure 11.2.

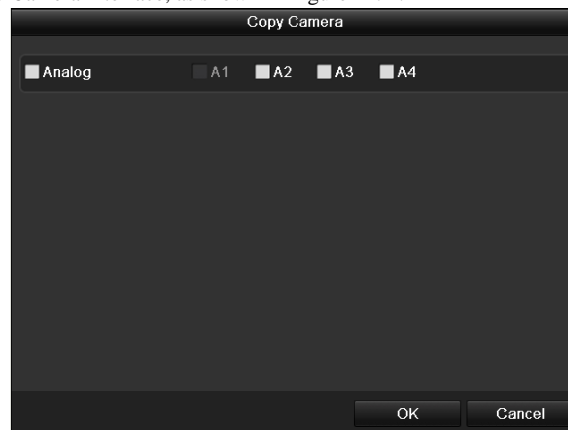


Figure 11.2 Copy Settings to Other Cameras

- 2) Select the camera (s) to be configured with the same OSD settings. You can also check the checkbox of Analog to select all cameras.
- 3) Click the **OK** button to finish the Copy settings and back to the OSD Configuration interface.
8. Click the **Apply** button to apply the settings.

11.2 Configuring Privacy Mask

Purpose:

You are allowed to configure the four-sided privacy mask zones that cannot be viewed or recorded by the operator.

Steps:

1. Enter the Privacy Mask Settings interface.
Menu > Camera > Privacy Mask
2. Select the camera to set privacy mask.
3. Check the checkbox of **Enable Privacy Mask** to enable this feature.



Figure 11.3 Privacy Mask Settings Interface

4. Use the mouse to draw a zone on the window. The zones will be marked with different frame colors.



Up to 4 privacy mask zones can be configured, and the size of each area can be adjusted.

5. The configured privacy mask zones on the window can be cleared by clicking the corresponding Clear Zone1-4 icons on the right side of the window, or click **Clear All** to clear all zones.



Figure 11.4 Set Privacy Mask Area

6. You can click the **Copy** button to copy the privacy mask settings of the current camera to other cameras.
Please refer to step 7 of *Chapter 11.1 Configuring OSD Settings*.
7. Click the **Apply** button to save the settings.

Chapter 12 DVR Management and Maintenance

12.1 Viewing System Information

12.1.1 Viewing Device Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Device Info** tab to enter the Device Information menu to view the device name, model, serial No. , firmware version and encoding version, as shown in Figure 12. 1.

Device Name	Embedded Net DVR
Model	
Serial No.	XXXXXXXXXXXXXXXXXXXX
Firmware Version	Vx.x.x, Build xxxxxx
Encoding Version	Vx.x, Build xxxxxx

Figure 12. 1 Device Information Interface

12.1.2 Viewing Camera Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Camera** tab to enter the Camera Information menu to view the status of each camera, as shown in Figure 12. 2.

Camera ...	Camera Name	Status	Motion Detection	Tamper-proof	Video Loss
A1	Camera 01	Enabled	Used	Not used	Not used
A2	Camera 02	Enabled	Not used	Not used	Not used
A3	Camera 03	Enabled	Not used	Not used	Not used
A4	Camera 04	Enabled	Not used	Not used	Not used

Figure 12. 2 Camera Information Interface

12.1.3 Viewing Record Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Record** tab to enter the Record Information menu to view the recording status encoding parameters of each camera, as shown in Figure 12. 3.

Camera ...	Recordin ...	Stream T ...	Frame R ...	Bitrate(Kbps)	Resolution	Record T ...	Encoding ...	Redunda ...
A1	Used	Video & ...	Full Frame	3726/4096	1280*720(HD...	Normal	Normal	No
A2	Used	Video & ...	Full Frame	135/4096	1280*720(HD...	Normal	Normal	No
A3	Used	Video & ...	Full Frame	150/4096	1280*720(HD...	Normal	Normal	No
A4	Used	Video & ...	Full Frame	135/4096	1280*720(HD...	Normal	Normal	No

Figure 12. 3 Record Information Interface

12.1.4 Viewing Alarm Information



This function is only supported by DS-7300HFHI-ST and DS-8100HFHI-ST series DVR.

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Alarm** tab to enter the Alarm Information menu to view the alarm information, as shown in Figure 12. 4.

No.	Alarm Name	Alarm Type	Alarm Status	Triggered Camera
A<-1		N C	Occur	A1~A2
A<-2		N C	Occur	
A<-3		N C	Occur	
A<-4		N C	Occur	
A->1		Not supported	Used	

Figure 12. 4 Alarm Information Interface

12.1.5 Viewing Network Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **Network** tab to enter the Network Information menu to view the network information, as shown in Figure 12. 5.

NIC	bond0
IPv4 Address	172.8.2.250
IPv4 Subnet Mask	255.255.255.0
IPv4 Default Gateway	172.8.2.1
IPv6 Address 1	fe80::240:48ff:fe4c:7ff7/64
IPv6 Address 2	
IPv6 Default Gateway	
Preferred DNS Server	192.0.0.200
Alternate DNS Server	
Enable DHCP	Disabled
Enable PPPOE	Disabled
PPPOE Address	
PPPOE Subnet Mask	
PPPOE Default Gateway	
Main NIC	LAN1

DS-8100HFHI-ST

NIC	LAN1
IPv4 Address	172.6.23.216
IPv4 Subnet Mask	255.255.255.0
IPv4 Default Gateway	172.6.23.1
IPv6 Address 1	fe80::8ee7:48ff:fe24:4214/64
IPv6 Address 2	
IPv6 Default Gateway	
Preferred DNS Server	0.0.0.0
Alternate DNS Server	0.0.0.0
Enable DHCP	Disabled
Enable PPPOE	Disabled
PPPOE Address	
PPPOE Subnet Mask	
PPPOE Default Gateway	

Other Models

Figure 12. 5 Network Information Interface

12.1.6 Viewing HDD Information

Steps:

1. Enter the System Information interface.
Menu > Maintenance > System Info
2. Click the **HDD** tab to enter the HDD Information menu to view the HDD status, free space, property, etc., as shown in Figure 12. 6.

Label	Status	Capacity	Free Space	Property	Type	Group
1	Normal	931.51GB	901GB	R/W	Local	1
17	Normal	20,448MB	19,456MB	Redundancy	NAS	1

Figure 12. 6 HDD Information Interface

12.2 Searching and Exporting Log Files

Purpose:

The operation, alarm, exception and information of the DVR can be stored in log files, which can be viewed and exported at any time.

Steps:

1. Enter the Log Search interface.

Menu > Maintenance > Log Search

The screenshot shows the 'Log Search' interface with the following search criteria:

- Start Time: 05-30-2012 00:00:00
- End Time: 05-30-2012 23:59:59
- Major Type: All
- Minor Type: All

Below the criteria is a table with the following columns: No., Major Type, Time, Minor Type, Parameter, Play, and Details.

Figure 12.7 Log Search Interface

2. Set the log search conditions to refine your search, including the Start Time, End Time, Major Type and Minor Type.
3. Click the **Search** button to start search log files.
4. The matched log files will be displayed on the list shown below.



Up to 2000 log files can be displayed each time.

The screenshot shows the 'Log Search Results' interface with a table of log entries. The table has the following columns: No., Major Type, Time, Minor Type, Parameter, Play, and Details.

No.	Major Type	Time	Minor Type	Parameter	Play	Details
2	Information	2012-11-13 08:44:44	Local HDD Information	N/A	—	✓
3	Operation	2012-11-13 08:44:46	Local Operation: Login	N/A	—	✓
4	Information	2012-11-13 08:44:46	HDD S.M.A.R.T.	N/A	—	✓
5	Information	2012-11-13 08:44:52	Start Recording	N/A	⏮	✓
6	Information	2012-11-13 08:44:52	Start Recording	N/A	⏮	✓
7	Information	2012-11-13 08:44:52	Start Recording	N/A	⏮	✓
8	Information	2012-11-13 08:44:52	Start Recording	N/A	⏮	✓
9	Operation	2012-11-13 08:45:28	Remote Operation: L...	N/A	—	✓
10	Operation	2012-11-13 08:45:28	Remote Operation: Int... Network	N/A	—	✓
11	Operation	2012-11-13 08:45:29	Remote Operation: AI...	N/A	—	✓
12	Alarm	2012-11-13 08:47:13	Start Motion Detection	N/A	⏮	✓
13	Alarm	2012-11-13 08:47:20	Stop Motion Detection	N/A	⏮	✓
14	Alarm	2012-11-13 08:55:42	Start Motion Detection	N/A	⏮	✓

Total: 221 P: 1/3

Figure 12.8 Log Search Results

5. You can click the button of each log or double-click it to view its detailed information, as shown in Figure 12.9. And you can also click the button to view the related video files if available.

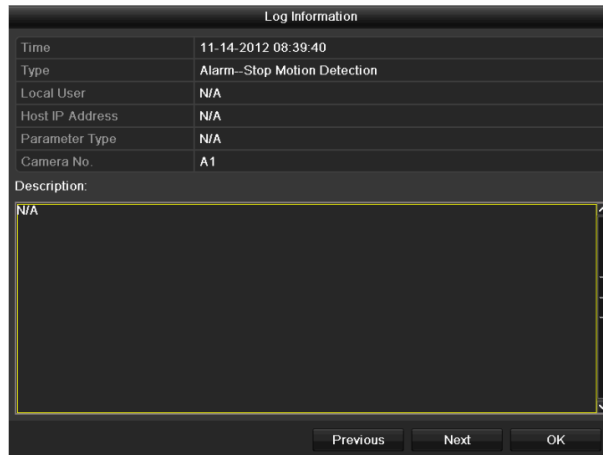


Figure 12. 9 Log Details

6. If you want to export the log files, click the **Export** button to enter the Export menu, as shown in Figure 12. 10.



Figure 12. 10 Export Log Files

7. Select the backup device from the dropdown list of **Device Name**.
8. Click the **Export** to export the log files to the selected backup device.

You can click the **New Folder** button to create new folder in the backup device, or click the **Format** button to format the backup device before log export.



- Please connect the backup device to DVR before operating log export.
- The log files exported to the backup device are named by exporting time, e.g.,
20110514124841logBack.txt.

12.3 Importing/Exporting Configuration Files

Purpose:

The configuration files of the DVR can be exported to local device for backup; and the configuration files of one DVR can be imported to multiple DVR devices if they are to be configured with the same parameters.

Steps:

1. Enter the Import/Export Configuration File interface.

Menu > Maintenance > Import/Export



Figure 12. 11 Import/Export Config File

2. Click the **Export** button to export configuration files to the selected local backup device.
 3. To import a configuration file, select the file from the selected backup device and click the **Import** button.
- After the import process is completed, you must reboot the DVR.



After having finished the import of configuration files, the device will reboot automatically.

12.4 Upgrading System

Purpose:

The firmware on your DVR can be upgraded by local backup device or remote FTP server.

12.4.1 Upgrading by Local Backup Device

Steps:

1. Connect your DVR with a local backup device where the update firmware file is located.
2. Enter the Upgrade interface.
Menu > Maintenance > Upgrade
3. Click the **Local Upgrade** tab to enter the local upgrade menu, as shown in Figure 12. 12.

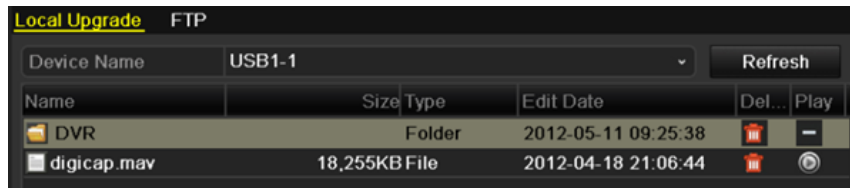


Figure 12. 12 Local Upgrade Interface

4. Select the update file from the backup device.
5. Click the **Upgrade** button to start upgrading.
6. After the upgrading is complete, reboot the DVR to activate the new firmware.

12.4.2 Upgrading by FTP

Before you start:

Configure PC (running FTP server) and DVR to the same Local Area Network. Run the 3rd-party TFTP software on the PC and copy the firmware into the root directory of TFTP.

Steps:

1. Enter the Upgrade interface.
Menu > Maintenance > Upgrade
2. Click the **FTP** tab to enter the local upgrade interface, as shown in Figure 12. 13.

 


Figure 12. 13 FTP Upgrade Interface

3. Enter the FTP Server Address in the text field.
4. Click the **Upgrade** button to start upgrading.
5. After the upgrading is complete, reboot the DVR to activate the new firmware.

12.5 Restoring Default Settings

Steps:

1. Enter the Default interface.

Menu > Maintenance > Default

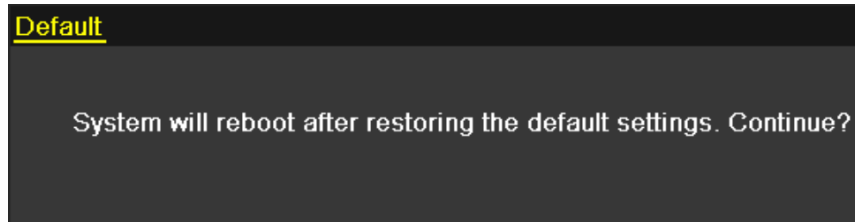


Figure 12. 14 Restore Factory Default

2. Click the **OK** button to restore the default settings.



Except the network parameters (including IP address, subnet mask, gateway, MTU, default route and server port), all other parameters of the device will be restored to factory default settings.

Chapter 13 Others

13.1 Configuring General Settings

Purpose:

You can configure the output resolution, system time, mouse pointer speed, etc.

Steps:

1. Enter the General Settings interface.

Menu > Configuration > General

2. Select the **General** tab.

Language	English	▼
CVBS Output Standard	NTSC	▼
Resolution	1024*768/60HZ	▼
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore	▼
Date Format	MM-DD-YYYY	▼
System Date	07-30-2013	📅
System Time	15:23:07	🕒
Mouse Pointer Speed	<input type="range"/>	
Enable Wizard	<input type="checkbox"/>	
Enable ID Authentication	<input type="checkbox"/>	

DS-7300HFHI-ST and DS-8100HFHI-ST

Language	English	▼
Resolution	1024*768/60HZ	▼
Time Zone	(GMT+08:00) Beijing, Urumqi, Singapore	▼
Date Format	MM-DD-YYYY	▼
System Date	07-30-2013	📅
System Time	15:23:07	🕒
Mouse Pointer Speed	<input type="range"/>	
Enable Wizard	<input type="checkbox"/>	
Enable ID Authentication	<input type="checkbox"/>	

Other Models

Figure 13. 1 General Settings Interface

3. Configure the following settings:

- **Language:** The default language used is *English*.
- **CVBS Output Standard:** Select the CVBS output standard to NTSC or PAL, which must be the same with the video input standard (for DS-7300HFHI-ST and DS-8100HFHI-ST only).
- **Resolution:** Select the output resolution, which must be the same with the resolution of the monitor screen.
- **Time Zone:** Select the time zone.
- **Date Format:** Select the date format.
- **System Date:** Select the system date.
- **System Time:** Select the system time.
- **Mouse Pointer Speed:** Set the speed of mouse pointer; 4 levels are configurable.
- **Enable Wizard:** Enable/disable the Wizard when the device starts up.
- **Enable ID Authentication:** Enable/disable the use of the login password.

4. Click the **Apply** button to save the settings.

13.2 Configuring DST Settings

Steps:

1. Enter the General Settings interface.

Menu > Configuration > General

2. Choose **DST Settings** tab.



General			DST Settings			More Settings		
<input checked="" type="checkbox"/> Auto DST Adjustment								
Enable DST			<input checked="" type="checkbox"/>					
From	Apr	1st	Sun	2	:	00		
To	Oct	last	Sun	2	:	00		
DST Bias	60 Minutes							

Figure 13. 2 DST Settings Interface

You can check the checkbox before the **Auto DST Adjustment** item.

Or you can manually check the **Enable DST** checkbox, and then you choose the date of the DST period.

13.3 Configuring More Settings

Steps:

1. Enter the General Settings interface.

Menu > Configuration > General

2. Click the **More Settings** tab to enter the More Settings interface, as shown in Figure 13. 3.

Device Name	Embedded Net DVR
Device No.	255
CVBS Output Brightness	<input type="range"/>
Operation Timeout	Never
Menu Output Mode	Auto

DS-7300HFHI-ST and DS-8100HFH-ST

Device Name	Embedded Net DVR
Device No.	255
Operation Timeout	Never

Other Models

Figure 13. 3 More Settings Interface

3. Configure the following settings:

- **Device Name:** Edit the name of DVR.
- **Device No.:** Edit the serial number of DVR. The Device No. can be set in the range of 1~255, and the default No. is 255.
- **CVBS Output Brightness:** Adjust the video output brightness.
- **Operation Timeout:** Set timeout time for menu inactivity. E.g., when the timeout time is set to 5 *Minutes*, then the system will exit from the current operation menu to live view screen after 5 minutes of menu inactivity.
- **Menu Output Mode:** You can choose the menu display on different video output. There are auto, HDMI/VGA and Main CVBS selectable.

4. Click the **Apply** button to save the settings.

13.4 Managing User Accounts

Purpose:


There is a default account in the DVR: *Administrator*. The *Administrator* user name is *admin* and the password is *12345*. The *Administrator* has the permission to add and delete user and configure user parameters.

13.4.1 Adding a User

Steps:

1. Enter the User Management interface.


Menu > Configuration > User

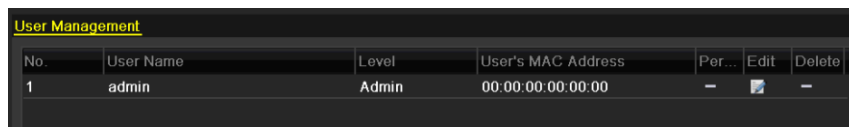

No.	User Name	Level	User's MAC Address	Per...	Edit	Delete
1	admin	Admin	00:00:00:00:00:00	-		-

Figure 13. 4 User Management Interface

2. Click the **Add** button to enter the Add User interface.

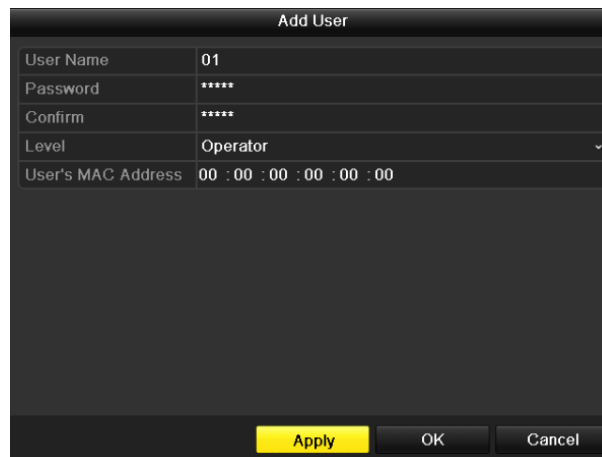

Add User	
User Name	01
Password	*****
Confirm	*****
Level	Operator
User's MAC Address	00 : 00 : 00 : 00 : 00 : 00
<div> Apply OK Cancel </div>	

Figure 13. 5 Add User Menu


3. Enter the information for new user, including **User Name**, **Password**, **Level** and **User's MAC Address**.

Level: Set the user level to Operator or Guest. Different user levels have different operating permission.

 - **Operator:** The *Operator* user level has permission of Local Log Search in Local Configuration, Remote Log Search and Two-way Audio in Remote Configuration and all operating permission in Camera Configuration.
 - **Guest:** The *Guest* user has permission of Local Log Search in Local Configuration, Remote Log Search in Remote Configuration and only has the local/remote playback in the Camera Configuration.


User's MAC Address: The MAC address of the remote PC which logs onto the DVR. If it is configured and enabled, it only allows the remote user with this MAC address to access the DVR.
4. Click the **OK** button to save the settings and go back to the User Management interface. The added new user

will be displayed on the list, as shown in Figure 13. 6.

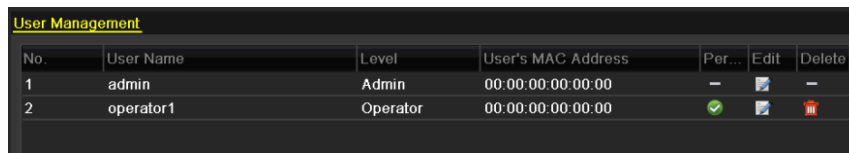

No.	User Name	Level	User's MAC Address	Per...	Edit	Delete
1	admin	Admin	00:00:00:00:00:00	—		—
2	operator1	Operator	00:00:00:00:00:00			

Figure 13. 6 Added User Listed in User Management Interface

5. Select the user from the list and then click the  button to enter the Permission settings interface, as shown in Figure 13. 7.

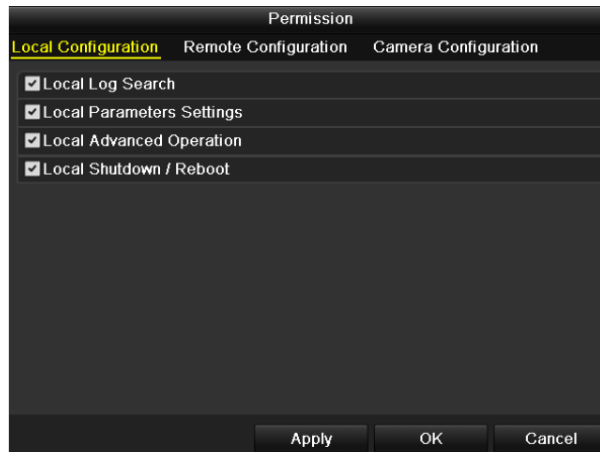


Figure 13. 7 User Permission Settings Interface

6. Set the operating permission of Local Configuration, Remote Configuration and Camera Configuration for the user.

Local Configuration

- Local Log Search: Searching and viewing logs and system information of DVR.
- Local Parameters Settings: Configuring parameters, restoring factory default parameters and importing/exporting configuration files.
- Local Advanced Operation: Operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- Local Shutdown Reboot: Shutting down or rebooting the DVR.

Remote Configuration

- Remote Log Search: Remotely viewing logs that are saved on the DVR.
- Remote Parameters Settings: Remotely configuring parameters, restoring factory default parameters and importing/exporting configuration files.
- Remote Serial Port Control: Configuring settings for RS-232 and RS-485 ports.
- Remote Video Output Control: Sending remote button control signal.
- Two-way Audio: Realizing two-way radio between the remote client and the DVR.
- Remote Alarm Control: Remotely arming (notify alarm and exception message to the remote client) and controlling the alarm output.
- Remote Advanced Operation: Remotely operating HDD management (initializing HDD, setting HDD property), upgrading system firmware, clearing I/O alarm output.
- Remote Shutdown/Reboot: Remotely shutting down or rebooting the DVR.

Camera Configuration

- Remote Live View: Remotely viewing live video of the selected camera(s).

- Local Manual Operation: Locally starting/stopping manual recording and alarm output of the selected camera(s).
 - Remote Manual Operation: Remotely starting/stopping manual recording and alarm output of the selected camera(s).
 - Local Playback: Locally playing back recorded files of the selected camera(s).
 - Remote Playback: Remotely playing back recorded files of the selected camera(s).
 - Local PTZ Control: Locally controlling PTZ movement of the selected camera(s).
 - Remote PTZ Control: Remotely controlling PTZ movement of the selected camera(s).
 - Local Video Export: Locally exporting recorded files of the selected camera(s).
7. Click the **OK** button to save the settings and exit interface.



Only the *admin* user account has the permission of restoring factory default parameters.

13.4.2 Deleting a User

Steps:

1. Enter the User Management interface.
Menu > Configuration > User
2. Select the user to be deleted from the list, as shown in Figure 13. 8.

User Management						
No.	User Name	Level	User's MAC Address	Per...	Edit	Delete
1	admin	Admin	00:00:00:00:00:00	—		—
2	operator1	Operator	00:00:00:00:00:00			

Figure 13. 8 Delete a User

3. Click the icon to delete the selected user.

13.4.3 Editing a User

Steps:

1. Enter the User Management interface.
Menu > Configuration > User
2. Select the user to be edited from the list, as shown in Figure 13. 9.

User Management						
No.	User Name	Level	User's MAC Address	Per...	Edit	Delete
1	admin	Admin	00:00:00:00:00:00	—		—
2	operator1	Operator	00:00:00:00:00:00			

Figure 13. 9 Edit a User

3. Click the icon to enter the Edit User interface, as shown in Figure 13. 10 and Figure 13. 11.

Edit User	
User Name	operator1
Change Password	<input checked="" type="checkbox"/>
Password	
Confirm	
Level	Operator
User's MAC Address	00 :00 :00 :00 :00 :00

Apply OK Cancel

Figure 13. 10 Edit User Interface-operator and guest

Edit User	
User Name	admin
Old Password	
Change Password	<input type="checkbox"/>
Password	
Confirm	
User's MAC Address	00 :00 :00 :00 :00 :00

Apply OK Cancel

Figure 13. 11 Edit User Interface-admin

4. Edit the parameters.

- **Operator and Guest**

You can edit the user information, including user name, password, permission level and MAC address.

Check the checkbox of **Change Password** if you want to change the password, and input the new one in the text field of **Password** and **Confirm**.

- **Admin**

You are only allowed to edit password and MAC address. Check the checkbox of **Change Password** if you want to change the password, and the input the correct old password, and the new one in the text field of **Password** and **Confirm**.

5. Click the **OK** button to save the settings and exit the interface.

13.5 Logging out/Shutting down/Rebooting Device

Steps:

1. Enter the Shutdown interface.

Menu > Shutdown

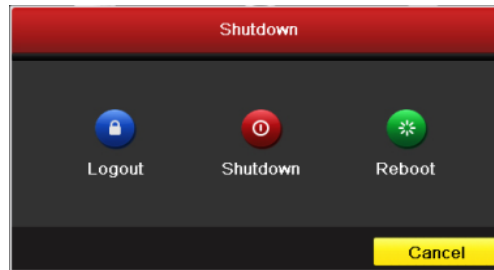


Figure 13. 12 Shutdown Menu

2. Click the **Logout** button to log out, or
Click the **Shutdown** button to shut down the device, or
Click the **Reboot** button to reboot the device.



After you have logged out the system, menu operation on the screen is invalid. It is required a user name and password to login the system.

Chapter 14 Appendix

Glossary

- **Dual Stream:** Dual stream is a technology used to record high resolution video locally while transmitting a lower resolution stream over the network. The two streams are generated by the DVR, with the main stream having a maximum resolution of 1080P and the sub-stream having a maximum resolution of CIF.
- **DVR:** Acronym for Digital Video Recorder. A DVR is device that is able to accept video signals from analog cameras, compress the signal and store it on its hard drives.
- **HDD:** Acronym for Hard Disk Drive. A storage medium which stores digitally encoded data on platters with magnetic surfaces.
- **DHCP:** Dynamic Host Configuration Protocol (DHCP) is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
- **HTTP:** Acronym for Hypertext Transfer Protocol. A protocol to transfer hypertext request and information between servers and browsers over a network
- **PPPoE:** PPPoE, Point-to-Point Protocol over Ethernet, is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.
- **DDNS:** Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
- **Hybrid DVR:** A hybrid DVR is a combination of a DVR and NVR.
- **NTP:** Acronym for Network Time Protocol. A protocol designed to synchronize the clocks of computers over a network.
- **NTSC:** Acronym for National Television System Committee. NTSC is an analog television standard used in such countries as the United States and Japan. Each frame of an NTSC signal contains 525 scan lines at 60Hz.
- **NVR:** Acronym for Network Video Recorder. An NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras, IP Domes and other DVRs.
- **PAL:** Acronym for Phase Alternating Line. PAL is also another video standard used in broadcast televisions systems in large parts of the world. PAL signal contains 625 scan lines at 50Hz.
- **PTZ:** Acronym for Pan, Tilt, Zoom. PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.
- **USB:** Acronym for Universal Serial Bus. USB is a plug-and-play serial bus standard to interface devices to a host computer.

Troubleshooting

- **No image displayed on the monitor after the device is starting up normally.**

Possible Reasons:

- No VGA or HDMI connections.
- Connection cable is damaged.
- Input mode of the monitor is incorrect.

Steps:

1. Verify the device is connected with the monitor via HDMI or VGA cable.
If not, please connect the device with the monitor and reboot.
2. Verify the connection cable is good.
If there is still no image display on the monitor after rebooting, please check if the connection cable is good, and change a cable to connect again.
3. Verify Input mode of the monitor is correct.
Please check the input mode of the monitor matches with the output mode of the device (e.g. if the output mode of DVR is HDMI output, then the input mode of monitor must be the HDMI input). And if not, please modify the input mode of monitor.
4. Check if the fault is solved by the step 1 to step 3.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.

- **There is a beep sound after a new bought device starts up.**

Possible Reasons:

- No HDD is installed in the device.
- The installed HDD has not been initialized.
- The installed HDD is not compatible with the device or is broken-down.

Steps:

1. Verify at least one HDD is installed in the device.
 - 1) If not, please install the compatible HDD.



Please refer to the “Quick Operation Guide” for the HDD installation steps.

- 2) If you do not want to install a HDD, select “Menu>Configuration > Exceptions”, and uncheck the Audible Warning checkbox of “HDD Error”.
2. Verify the HDD is initialized.
 - 1) Select “Menu>HDD>General”.
 - 2) If the status of the HDD is “Uninitialized”, please check the checkbox of corresponding HDD and click the “Init” button.
3. Verify the HDD is detected or is in good condition.
 - 1) Select “Menu>HDD>General”.
 - 2) If the HDD is not detected or the status is “Abnormal”, please replace the dedicated HDD according to the requirement.
4. Check if the fault is solved by the step 1 to step 3.
 - 1) If it is solved, finish the process.

2) If not, please contact the engineer from our company to do the further process.

- **Live view stuck when video outputs locally.**

Possible Reasons:

- a) The frame rate has not reached the real-time frame rate.

Steps:

1. Check the parameters of Main Stream (Normal) and Main Stream (Event).
Select “Menu > Record > Encoding > Record”, and set the resolution of Main Stream (Event) the same as the one of Main Stream (Normal).
2. Verify the frame rate is real-time frame rate.
Select “Menu > Record > Parameters > Record”, and set the Frame rate to Full Frame.
3. Check if the fault is solved by the above steps.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.

- **When using the device to get the live view audio, there is no sound or there is too much noise, or the volume is too low.**

Possible Reasons:

- a) Cable between the pickup and camera is not connected well; impedance mismatches or incompatible.
- b) The stream type is not set as “Video & Audio”.

Steps:

1. Verify the cable between the pickup and camera is connected well; impedance matches and compatible.
2. Verify the setting parameters are correct.
Select “Menu > Record > Parameters > Record”, and set the Stream Type as “Audio & Video”.
3. Check if the fault is solved by the above steps.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.

- **The image gets stuck when DVR is playing back by single or multi-channel cameras.**

Possible Reasons:

- a) The frame rate is not the real-time frame rate.
- b) The DVR supports up to 16-channel synchronize playback at the resolution of 4CIF, if you want a 16-channel synchronize playback at the resolution of 720p, the frame extracting may occur, which leads to a slight stuck.

Steps:

1. Verify the frame rate is real-time frame rate.
Select “Menu > Record > Parameters > Record”, and set the Frame Rate to “Full Frame”.
2. Verify the hardware can afford the playback.
Reduce the channel number of playback.
Select “Menu > Record > Encoding > Record”, and set the resolution and bitrate to a lower level.
3. Reduce the number of local playback channel.
Select “Menu > Playback”, and uncheck the checkbox of unnecessary channels.
4. Check if the fault is solved by the above steps.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.

- **No record file found in the device local HDD, and the prompt “No record file found” pops up when you search the record files.**

Possible Reasons:

- a) The time setting of system is incorrect.
- b) The search condition is incorrect.
- c) The HDD is error or not detected.

Steps:

1. Verify the system time setting is correct.
Select “Menu > Configuration > General > General”, and verify the “Device Time” is correct.
2. Verify the search condition is correct.
Select “Playback”, and verify the channel and time are correct.
3. Verify the HDD status is normal.
Select “Menu > HDD > General” to view the HDD status, and verify the HDD is detected and can be read and written normally.
4. Check if the fault is solved by the above steps.
If it is solved, finish the process.
If not, please contact the engineer from our company to do the further process.



HANGZHOU HIKVISION DIGITAL TECHNOLOGY CO.,LTD. | www.hikvision.com